




IN231000382V01_US

842-342V00

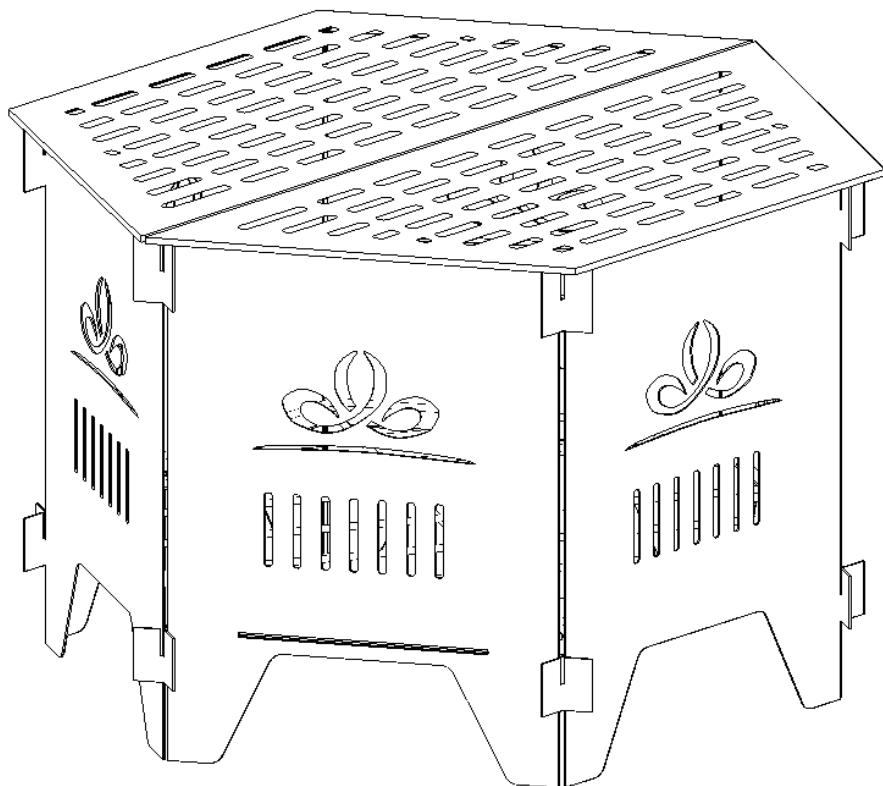

EN: ASSEMBLY INSTRUCTION

Always use in accordance with all applicable regional, provincial, federal, national regulations. Consult your local authority and/or fire department for current conditions such as burn ordinances or burn bans in your area.

No Materials can be burned that cause noxious/toxic odours, such as oil, grease, pressure treated wood, plastics, flammable liquids, yard waste, clothing and rags.

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY INSTRUCTIONS

SAFETY WARNINGS AND PRECAUTIONS:

Please read all instructions carefully and keep this manual safe for future reference.

- Keep at least 6 feet away from all other articles during use.
- This fire pit is intended for outdoor use only.
- To be used to burn wood logs only. **DO NOT** burn leaves, or other combustible materials in the fire pit.
- Not for use by children. Keep children and pets away from the fire pit.
- **CAUTION!** Please be careful when handling the fire pit, as the pit will be hot. Do not touch the hot fire pit with bare hands.
- Never leave the burning fire pit unattended, and always extinguish the fire completely before leaving the fire pit.
- Do not use near flammable or combustible objects or materials.
- When the fire pit is in use, the handle on the mesh screen can reach extreme temperatures that can cause serious injury to an unprotected hand. Use a poker or an appropriate heat resistant glove or pad when handling.
- Check local fire regulations and municipal by-laws for safe and legal use.
- Some parts may have sharp edges. Wear protective gloves if necessary.
- The metal may become extremely hot during and after use. Do not touch the metal or try to move the unit while hot.
- Keep children away from the unit while in use until the fire is extinguished and the metal has cooled.

- Do not use on wooden surfaces, decks, grass, near walls or flammable articles, or under overhead coverings.
- Use only the fuel type(s) specified in the instructions. Using other fuel types is dangerous and could cause injury.
- Do not overload the unit with fuel.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents above. If any part is missing or damaged, do not attempt to assemble the product. Return the product to the point of purchase.


Estimated Assembly Time: 10 minutes.

1. Warning

- The charcoal fire pit is HOT! DO NOT allow your children to play near it when fire pit is in use.
- To avoid destroying the finish, please handle the surface by using a soft cloth instead of your bare hands.
- Do not touch the surface of iron fire grate and the Fire pit while in use. It may cause burns.


2. Part List

| NO. | Parts | Qty. |
|-----|----------------|------|
| A | Top panel | 2 |
| B | Charcoal grill | 1 |
| C | Bottom panel | 1 |
| D | Side panel D | 3 |
| E | Side panel E | 3 |

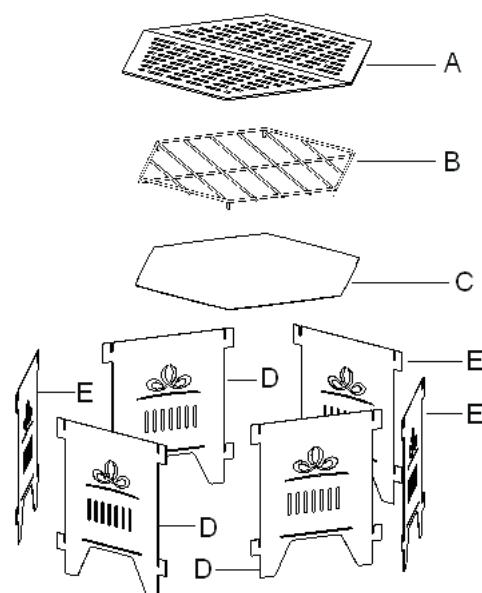



3. Assembly instruction

Step1. Insert the bottom panel (C) to the 3PCS Side panel (D). Then slide in 3pcs side panel(E) to the assembled body.

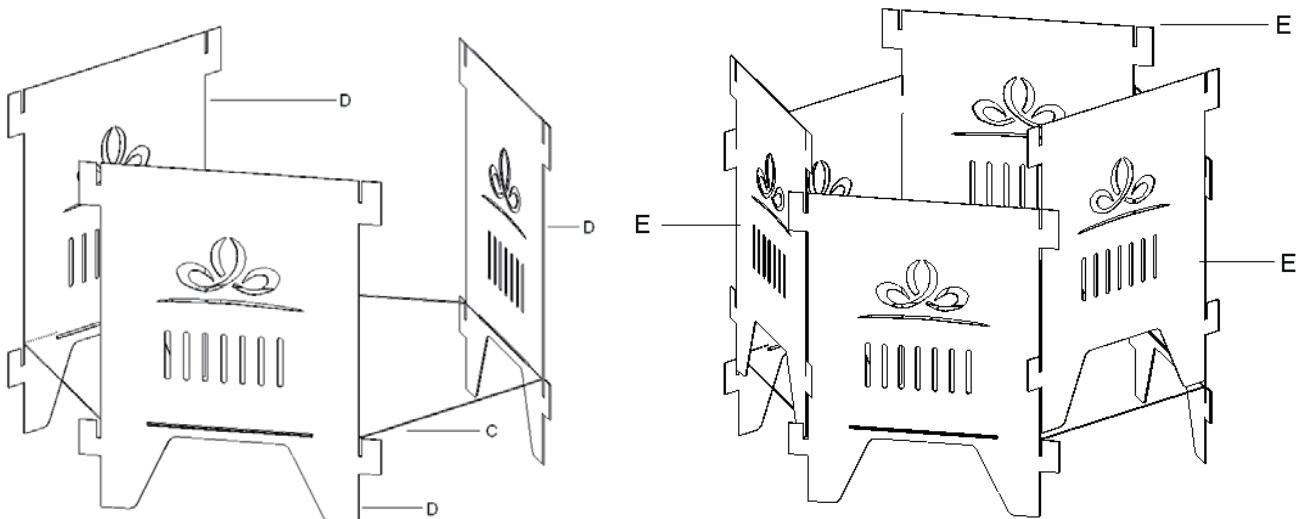

Step2. Put the charcoal grill(B) into the assembled fire pit. Put the cooking grill(A) on the top.
Now your fire pit is ready for use!

To extend the life of your fire pit, clean it after each use and cover to protect it.

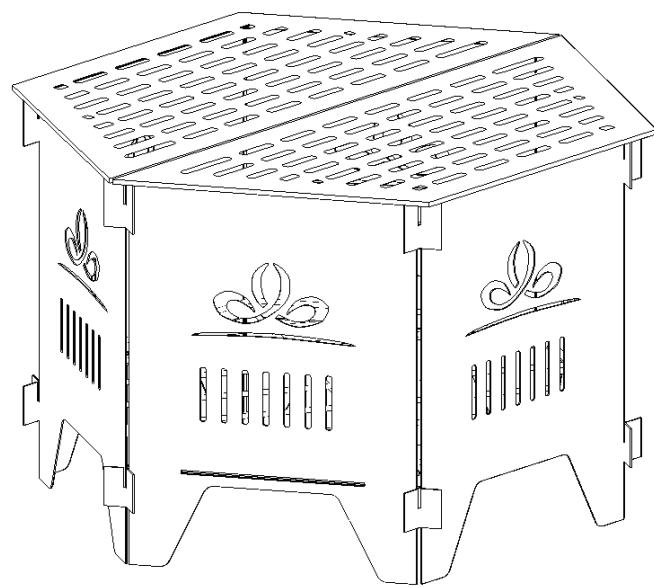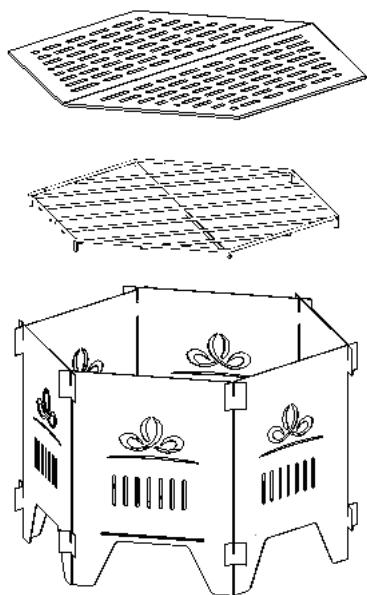

If you have any questions, please contact our customer care center.
Our contact details are below:

 001-877-644-9366
 customerservice@aosom.com

Imported by Aosom LLC
27150 SW Kinsman Rd Wilsonville, OR 97070 USA
MADE IN CHINA