

AIYAPLAY

IN221200550V04_UK

370-104V70



Assembly video please scan the QR code.

CHILDREN ELECTRIC MOTORCYCLE MANUAL

- Suitable age 37-95 months.
- This product should be assembled by adult.
- This instruction contains important safety information content, please keep it as a reference.
- Music, light
- Forward and backward



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY INSTRUCTION

About the products

Thank you for choosing our children electric motorcycle. We always keep pursuing being outstanding and designing comfortable and safe ride on car for children.

Please read this instruction carefully before use, it will tell you the right way of assembling and operating. To avoid incorrect operations damaging the product or injuring your children.



Please keep this instruction.


Specifications

Battery:	6V4AH
Main material:	PP
Suitable age:	37-95 months
Maximum weight:	25kg
Motor:	RS-380-6V,RPM14000 x1
Car Size:	86x 42x52cm
Package Size:	74x 30x35cm
Speed:	2-3km/h
Operation time:	1-2hours after charging about 8-12hours
Charge:	Input AC100-240V;Output DC6V500mA
Fuse:	Resettable Fuse

Parts List

Part Number	Part Name	Picture	Q'ty (pcs)	Part Number	Part Name	Picture	Q'ty (pcs)
1	Main body		1	2	Head stock		1
3	Front fender		1	4	Handle bar		1

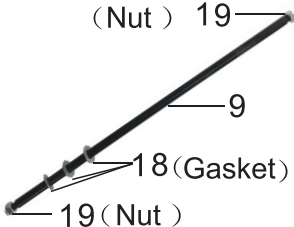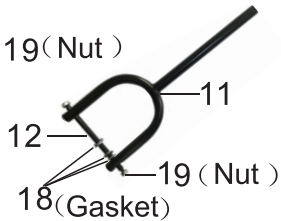Part Number	Part Name	Picture	Q'ty (pcs)	Part Number	Part Name	Picture	Q'ty (pcs)
5	Front wheel		1	6	Foot board		1
7	Right rear wheel (Plum)		1	8	Left rear wheel		1
	Rear axle		1	10	Rear cap		2
	Front fork		1	13	Charger		1
14	Wrench		2	15	License plate		1
16	Front cap		2	17	Screw		4

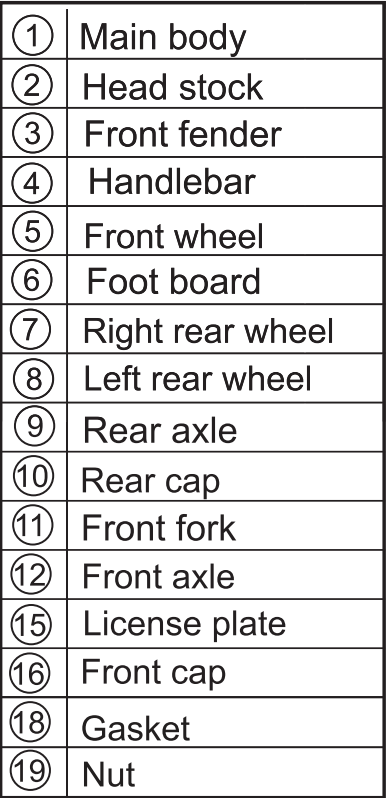


①	Main body
②	Head stock
③	Front fender
④	Handlebar
⑤	Front wheel
⑥	Foot board
⑦	Right rear wheel
⑧	Left rear wheel
⑨	Rear axle
⑩	Rear cap
⑪	Front fork
⑫	Front axle
⑮	License plate
⑯	Front cap
⑱	Gasket
⑲	Nut

Assembling

- The vehicle should be assembled by adult before use. It will take 30 minutes to complete.
- The small parts might cause choke, please keep away from the children.
- Please check the number of the parts before assembling, and keep the packaging bags away from the children in case of choke.

1. Front wheel installation

Figure take off the front axle, the fender set in the front fork pipe. Turn the front axle from left to right through the gasket, front fork tube, gasket, front wheel, gasket, front fork tube, gasket, and then put nuts at both ends of the front axle, and then tighten with a wrench. Finally buckle the front cap.

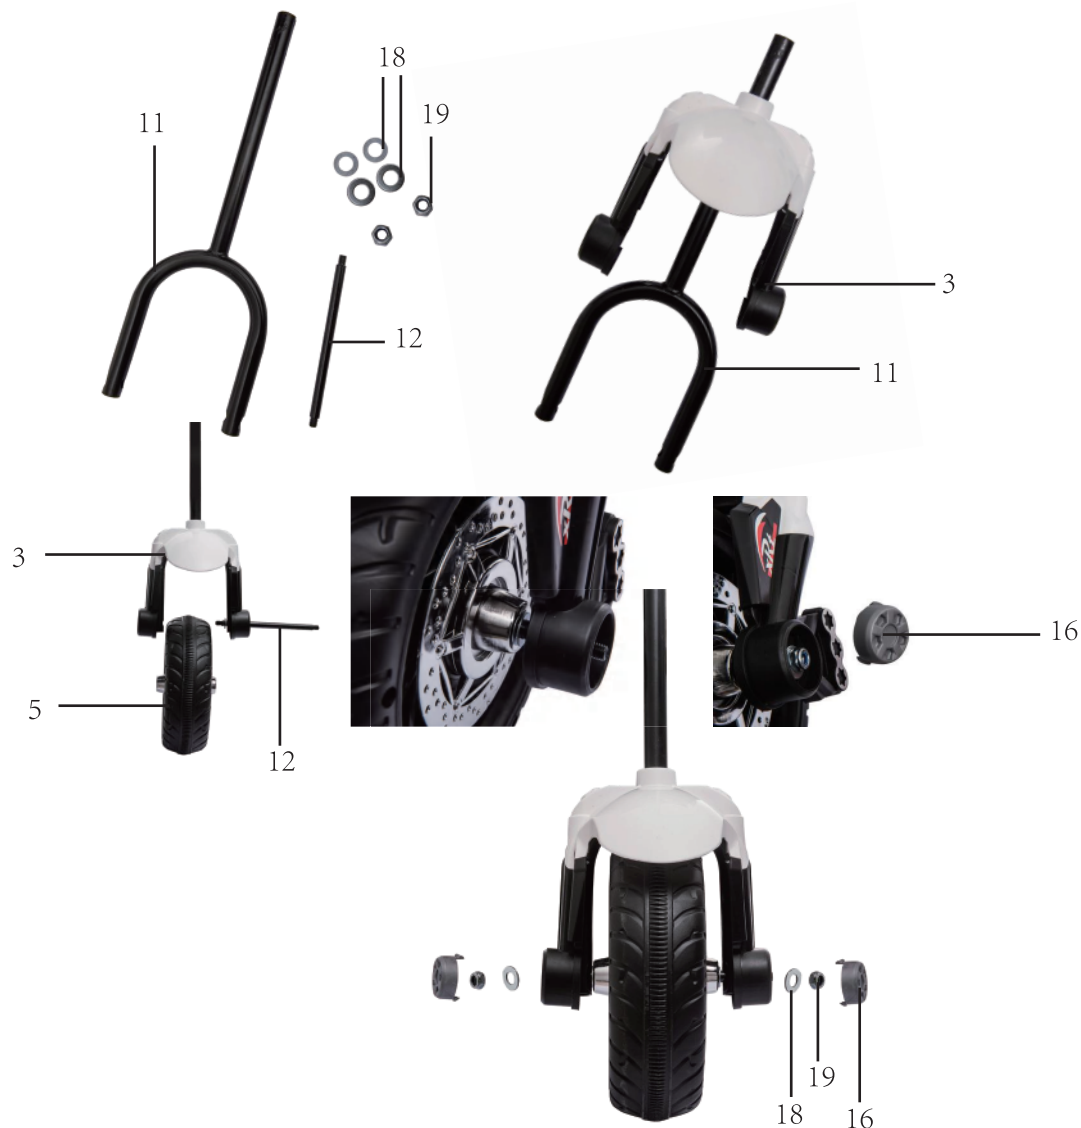

2.Handlebar installation

Place the front wheel assembly in the corresponding position of the car body , fit the handlebar and screw it.




3.Installation of head

Connect the wire terminal with the body, then clip the two feet of the head into the corresponding position of the body, finally fix with two screws.



4.Installation of rear wheel

Insert the rear axle through the gearbox axle hole from the side of the body into the axle hole of the body, place the wheels on the left and right side respectively, install the motor, gasket and wheels as shown in the picture, then lock them with nuts and put the rear wheel cap on the outside.

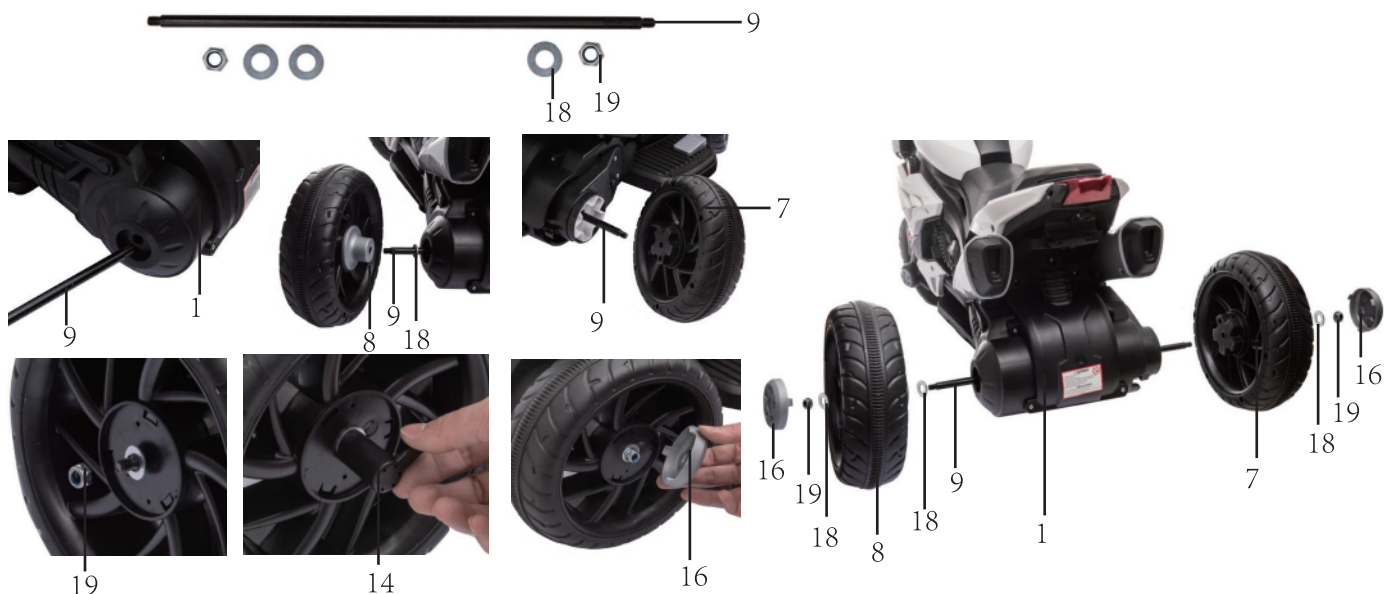

5.Pedal installation

Attach the pedals to the grooves in the body of the car, making sure they are in place and not easy to come off.



6.Installation of license plate

As shown in the picture, the license plate is inserted into the corresponding hole of the car body , and the license plate is fixed in the body with the self tapping screw.



7.Connection power supply

Open the seat cushion,connect the red power cord with the red end (positive extreme) on the battery ,install and fix the seat cushion.



Warnings

- CHOKING HAZARD - Small parts. Not suitable for children under 36 months. The product contains small parts, keep children away when assembling.
- ADULT ASSEMBLY ONLY.
- Always remove protective material and poly bags and dispose before assembly.
- WARNING: Protective equipment should be worn. Always wear shoes and sit in the seat when operating the vehicle.
- Only drive on level ground. Never use on the lawn.
- Keep your hands, hair, and clothes away from moving parts.
- Never leave child unattended. Direct adult supervision is required. Always keep child in view when child is in vehicle.
- To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water, always wear shoes, and never allow more than 1 rider.
- Never use in unsafe conditions such as snow, rain, loose dirt, mud, sand, or gravel, otherwise may result in an unexpected accident such as tipping over, and could damage the electrical system or battery.
- WARNING: Not to be used in traffic.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- WARNING: This toy is unsuitable for children under 36 months due to its maximum speed;
- WARNING: This toy has no brake.
- The electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
- Use only battery(ies) and charger specified by the manufacturer.

Charging notification

For the first use, please charge 10 hours, or will damage the battery.
Plug charger DC line into charge hole first, then plug charger into socket.
The product can not be played when it charging.
The product can not be charged for more than 18 hours each time.
It is normal that charger and battery warm (under 60°) during charging.
Do not charge if plug is wet, or will occur short-circuited.
Only use charger provided by manufacturer, or will damage charger and battery or occur short-circuited.
If don't used it for a long time, make sure to charge it once a month.

Function



Button function


- ① Charging hole
- ② Forward stop backward button
- ③ Horn button
- ④ Music button
- ⑤ Power button

Charging steps are as follows:

Step 1 : The charging hole is under the steering wheel.

Step 2 : Put the charger plug into the plug hole.

Step 3 : Connect the charger to the power socket.

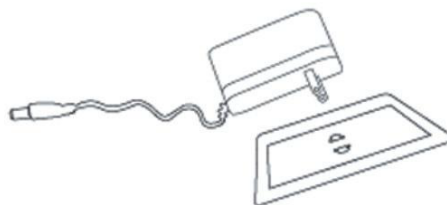

Warning: This product must be charged by adults only.

This product is useless during charging

BATTERY CHARGING WARNINGS

General Safety Warnings

- ⚠ "Read all instructions before using this appliance"
- ⚠ "This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved"
- ⚠ "Children shall not play with the appliance"
- ⚠ "Cleaning and user maintenance shall not be made by children without supervision"

Electrical Safety Warnings

- ⚠ "If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard"
- ⚠ "Do not use outdoors"
- ⚠ "Do not immerse in water or other liquids"
- ⚠ "Disconnect from supply when not in use"

Charger-Specific Warnings

- ⚠ "Use only with batteries specified by the manufacturer"
- ⚠ "Ensure correct polarity when connecting batteries"
- ⚠ "Do not charge damaged or leaking batteries"
- ⚠ "Remove batteries if appliance is not to be used for extended periods"
- ⚠ "Do not short-circuit the output terminals"

Maintenance and Service

- Check battery, charger and other spare parts regularly. If any problem, please fix it before playing.
- Use lubricating oil to care iron parts. Keep car away from fire and sunshine.
- Park it on the even place, not reversal or gradient.
- Park it indoor and cover it with waterproof cloth.
- Keep car away from fire, like stove or heater, or plastic may melt.
- Keep away from flammable things, or may occur fire accident.
- Charge it after use and must be done by adults only.
- If not used for a long time, please charge the battery once a month to ensure the normal use of the battery.
- Clean the vehicle with dry cloth only. Do not use chemical solvent to wipe plastic parts. Do not wash it with water or play it when raining or snowing.
- When stop using the motorcycle, cut off the power, turn all the buttons to “ stop” or “ off” .
- Do not use inconsistent fuse.
- Do not change the line system, structure and additional electric system of the vehicle by yourself, repair work must be done by career man or under professional supervision.

If you have any questions, please contact our customer care center.
Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS:

MH STAR UK Ltd

1 Northampton Cross Logistics Park

Northampton Cross Road

Northampton

NN4 9FH

Made in china

MALFUNCTION ELIMINATES:

Vehicle couldn't move	1,Check whether the power switch is off.
	2,Check whether the forward/backward switch is in the neutral gear (in the middle)
	3,Check the fuse is damaged,if so ,change it.
	4,Check whether the battery wires are connected well?
	5,Charger's dc in the charging socket will make it not work,if so ,take it out.
	6,Check whether stepped on the pedal.
	7,Check whether anything trapped in the wheels.
Vehicle move slowly	1,Check whether the battery be fully charged.
	2,Check whether anything trapped in the wheels.
	3,Check whether the vehicle is over loaded.
Vehicle cannot be charged	1,Check whether the charger or battery is damaged.
	2,Check whether the charger and the battery is well connected.
	3,The charger or battery if there is a loose connection.

WARNING

1,This note is to use illustrations to illustrate the operation of the product and product structure, there are a few differences, in kind prevail.

2,In order to improve the quality of the products, under the condition of without telling, we may make changes to the product part of the structure with the appearance, please understanding

