



EN

# Assembly Instructions

**WARNING: THIS TOY MUST BE ASSEMBLED BY AN ADULT.**

## LIST OF PARTS:

1.BODY	1 PC
2.WOODEN ROCKER	1 PC
3.WOODEN HANDLES	2 PCS
4.WASHER RINGS	4PCS
5.WING NUTS	4 PCS

 
## ASSEMBLY INSTRUCTIONS

STEP 1:INSERT THE ATTACHED SCREWS UNDER THE TOYS LEGS INTO THE HOLES ON THE WOODEN ROCKER.

STEP 2:PLACE THE WASHER RINGS AND WING NUTS ON THE SCREWS AND TIGHTEN BY HAND.

STEP 3:SCREW IN THE TWO HANDLES INTO THE HOLES LOCATED ON THE NECK OF THE TOYS.

## FOR EXAMPLE:

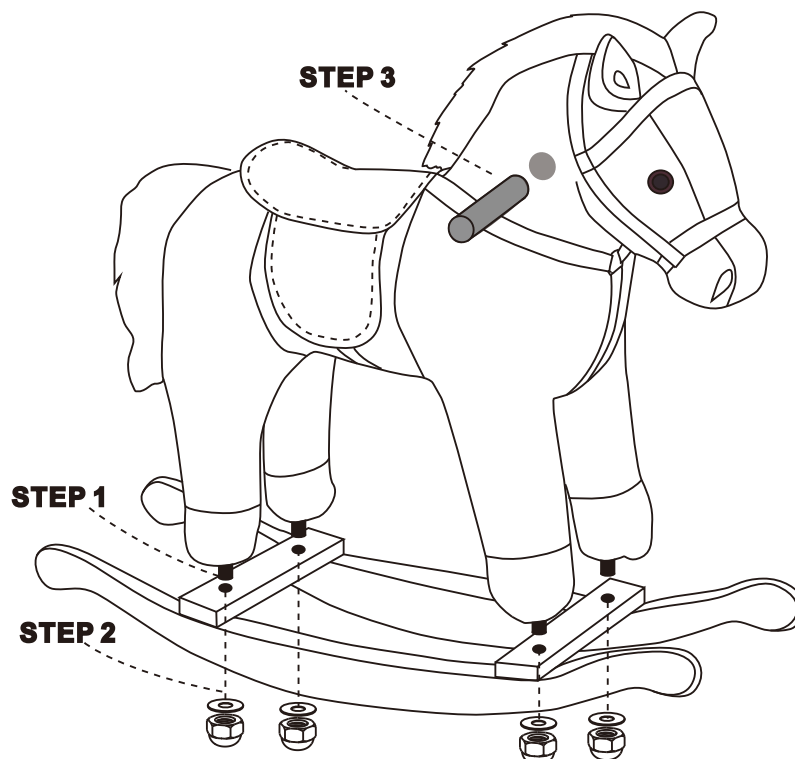


## **WARNING:**


1. CHOKING HAZARD—Small parts. Not suitable for children under 3 years.
2. Only allowed for adults to install, keep children away.
3. Keep away from fire! Keep away from water!
4. Place it on a flat and clean floor, Check all the parts are well connected before use.
5. Adult supervision is recommended remove all plastic fasteners and hang tags before giving toy to child. These attachments are not part of the toy.

## **MAINTENANCE & CARE**

 - A. Keep all instructions and parts relating to this product for future reference.
- B. Please wipe down with a dry or damp cloth. Do not wash the product in water because it will be damaged and create a safety hazard.

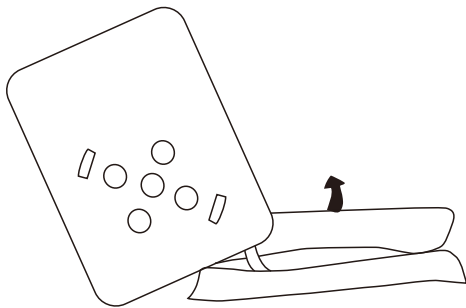

 Tear off the bottom velcro and take out the battery.

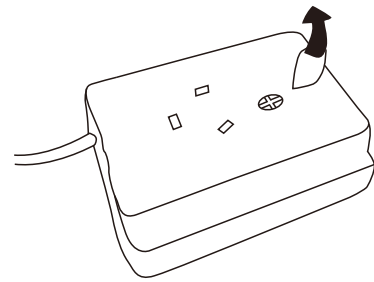

Remove the safe plastic on battery.



Press the mark on animal ear, then it will make noise.

Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

**\*Suitable for children of 3-6 years old.**

**\*Max weight: 45 kg.**



## **WARNING**

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2** hours.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



### **Battery**

- 1) Battery type: LR44\*3
- 2) Nominal Voltage: 4.5V

### **Instructions and manuals**

- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) Non-rechargeable batteries are not to be recharged.
- e) Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- f) Ensure the batteries are installed correctly according to polarity (+ and -).
- g) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- h) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- l) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.



FR

# Instructions de montage

**AVERTISSEMENT : CE JOUET DOIT ÊTRE MONTÉ PAR UN ADULTE.**

## LISTE DES PIÈCES:

1.CORPS	1 Pièce
2.BALANCIER EN BOIS	1 Pièce
3.POIGNÉES EN BOIS	2Pièces
4.RONDELLES D'ÉTANCHÉITÉ	4Pièces
5.ÉCROUS À AILETTES	4Pièces


## INSTRUCTIONS DE MONTAGE

ÉTAPE 1 : INSÉREZ LES VIS FIXÉES SOUS LES PIEDS DU JOUET DANS LES TROUS DU BALANCIER EN BOIS.

ÉTAPE 2 : PLACER LES RONDELLES ET LES ÉCROUS À AILETTES SUR LES VIS ET LES SERRER À LA MAIN.

ÉTAPE 3 : VISSEZ LES DEUX POIGNÉES DANS LES TROUS SITUÉS AU NIVEAU DU COU DU JOUET..
 
## ILLUSTRATION:

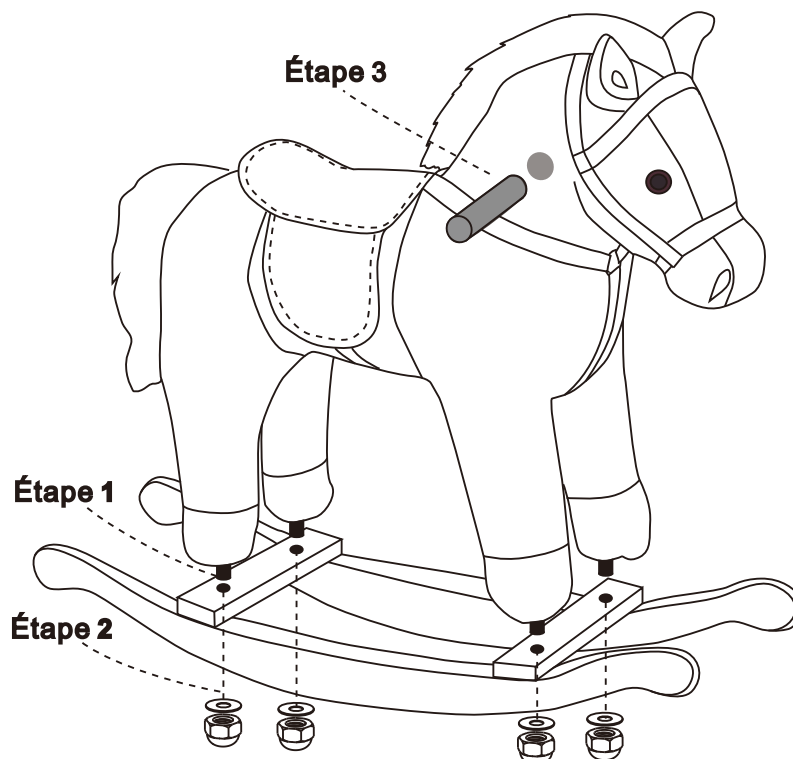


## **ATTENTION:**


1. DANGER D'ÉTOUFFEMENT—Petits éléments. Ne convient pas aux enfants de moins de 3 ans.
2. Installation par des adultes uniquement, tenir les enfants à l'écart.
3. Loin du feu ! Loin de l'eau !
4. Posez-le sur un sol plat et propre. Vérifiez que toutes les pièces sont bien connectées avant toute utilisation.
5. Placez-le sur un sol plat et propre. Vérifiez que toutes les piles sont bien connectées avant utilisation. Assurez-vous également que le tissu n'est pas endommagé pour éviter que l'enfant puisse avaler du coton.

## **ENTRETIEN ET MAINTENANCE**

 - A. Conservez toutes les instructions et les pièces relatives à ce produit pour pouvoir vous y référer ultérieurement.
- B. Veuillez essuyer avec un chiffon sec ou humide. Ne lavez pas le produit dans l'eau car cela pourrait l'endommager et constituer un risque de sécurité.

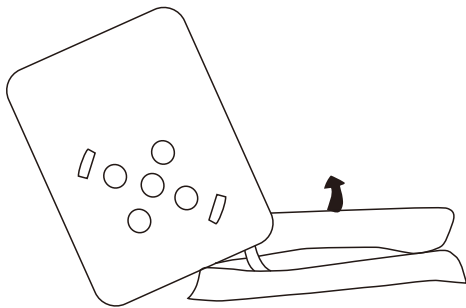

 Détachez le velcro du bas et retirez la batterie.

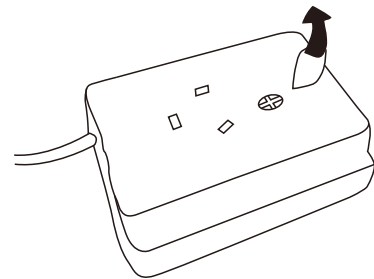

Retirez le plastique de sécurité de la batterie.



Appuyez sur la marque sur l'oreille de l'animal, puis il fera du bruit.

Éliminez immédiatement les piles usagées. Gardez les piles neuves et usagées hors de portée des enfants. Si vous pensez que des piles ont été avalées et qu'elles se trouvaient déjà dans le corps, consultez immédiatement un médecin.

**\*Adapté aux enfants de 3-6 ans.**

**\*Poids maximal : 45 kg.**



**US**

If you have any questions, please contact our customer care center.  
Our contact details are below:



001-877-644-9366



customerservice@aosom.com

Imported by Aosom LLC  
7777 Center Ave. Suite 430  
Huntington Beach, CA 92647-9998 USA  
MADE IN CHINA

**CA**

If you have any questions, please contact our customer care center.  
Our contact details are below:

Si vous avez la moindre question, veuillez contacter notre centre d'assistance à la clientèle.  
Nos coordonnées sont les suivantes:



416-792-6088



customerservice@aosom.ca

Imported by Aosom Canada Inc.  
7270 Woodbine Avenue, Unit 307, Markham, Ontario Canada  
L3R 4B9  
MADE IN CHINA

Importé par Aosom Canada Inc.  
7270 Woodbine Avenue, unité 307, Markham, Ontario Canada  
L3R 4B9  
FABRIQUÉ EN CHINE