



IN230500360V01_UK

820-354V70



ELECTRIC FIREPLACE HEATERS



EN_This product is only suitable for well insulated spaces or occasional use.

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

IMPORTANT INSTRUCTIONS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- **CAUTION** - Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.



- **WARNING:** In order to avoid overheating, do not cover the heater.
- The heater must not be located immediately below a socket-outlet.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not use this heater if it has been dropped;
- Do not use if there are visible signs of damage to the heater;
- Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.
- The product cannot be used outdoors.
- Any item covered or blocked the fireplace vent in any way is prohibited, or the fireplace will be dangerous caused by overheating.
- Furniture, curtains or flammable materials should ensure that 1 meter away from the fireplace.
- Cut off the power immediately if there is something wrong.
- Please turn off the power if it is not used in a long time.
- Please do not put the power cord on the front of the fireplace.

- Although the machine has reached safety standards, we do not recommend that it is used on multi-use carpet or carpet Long Hair.
- Dispose of the package carefully. Plastic packaging material may cause environmental pollution.
- The product must be connected to the ground.
- The fireplace must be used under the AC voltage rating.
- This product is fitted with a thermostatic room temperature control.

SPECIFICATION

Model	Voltage	Frequency	Power
YH-2001	220-240V	50Hz	1800W

Features of the product:

This is an educational flame electric fireplace. The theory of the product is to use a fan to flow the hot air heated by the heating elements in order to achieve the effect of indoor heating.

Scope of delivery

Immediately after unpacking please check that the delivery is complete and all product parts are in good condition.

1 Electric heater

1 User manual

4 Legs

 
16 Screws

TOOLS NEEDED FOR ASSEMBLY.

Phillips ("+") screwdriver (not included)


PARTS AND HARDWARE

Item	Description	Qty
A	Stove	1
B	Legs	4
C	Screws	16

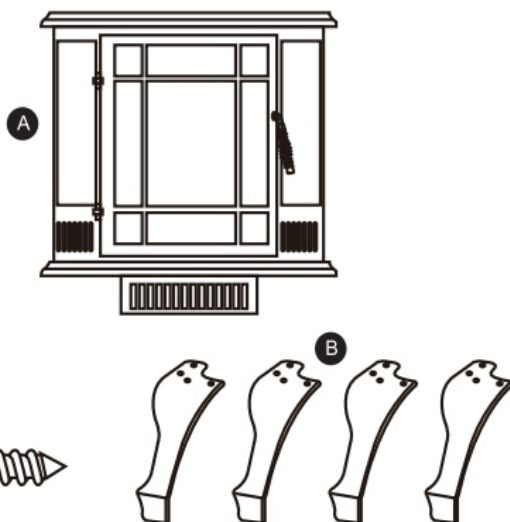



Assembly Instructions

 - 1) Carefully turn the STOVE (A) upside down and lay it on a clean soft surface.
- 2) Insert the TAB of one LEG (B) into the SLOT in the corner of the stove frame.
- 3) Thread two SCREWS (C) through the holes in the leg and into the stove frame.
Partially tighten the screws with a Phillips screwdriver.
- 4) Repeat Steps 2 and 3 for the other three legs.
- 5) Check the alignment and tighten all 8 screws securely with the screwdriver.
DO NOT over-tighten the screws.

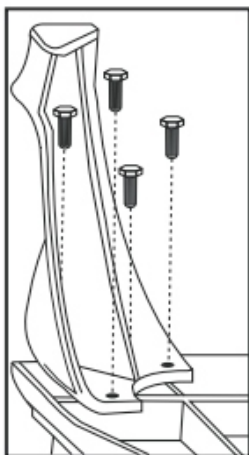

ALWAYS attach the feet before using! **NEVER** plug in or operate this unit if the feet are not securely attached!

  Control Panel Functions

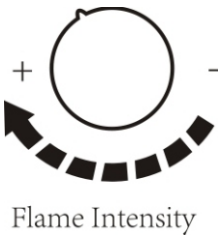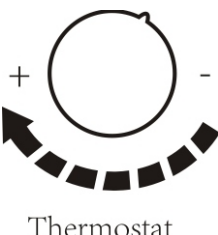CONTROL	OPERATION/FUNCTION
	ON: Press the power switch ON. The power indicator light will glow, and the flame effect will turn on. OFF: Press the power switch OFF. All functions will turn off.
	FLAME INTENSITY: This knob controls the brightness of the flame effect. Turn the knob to the right (High) to brighten the flame effect. Turn the knob to the left (Low) to dim the flame effect. (NOTE: The ON/OFF switch turns the flame effect on and off. The flame effect will not turn off unless the power is turned off.)
	THERMOSTAT: This knob controls the thermostat that turns the heat on and off to maintain the desired temperature. Turn the knob to the desired setting. The heat will turn on and off automatically to maintain the set temperature. (NOTE: If the room temperature is higher than the thermostat setting, the Thermostat heater will not turn on.)
NOTICE	When the heat function is used for the first time, a slight odor may be present. This is normal and should not occur again unless the heater is not used for an extended period of time.

Overheating safe device

 
If the heater stops working, turn the heater off and inspect the blockage of inlet or outlet. Disconnect the plug and wait at least 10 minutes for the protection system to reset before attempting to restart the heater. If the safe device still switches the heater off and makes the heater fail to operate, take the heater to your nearest service center for examination or repair.

Attention: before restarting the heater, the plug must be disconnected for at least 10 minutes

Cleaning

1. Always disconnect the appliance from the main supply before cleaning.
2. Clean the outside of the heater by wiping with a damp or dry cloth.
3. Do not use petroleum, any other detergent or chemical solvent to clean the heater.
4. When the heater is not used for a long time, it should be protected from dust and stored in a clean dry place.

Disposal

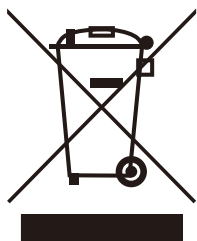

Environmental Protection

Waste electrical production should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

UK

If you have any questions, please contact our customer care center.

Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS:

MH STAR UK Ltd

1 Northampton Cross Logistics Park

Northampton Cross Road

Northampton

NN4 9FH

MADE IN CHINA

Information requirements for electric local space heaters

Model identifier(s):820-354V70(YH-2001)					
Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat output/room temperature control (select one)	
Nominal heat output	P_{nom}	2.0	kW	Single stage heat output and no room temperature control	[no]
Minimum heat output (indicative)	P_{min}	1.0	kW	Two or more manual stages, no room temperature control	[no]
Maximum continuous heat output	$P_{max.c}$	2.0	kW	With mechanic thermostat room temperature control	[yes]
Power consumption				With electronic room temperature control	[no]
In off mode	P_o	0.00	W	Electronic room temperature control plus day timer	[no]
In standby mode	P_{sm}	N/A	W	Electronic room temperature control plus week timer	[no]
In idle mode	P_{idle}	N/A	W	Other control options (multiple selections possible)	
In network standby	P_{nsm}	N/A	W	Room temperature control, with presence detection	[no]
				Room temperature control, with open window detection	[no]
Standby mode with display of information or status			[no]	Distance control option	[no]
Seasonal space heating energy efficiency in active mode	$\eta_{s,on}$	85.0	%	Adaptive start control	[no]
				Working time limitation	[no]
				Black bulb sensor	[no]
				Self-learning functionality	[no]
				Control accuracy	[no]
Contact details:	IMPORTER ADDRESS: MH STAR UK Ltd 1 Northampton Cross Logistics Park Northampton Cross Road Northampton NN4 9FH MADE IN CHINA				

