




IN241200084V04_UK

800-162V71



WATER KETTLE TOASTER SET

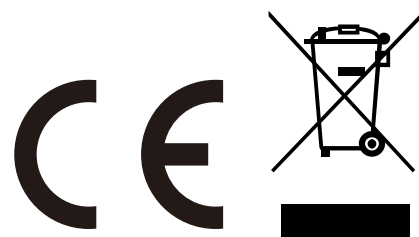

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

WATER KETTLE

SAFETY INSTRUCTIONS

General

- Please read these instructions carefully and keep for future reference.
- Follow all instructions when using this appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Repairs must be carried out by a qualified electrician. Never try to repair the appliance yourself.

Electricity and heat

- Before use, ensure the mains voltage matches the rating plate of the appliance.
- Make sure you always use an earthed wall socket to connect the appliance.
- Before moving the appliance or when not in use, remove the plug from the mains.
- Remove the plug from the wall socket by pulling the plug, not the power cord.
- Check the appliance's power cord regularly to make sure it is not damaged. Do not use the appliance if the power cord is damaged-it must be replaced by qualified personnel.
- Certain parts of the appliance may get hot - do not touch to prevent burning yourself.
- Ensure there is space on top and all sides of the appliance, allowing heat to escape and preventing the risk of fire. Keep this appliance away from flammable substances. Never cover this appliance.
- Make sure the appliance, power cord or plug do not touch hot surfaces, such as hobs and naked flames.
- Keep the appliance, power cord and plug away from water.

During use

- The appliance must not be immersed.

- **WARNING** : Avoid spillage on the connector.
- **WARNING** : Potential injury may be caused from misuse.
- The heating element surface is subject to residual heat after use.
- If the kettle is overfilled, boiling water may be ejected.
- The appliance is only to be used with the stand provided.
- **CAUTION**: To prevent damage to the appliance, do not use aggressive cleaning agents when cleaning. Use a soft cloth and a mild detergent.
- **CAUTION**: Do not use the appliance if the enclosure is damaged or has visible cracks.
- **CAUTION**: Do not operate the kettle on an inclined plane. Do not switch on the kettle if there is no water in the kettle. Do not move the kettle while it is switched on.



- **CAUTION** : Hot surfaces. Surfaces are liable to get hot during use.
- Regarding the instructions for details on how to clean the surfaces in contact with food, thanks to refer to the section "Cleaning and Maintenance".
- Never use the appliance outdoors.
- Place the appliance on a flat and stable surface.
- If not in use and before cleaning, ensure the plug is removed from the wall socket.
- Never allow the power cord to hang over the edge of the draining board or table.
- Make sure that your hands are dry before touching the appliance, power cord or plug.
- Never use the appliance in a humid room.
- Do not pick up the appliance if it falls into water. Remove the plug from the wall socket immediately-do not use the appliance again.
- Only use the base supplied with the jug kettle. Never use the base for other purposes.
- Remove the jug from the base, then fill with water from the tap. Never fill the jug above the 'max' level.
- Do not switch on the appliance before you have filled it with water. Fill only with cold water.
- The jug's lid must remain securely closed whilst the appliance is in use.
- Never open the lid when the water is still boiling.
- Use the appliance only to boil or heat water. Never use it for other liquids!
- Fill the jug kettle with at least 0.5 litres of water.
- Allow the appliance to cool to room temperature before storing.
- This appliance must not be used with an external timer or remote control.

OPERATION

The appliance is intended only for domestic use, not for professional use.

Feature

1. Top lid
2. Spout
3. Kettle body
4. Base
5. Handle
6. Water level indicator
7. On/off switch with pilot light



Before use for the first time

- Remove possible manufacturing residues by boiling three full kettles of water. Dispose this water.
- Tip: You can use vinegar or special descaling agents for the first time.

Use

1. Turn the jug, so the spout faces away from you.
2. Open the lid (1).
3. Fill the jug with the required quantity of water (at least 0.5 liters, and a maximum of 1.7 liters). Never fill the water boiler over the "max", otherwise the hot water can spill out.

ATTENTION: Be cautious-do not spill water on the base.

4. Open the lid.
5. Place the jug on the base, then insert the plug in the wall socket. Push down the ON/OFF switch. The ON/OFF pilot light will illuminate.
6. The jug kettle is now switched on - the water will begin to heat. The jug kettle switches off automatically a few seconds after the water has come to the boil. The on/off pilot light will turn off.
7. Remove the jug from the base by the handle and pour the water out.

Be cautious- do not touch the boiling water. it can cause serious burns.

8. If you want to heat water without boiling, you can switch off the kettle before boiling point.
9. When finished using, remove the plug from the wall socket.

Overheating safeguard

The jug kettle is fitted with an overheating safeguard. This will switch off the kettle if it is used without (sufficient) water. Allow the kettle to cool down for at least 10 minutes before using again.

CLEANING AND MAINTENANCE

- Remove the plug from the wall socket and allow the appliance to cool.
- Clean the kettle with a damp cloth. Never immerse the appliance in water. Never put the appliance in a dishwasher. Make sure the electrical connections do not get wet.
- If the inside of the kettle becomes severely discoloured, clean it with a damp cloth and a little bit of washing soda. After cleaning, rinse the jug thoroughly.

ATTENTION:

- **Never use corrosive or scouring cleaning agents or sharp objects (such as knives or hard brushes) to clean the appliance.**
- **Before cleaning, make sure the appliance is unplugged and has cooled down.**

DESCALING

- This appliance is equipped with an integral heating element, which prevents limescale. You do not need to descale this appliance.
- However, if you still want to descale this appliance:
 1. Remove the plug from the wall socket and allow the appliance to cool.
 2. The kettle is fitted with a descaling filter, which must be removed when cleaning.
 3. Fill the kettle with a vinegar solution to the maximum level, then boil.
 4. Leave the kettle with the vinegar solution to stand for a couple of hours.
 5. Empty the kettle, fill with clean water to the maximum level and boil. Empty the kettle. Repeat this process twice.
- **Never use ammonia or other products to descale the appliance. Only use a vinegar solution or special descaling agents, which is available from retailers.**

SPECIFICATION

Product: Water kettle

Model: 800-162V71

Power consumption: 2520-3000W

Mains Voltage: AC220-240V~ 50-60Hz

Off mode power	P_o	0.00	W
Standby mode power	P_{SB}	[N/A]	W
Power management function	[N/A]		
Time to enter automatically off mode	T_o	[N/A]	Min
Time to enter automatically standby mode	T_{SB}	[N/A]	Min

TOASTER**IMPORTANT INSTRUCTIONS**

- Please read these instructions before operating and keep for future reference.
- Children must be supervised when near the appliance.
- Always use the appliance on a dry and level surface.
- Do not use this appliance outdoors.
- Always unplug from the plug socket when not in use and before cleaning.
- Do not operate the appliance if it malfunctions or is damaged. Return to an authorised service engineer for repair. Special tools are required.
- Regularly check the supply cord, ensuring there is no damage. If any signs of damage are found, the appliance must be returned to an authorised service centre.
- Do not let the cord hang over the edge of a table or counter or touch hot surfaces. Allow the unit to cool before wrapping cord around base for storage.
- Surfaces get hot during use – do not touch to avoid scalding. Before storing or covering, ensure the appliance has cooled down completely.
- Keep this appliance away from hot gas, electric burners, heated ovens and open microwaves.
- Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
- When using this appliance, ensure there is enough space above and all sides of the appliance, so there is proper air circulation. Do not allow this appliance to touch curtains, wall coverings, clothing, cloths or other flammable materials during use. CAUTION is required on surfaces where heat may cause a problem – an insulated heat pad is recommended.
- This appliance is for household use.
- When using the toaster, ensure the slide out crumb tray is in place. The tray should be cleaned regularly – do not allow crumbs to build up.
- Do not use this appliance for food containing sugar, jam or preserves.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Never use the device unsupervised! Switch off the device whenever you are not using it, even if is only for a moment.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- The appliance must not be immersed.



- **CAUTION** : Hot surfaces. Surfaces are liable to get hot during use.
- Regarding the instructions for details on how to clean the surfaces in contact with food, thanks to refer to the section "Cleaning and Maintenance".
- The appliance must not be used with an external timer or separate remote control system.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.

WARNING:

Never attempt to extract Jammed toast, muffins, bagels or any other item with a knife or any other object – contact with live elements is an electrocution hazard.

Let the appliance cool down, unplug the toaster, then carefully remove the bread.

FEATURES OF TOASTER

1. Full-length crumb tray
2. Stop button with indicator light
3. Reheat button with indicator light
4. Defrost button with indicator light
5. Electronic variable browning control
6. High-lift bread release



OPERATION TOASTER

1. Insert the plug into a suitable mains supply socket and turn the power on.
2. Place two slices of bread, muffins or bagels into the bread slots.
3. Select the desired browning setting, from No.7 on the browning control knob (No.1-lightest, No.7-darkest). When using the toaster for the first time we suggest you toast on No.3. Different types of bread and personal preference may require a different browning setting.
4. Press the carriage control lever down until it clicks into place. Toasting cycle will automatically commence. Please note: if the toaster is not plugged in and switched on the carriage control lever will not click into place.

5. The toaster turns off when the desired toast color is achieved and automatically pops up the toast. The toasting process can be stopped at anytime by pressing the stop button.

TOASTING FROZEN BREAD:

Place the bread into the slots and select the desired browning setting. Press the carriage control lever down until it clicks into place, then press the frozen button.

CLEANING AND MAINTENANCE

- Your toaster comes with a removable crumb tray. This is a quick and convenient way to remove crumbs. Always ensure the toaster is unplugged and has cooled down before removing and emptying the crumb tray. Clean the tray with a damp cloth. Before putting the tray back in to the toaster, ensure it is completely dry.
- Use a stiff brush to remove any burnt-on crumbs.
- Wipe the outside of the toaster with a damp cloth.
- Do not use sharp objects or abrasive substances to clean the toaster.
- **Slide the crumb tray out of the toaster and remove the crumbs, wipe it with a clean, dry cloth and put it back in place. Clean the crumb tray after each use of the toaster. Make sure that crumbs do not accumulate in it. Otherwise, they could burst into flames.**

CAUTION

- To prevent an electric shock, disconnect from the mains before removing the cover.
- No user-serviceable parts inside.
- Refer servicing to qualified personnel.
- The appliance must not be used with an external timer or separate remote control system.

SPECIFICATION

Model : 800-162V71

Mains Voltage: 220-240V ~ 50-60Hz

Power consumption: 780-930W

Made In China



Off mode power	P_o	0.00	W
Standby mode power	P_{SB}	[N/A]	W
Power management function	[N/A]		
Time to enter automatically off mode	T_o	[N/A]	Min
Time to enter automatically standby mode	T_{SB}	[N/A]	Min

UK

If you have any questions, please contact our customer care center.

Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS:

MH STAR UK Ltd

1 Northampton Cross Logistics Park

Northampton Cross Road

Northampton

NN4 9FH

MADE IN CHINA

Aosom