



Kettle and Toaster Set



- Please read this manual carefully before use
- Our company reserves the final interpretation right of the instruction manual
- Please refer to the actual product for its appearance

CORDLESS KETTLE

SAFETY INSTRUCTIONS

General

- Please read these instructions carefully and retain them for reference.
- Use this appliance solely in accordance with these instructions.
- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Have any repairs carried out solely by a qualified electrician. Never try to repair the appliance yourself.

Electricity and heat

- Before use please verify that the mains voltage is the same as indicated on the rating plate of the appliance.
- Make sure that you always use an earthed wall socket to connect the appliance.
- Always remove the plug from the mains socket before moving the appliance and when the appliance is not in use.
- Remove the plug from the wall socket by pulling the plug, not the power cord.
- Check the appliance's power cord regularly to make sure it is not damaged. Do not use the appliance if the power cord is damaged. Have a damaged power cord replaced by a qualified repair service.
- Certain parts of the appliance may get hot. Do not touch these parts to prevent burning yourself.
- The appliance needs space to allow heat to escape, thereby preventing the risk of fire. Make sure that the appliance has sufficient space around it, and does not come in contact with flammable material. The appliance must not be covered.
- Make sure that the appliance, the power cord or the plug do not make contact with hot services, such as a hot hob or naked flame.
- Make sure that the appliance, the power cord and plug do not make contact with water.

During use

- Never use the appliance outdoors.
- Place the appliance on a flat, stable surface.
- Always remove the plug from the wall socket after use, and before cleaning the appliance.
- Never allow the power cord to hang over the edge of the draining board, worktop or table.
- Make sure that your hands are dry before touching the appliance, power cord or plug.

- Never use the appliance in a humid room.
- Never immerse the appliance, the plug or the power cord in water or other liquid.
- Do not pick up the appliance if it falls into water. Remove the plug from the wall socket immediately and do not use the appliance any more.
- Use solely the base supplied with the jug kettle. Never use the base for other purposes.
- Remove the jug from the base, and fill with water from the tap. Never fill the jug above the 'max' level.
- Do not switch on the appliance before you have filled it with water. Fill only with cold water.
- The jug's lid must remain securely closed whilst the appliance is in use.
- Never open the lid when the water is still boiling.
- Use the appliance only to boil or heat water. Never use it for other liquids!
- Fill the jug kettle with at least 0.5 litre of water.
- Allow the appliance to cool to room temperature before storage
- This appliance may not be used through an external timer or by means of a remote control.

OPERATION

The appliance is intended only for domestic use, not for professional use.

1. Spout
2. Base station
3. Lid
4. Unlocking for the lid
5. Handle
6. Water level
7. On/Off switch with indicator light



Before use for the first time

- Before first use, remove possible manufacturing process residues by boiling 3 full kettles of water. Dispose this water.
- **Tip:** You can use vinegar or special descaling agents for the first time.

Use

1. Turn the jug so that the spout faces away from you.
2. Pull up the lid handle (3).

3. Fill the jug with the required quantity of water (at least 0.5 litres, and a maximum of 1.7 litres). Never fill the water boiler over the "Max". Otherwise the hot water can spatter out of the base.

ATTENTION: Make sure that you do not spill any water on the base.

4. Pull up the lid handle to open the lid.
5. Place the jug on the base, and insert the plug in the wall socket. Push down the on/off switch. The on/off pilot light will illuminate.
6. The jug kettle is now switched on, and the water will now begin to heat. The jug kettle switches off automatically a few seconds after the water has come to the boil. The on/off pilot light will now extinguish.
7. Remove the jug from the base by the handle, and pour the water out.

ATTENTION: Be carefully you do not contact the hot water. It can cause serious burning wounds.

8. When you wish to heat the water without it coming to the boil you can switch off the jug kettle at any time you require.
9. Remove the plug from the wall socket when you have finished using the jug kettle.

Overheating safeguard

The jug kettle is fitted with an overheating safeguard. This will switch off the jug kettle if it is operated without (sufficient) water. Allow the jug kettle to cool down for at least 10 minutes before using it again.

CLEANING AND MAINTENANCE

- Remove the plug from the wall socket, and allow the appliance to cool.
- Clean the jug with a damp cloth. Never immerse the appliance in water. Never put the appliance in a dishwasher. Make sure that the electrical connections do not become damp.
- If the interior of the jug has become severely discoloured, then the best way to clean it is with a damp cloth and a little washing soda. After cleaning, rinse the jug very thoroughly.

ATTENTION:

- **Never use corrosive or scouring cleaning agents or sharp objects (such as knives or hard brushes) to clean the appliance.**
- **Before cleaning, make sure that the appliance is not connected to the power supply and that it has cooled down.**

DESCALING

- This appliance is equipped with an integral heating element, and consequently limescale will not be formed. Consequently you do not need to descale the appliance.
- However, if you nevertheless do wish to descale the appliance:
 1. Remove the plug from the wall socket, and allow the appliance to cool.
 2. The jug kettle is fitted with a descaling filter. This filter must be removed for cleaning.
 3. Fill the jug with a vinegar solution to the MAX level, and bring to the boil.
 4. Leave the jug with the vinegar solution to stand for a couple of hours.
 5. Empty the jug, fill with clean water to the MAX level, and bring to the boil. Empty the jug. Repeat this process twice.
- **Never use ammonia or other products to descale the appliance. These can be injurious to your health. Use solely a vinegar solution, or special descaling agents available from retailers.**

SPECIFICATION

Product: Cordless kettle
Model: 800-266V70
Power consumption: 1850-2200W
Voltage: 220V-240V~50/60Hz
Made In China



All images serve as illustrations only and do not always show exact representations of the device.

All rights reserved.

TOASTER**IMPORTANT INSTRUCTIONS**

1. Please read these instructions before operating and retain for future reference.
2. To protect against electrical hazard do not immerse any part of the appliance or cord in water or any other liquid.
3. Close supervision is necessary when the appliance is used near children.
4. Always use the appliance on a dry, level surface.
5. Do not use this appliance outdoors.
6. Always unplug from the plug socket when not in use and before cleaning.
7. Do not operate the appliance if damaged, after an appliance malfunctions or it has been damaged in any manner, return to an authorized service engineer for repair, because special purpose tools are required.
8. In the interest of safety, regular periodic close checks should be carried out on the supply cord to ensure no damage is evident. Should there be any signs that the cord is damaged in the slightest degree, the entire appliance should be returned to an authorized service engineer.
9. Do not let the cord hang over the edge of a table or counter or touch hot surfaces. Allow unit to cool before wrapping cord around base for storage.
10. Care must be taken not to touch any hot surfaces, do not store or cover the appliance until it has fully cooled down.
11. Do not place this appliance on or near a hot gas or electric burner, in or where it could touch a heated oven, or a microwave oven.
12. Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
13. Caution-bread may burn. When using this appliance, allow adequate air space above and on all sides for air circulation. Do not allow this appliance to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. CAUTION is required on surfaces where heat may cause a problem – an insulated heat pad is recommended.
14. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments
15. Do not use the toaster without the slide out crumb tray in place. The crumb tray should be cleaned regularly. Do not allow crumbs to build up in the tray.
16. Do not use this appliance with any foodstuff product containing sugar content or with products containing jam or preserves.

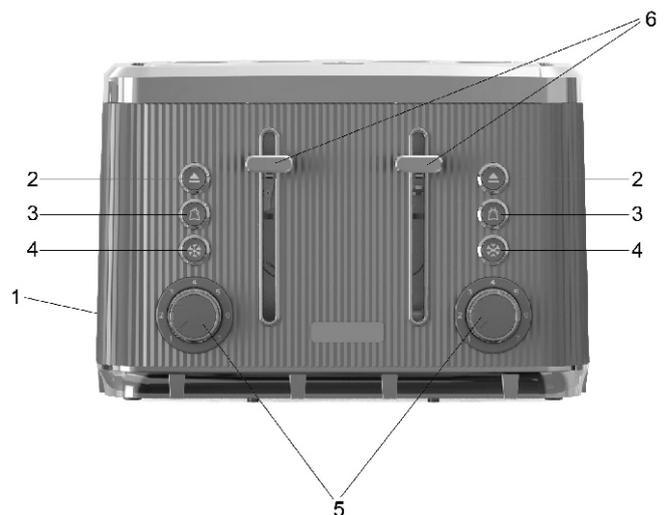
17. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
18. The temperature of accessible surfaces may be high when the appliance is operating.
19. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
20. Children should be supervised to ensure that they do not play with the appliance.
21. Bread may burn. Therefore toasters must not be used near or below curtains and other combustible materials. They must be watched.
22. Never use the device unsupervised! Switch off the device whenever you are not using it, even if this only for a moment.
23. The appliances are not intended to be operated by means of an external timer or separate remote-control system.

WARNING:

Never attempt to extract Jammed toast, muffins, bagels or any other item with a knife or any other object, as contact with live elements may cause electrocution. Allow the appliance to cool down, unplug and carefully remove the bread.

OPERATION

1. Full length crumb tray
2. Stop Button with indicator light
3. Defrost button with indicator light
4. Defrost button
5. Electronic variable browning control
6. High lift bread release

**USE**

1. Insert the plug into a suitable mains supply socket and turn the power on.
2. Place two slices of bread, muffins or bagels into the bread slots.
3. Select the desired browning setting, from No.7 on the browning control knob (No.1-lightest, No.7-darkest). When using the toaster for the first time we suggest you toast on No.3. Different types of bread and personal preference may require a different browning setting.

4. Press the carriage control lever down until it clicks into place. Toasting cycle will automatically commence. Please note: if the toaster is not plugged in and switched on the carriage control lever will not click into place.
5. The toaster turns off when the desired toast color is achieved and automatically pops up the toast. The toasting process can be stopped at any time by pressing the stop button.

TOASTING FROZEN BREAD

To toast frozen bread, place the bread into the bread slots and select the desired Browning Setting. Press the carriage control lever down until it clicks into place then press the Frozen Button.

CLEANING AND MAINTENANCE

- Your toaster comes with a removable, slide out crumb tray. This is a quick and convenient way to remove crumbs. Always ensure that the toaster is unplugged and has cooled down before removing and emptying the crumb tray. Clean the crumb tray with a damp cloth and always dry the tray properly before replacing it into the toaster.
- Use a stiff brush to remove any burnt-on crumbs.
- Wipe the outside of the toaster with a damp cloth.
- Do not use a sharp object or abrasive substance to clean the toaster.

CAUTION

- To prevent electric shock , disconnect from the mains before removing cover .
- No user serviceable parts inside.
- Refer servicing to qualified service personnel.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.

SPECIFICATION

Product: Toaster
 Model: 800-266V70
 Power consumption: 1560-1860W
 Voltage:220V-240V~50Hz
 Made In China



All images serve as illustrations only and do not always show exact representations of the device.

All rights reserve.

If you have any questions, please contact our customer care centre.

Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS:
 MH STAR UK LTD
 Unit 27, Perivale Park,
 Horsenden lane South
 Perivale, UB6 7RH
 MADE IN CHINA

