


# AIYAPLAY

## CHILDREN'S ELECTRONIC TOY UTV

IN250400210V02\_UK  
370-403V70

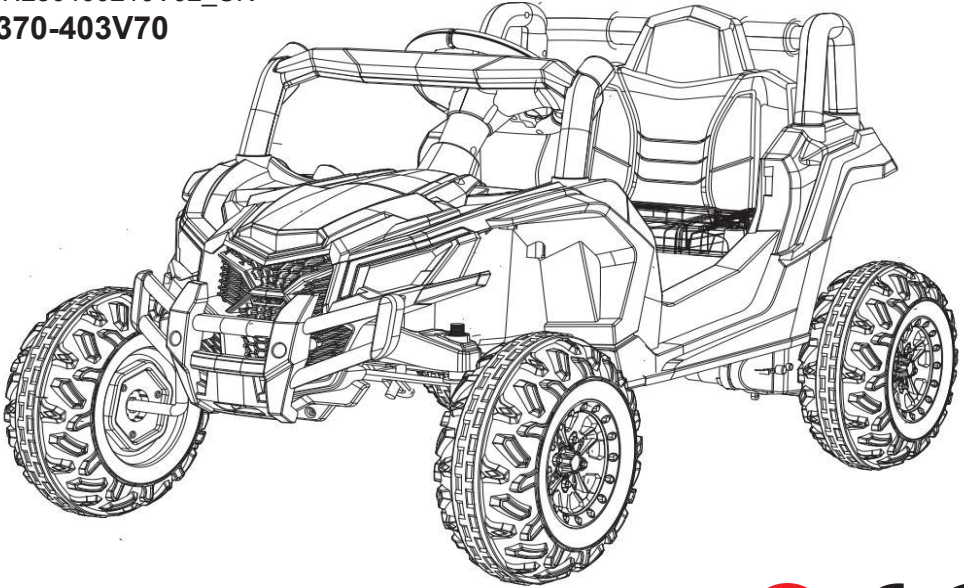

### **WARNING:**

Must be assembled by an adult.

- Suitable for 3+ Years
- Maximum user weight: 30 kg

# OWNERS MANUAL

with Assembly Instructions

**Read and understand this entire manual before using!**

Please keep this manual for future reference as it contains important information. Before first time use, charge the battery for at least 4-6 hours, but no more than 10 hours.

## **WARNING!**

- Keep this manual for future reference.
- **CHOKING HAZARD** - Small parts. Not suitable for children under 36 months. The product contains small parts, keep children away when assembling.
- **ADULT ASSEMBLY ONLY.**
- Always remove protective material and poly bags and dispose before assembly.
- **WARNING:** Protective equipment should be worn. Always wear shoes and sit in the seat when operating the vehicle.
- Only drive on level ground. Never use on the lawn.
- Keep your hands, hair, and clothes away from moving parts.
- Never leave child unattended. Direct adult supervision is required. Always keep child in view when child is in vehicle.
- To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water, always wear shoes, and never allow more than 1 rider.
- Never use in unsafe conditions such as snow, rain, loose dirt, mud, sand, or gravel, otherwise may result in an unexpected accident such as tipping over, and could damage the electrical system or battery.
- **WARNING:** Not to be used in traffic.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- **WARNING:** This toy is unsuitable for children under 36 months due to its maximum speed;
- **WARNING:** This toy has no brake.
- The electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
- Use only battery(ies) and charger specified by the manufacturer.

## **BATTERY USAGE WARNINGS**

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Batteries are only to be charged by persons of at least 8 years old.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity(+ and -).
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

### **WARNING!**

The remote control is not a toy. It is for the adult use only, and should not be used by a child. A close adult supervision is always required. Reception range may change significantly with weather, battery, and other environmental conditions.

# BATTERY CHARGING WARNINGS

## General Safety Warnings

- ⚠ "Read all instructions before using this appliance"
- ⚠ "This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved"
- ⚠ "Children shall not play with the appliance"
- ⚠ "Cleaning and user maintenance shall not be made by children without supervision"

## Electrical Safety Warnings

- ⚠ "If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard"
- ⚠ "Do not use outdoors"
- ⚠ "Do not immerse in water or other liquids"
- ⚠ "Disconnect from supply when not in use"

## Charger-Specific Warnings

- ⚠ "Use only with batteries specified by the manufacturer"
- ⚠ "Ensure correct polarity when connecting batteries"
- ⚠ "Do not charge damaged or leaking batteries"
- ⚠ "Remove batteries if appliance is not to be used for extended periods"
- ⚠ "Do not short-circuit the output terminals"

On the purchase of your new Ride-On.

This ride-on car will provide your child with many miles of riding of enjoyment. To help assure you and your rider a safe ride we ask you to please read this manual carefully, and keep it for future reference.

Follow the recommendations in this manual, they are designed to improve the safety and operation of your ride-on car and its rider.

## Specification

	<b>2WD</b>
<b>Battery</b>	12V4.5AH
<b>Charger</b>	12V500mA
<b>input</b>	Depend on local voltage
<b>Motor</b>	12V 390-18000×2
<b>Steering Motor</b>	390-5000*1

<b>Suitable age:</b>	3+ Years
<b>Charge time:</b>	8~12 hours
<b>Load capacity:</b>	Under 30 kg
<b>Size of car:</b>	96 × 61 × 56 CM
<b>Speed:</b>	1.7-5.3 km/h



## BATTERY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.


**WARNING:**

- **CHOKING HAZARD!** Not suitable for children under 36 months.
- Must be assembled by an adult.
- To reduce the risk of injury, adult supervision is required.
- Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than 1 rider.
- Power supply or battery charger used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
- Use only battery(ies) and charger specified by the manufacturer.
- The battery on the vehicle is not replaceable.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- Protective equipment should be worn.
- Always wear shoes, always sit on the seat.
- Not to be used in traffic.
- This toy is unsuitable for children under 36 months due to its maximum speed; Maximum user weight is 30 kg.
- This toy has no brake.
- Always wear protective equipment such as helmet, gloves, elbow and knee pads, also long sleeved shirts and long trousers help protect skin.


**Rules for Safe Riding**

- Keep Children within Safe Riding Areas.
- Use the toy only on flat surfaces. Such as inside your house, garden or playground.
- Never use in the dark. A child could encounter unexpected obstacles and have an accident. Operate the vehicle only in the daytime or a well-lit area.
- It is prohibited to change the circuit or add other electric parts
- Inspect wires and connections of the vehicle periodically.
- Do not let any child touch the wheels or be near them when the car is moving .
- All circuit connections in the toy must be connected properly. Any wrong circuit connections could cause possible dangerous malfunctions, shortcircuit, sudden equipment failure and other possible failures


**1** Vehicle body  
x1

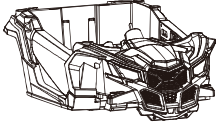


**2** Bull bar  
x1

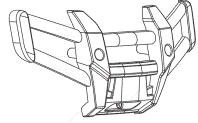


**3** Driving wheel  
x2

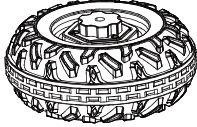

**4** Normal wheel  
x2

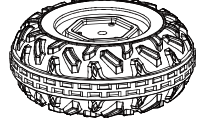


**5** Gear box  
x2

 


**6** M12 washer  
x6



 **7** M10 lock nut  
x6



**9** Hubcap  
x4

 


**10** Front axle



x1

Tied to the bottom of the car

**11** Rear shock rack  
x1

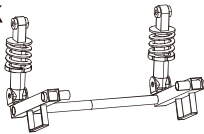

**12**  $\Phi$ 12 Rear axle  
x1




**13**  $\Phi$ 8 shock shaft  
Re-installed on the body  
x1




**14**  $\Phi$ 12 middle shaft  
Re-installed on the body  
x1



**15** Steering wheel  
x1

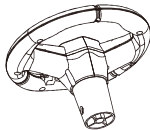

**16** M5x32 machine screw  
x1

 

**17** M5 lock nut  
x1



 
**18** Front roll bar  
x1




**19** Rear roll bar linkage  
x1




**20** Rear roll bar support  
x2




**21** Seat back  
x1

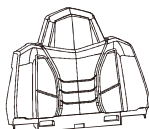

**22** Seat cushion  
x1

 


**23** #4x12 screw  
x4

 


**24** Front axle spring  
x2



 **25** M8 Spanner  
x2



**26** M10 Socket wrench  
x2

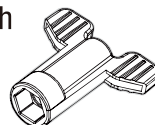

**27** Charger  
x1



**28** Remote controller  
x1




**Assembly tools required (not included):**  
**Screwdriver**






## Front bottom View

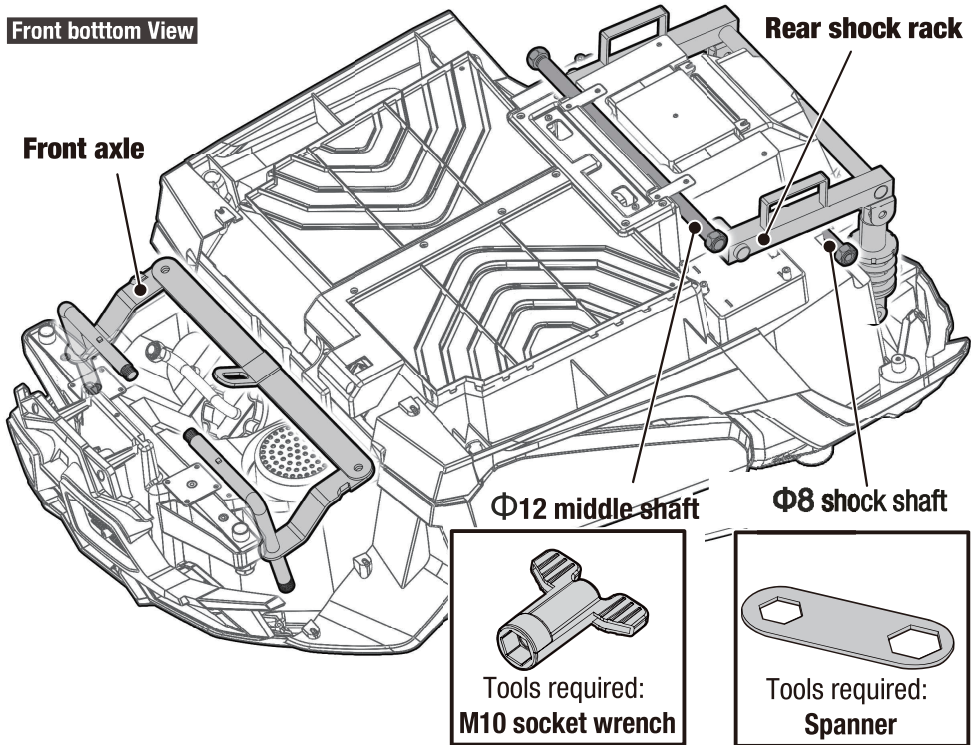


- Turn the vehicle body upside down. Cut off the the cable ties on the bottom of vehicle body with scissors. And remove the **front axle** and **rear shock rack**.
- Unscrew the lock nuts on one end of the **Φ12 middle** and **Φ8 shock shaft**, and remove the **Φ12 middle shaft** and **Φ8 shock shaft** from the body.

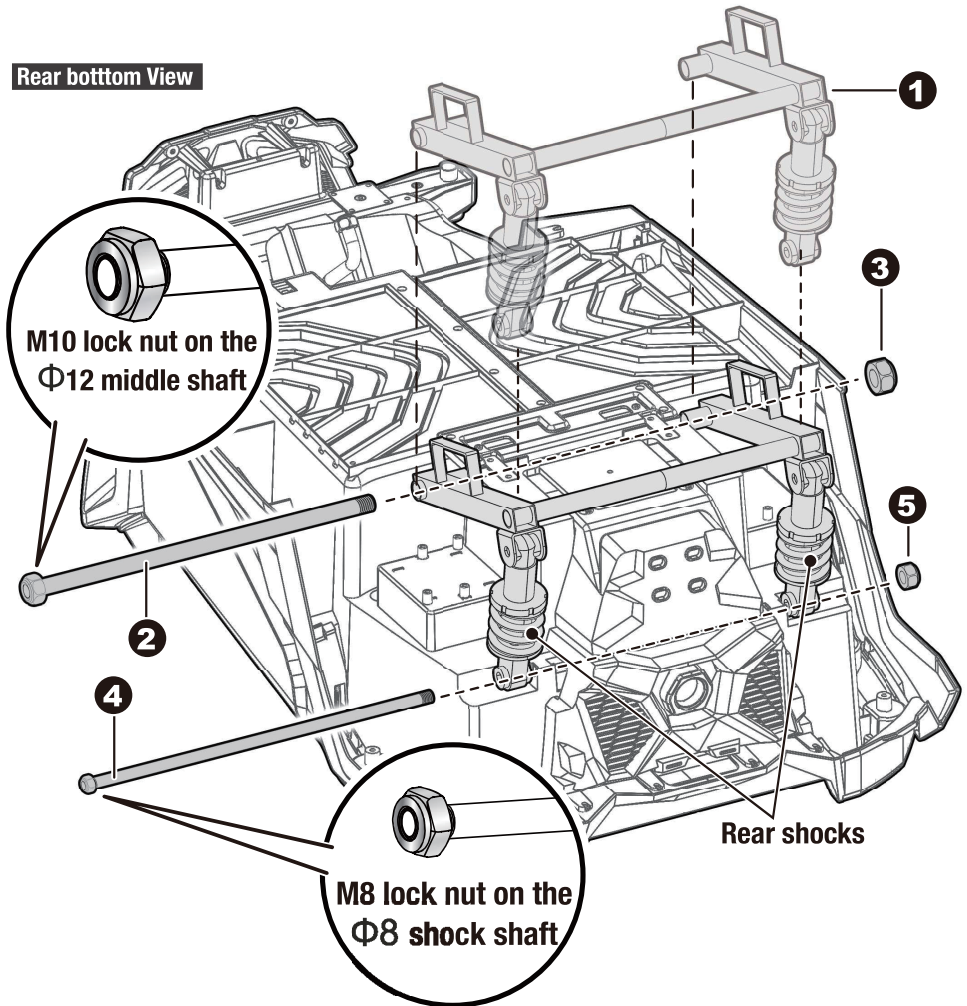


1. Fit the rear shock rack to the body,
- 2,3. Pass the  $\Phi 12$  middle shaft through the hole on one side of the rear shock rack, the holes in the body, and out through the hole on the other side of the rear shock rack. Tighten a M10 lock nut to the end of the  $\Phi 12$  middle shaft with a M10 socket wrench.
- 4,5. Pass the  $\Phi 8$  shock shaft through the holes in the rear shock, the holes in the body, and out through the holes in the rear shock on the other side. Tighten a M8 lock nut to the end of the  $\Phi 8$  shock shaft with a M8 spanner.


Rear bottom View

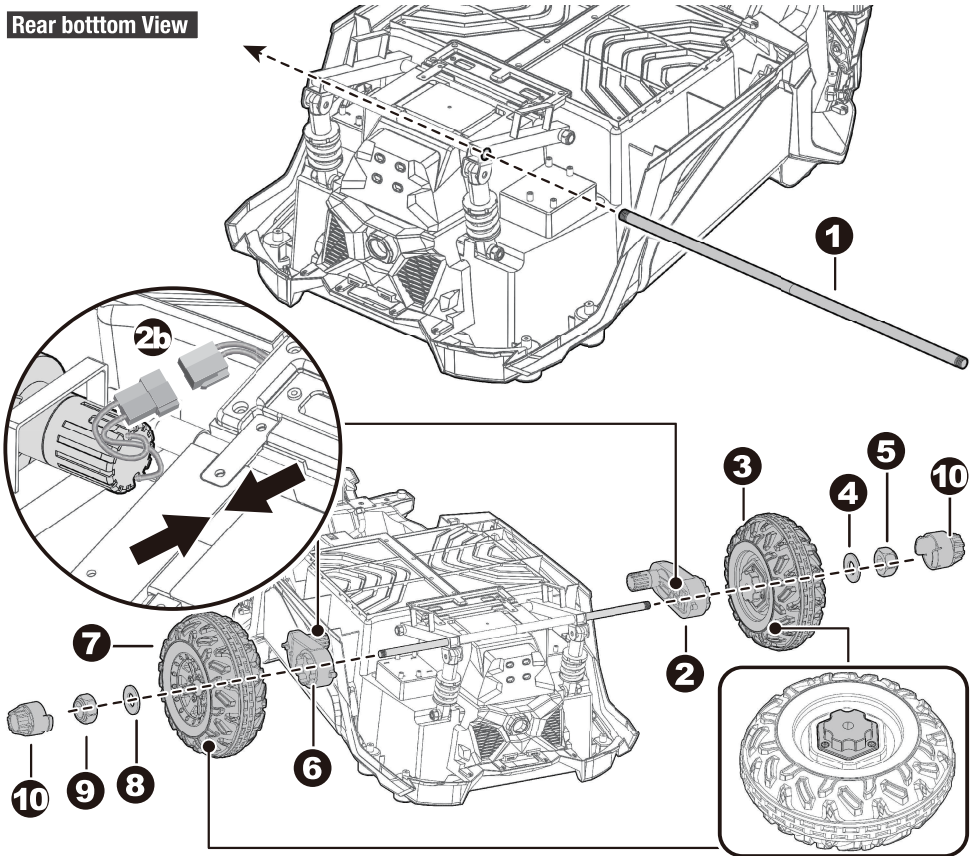

1. Insert the  $\Phi 12$  rear axle through the hole in the rear shock rack.
2. Slide a gear box on the rear axle, and plug the connector of the rear gear box to the connector from the vehicle body (fig 2b), and hide the plugged connectors into the hole in the body.
3. Slide the **Driving wheel** onto the rear axle. Ensure the wheel driver match up with the gear box on the body.
4. Slide a M12 washer onto the rear axle.
5. Tighten a M10 lock nut to the end of the rear axle with a M10 socket wrench.
- 6-9. Repeat the steps 2-5 to assemble the other rear wheel.
10. “Snap” the hubcaps to the wheels.

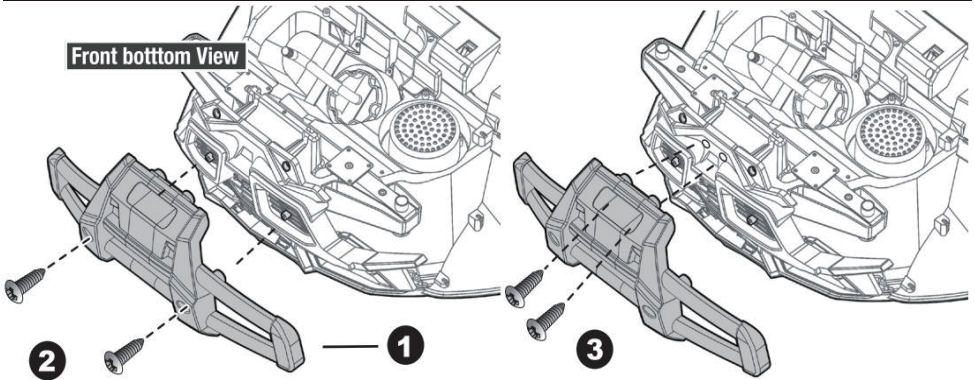

- 1,2. Fit the bull bar to the body, tighten two #4x12 screws below .
3. Tighten two #4x12 screws above.
- 4,5. Fit the two front axle springs to the front axle supports, and fit the front axle supports into the holes at both ends of the front axle holder.
6. Ensure the bent end of the steering column passes through the hole in the steering linkage.
7. Tighten a M10 lock nut to each end of the front axle support with a M10 socket wrench.

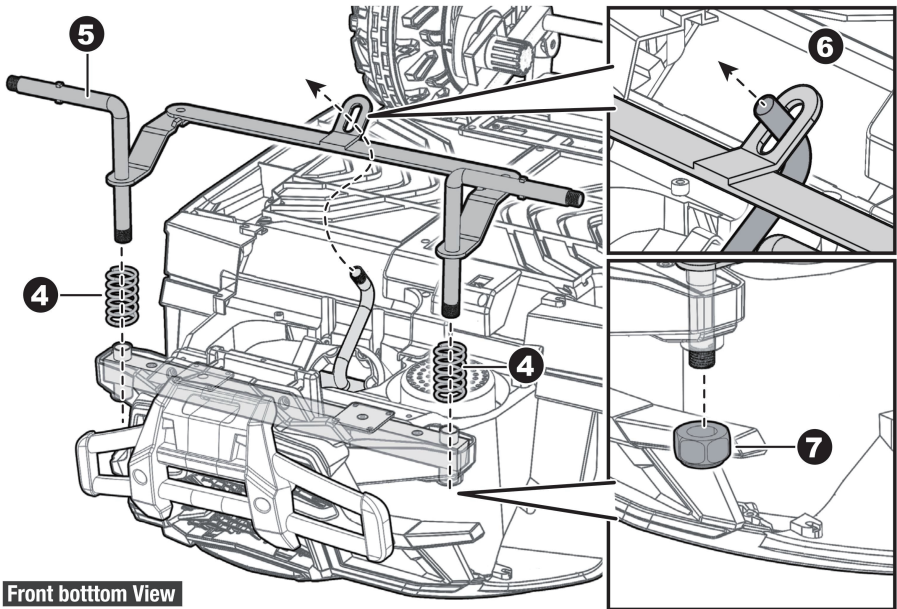


Front bottom View

Tools required:  
**M10 Socket wrench**


1. Slide a M12 washer onto the front axle.
2. Slide the **Normal wheel** onto the front axle.
3. Slide another M12 washer onto the front axle.
4. Tighten a M10 lock nut to the end of the front axle with a M10 socket wrench.
5. “Snap” the hubcap to the front wheel.


Repeat for the other front wheel.

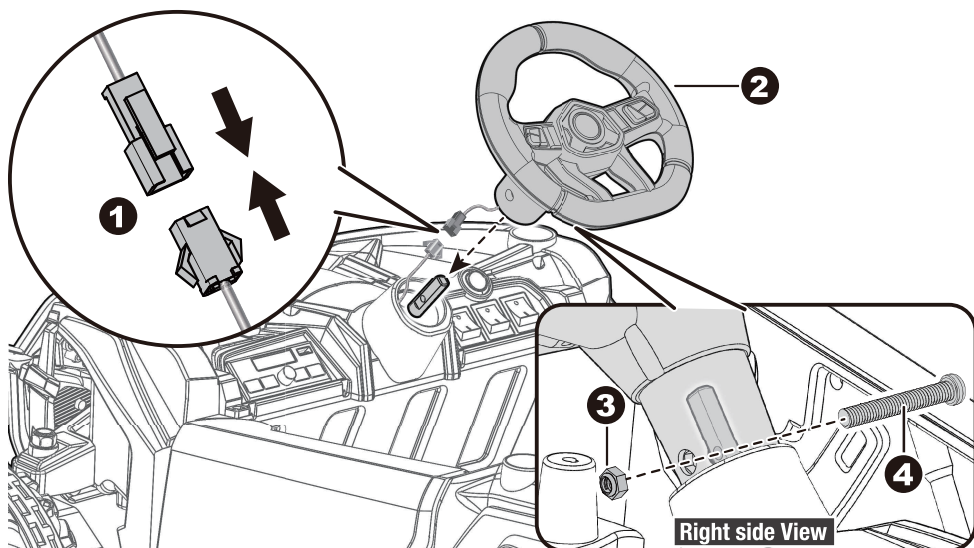


Turn the vehicle body upright.


1. Plug the sound unit connector on the steering wheel into the connector on the vehicle body. And hide the plugged connectors into the hole in the body.
2. Fit the steering wheel to the end of the steering column.
3. Insert the M5 lock nut into the slot at right side of the steering wheel.
4. Line up the holes on the steering wheel with the holes on the steering column, insert the M5x32 machine screw and tighten with a screwdriver.
5. Insert the tabs on the front roll bar into the holes on the body, push until you hear it “click” into place.

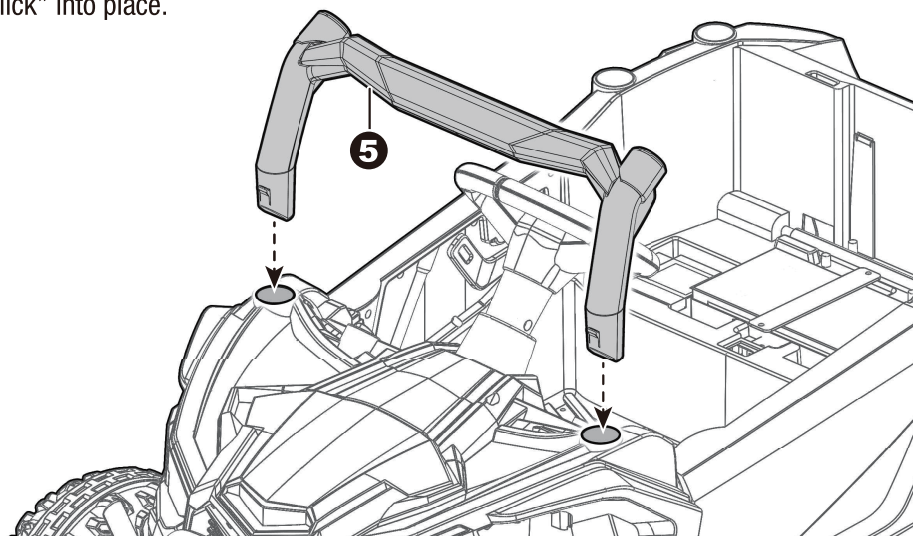

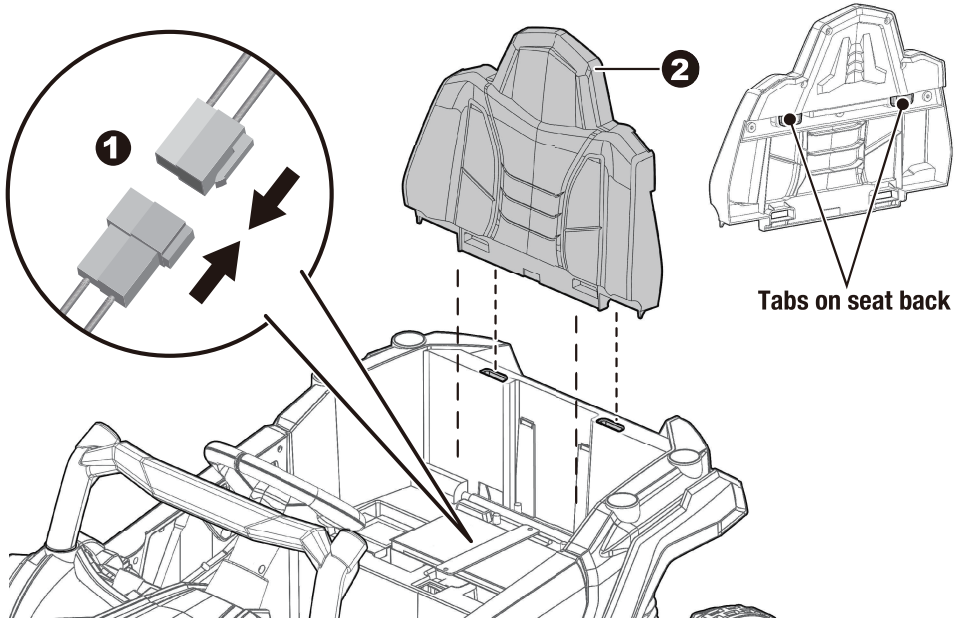



1. Plug the red connector on the vehicle body into the red connector on the battery.
2. Fit the tabs on the seat back into the holes on the body.
3. Fit the seat cushion to the body. Using a slotted screwdriver (not included) or coin to turn the both seat locks to the lock position.

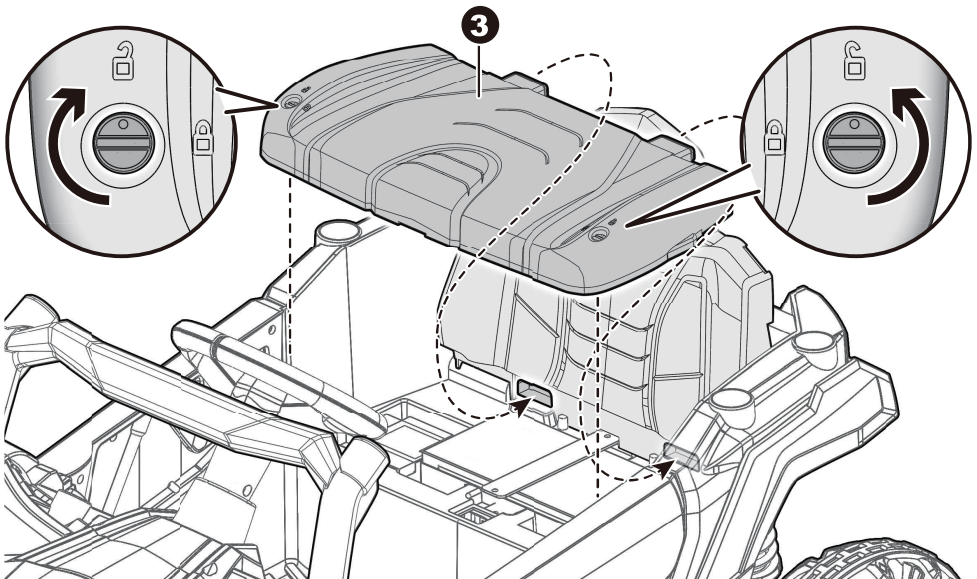

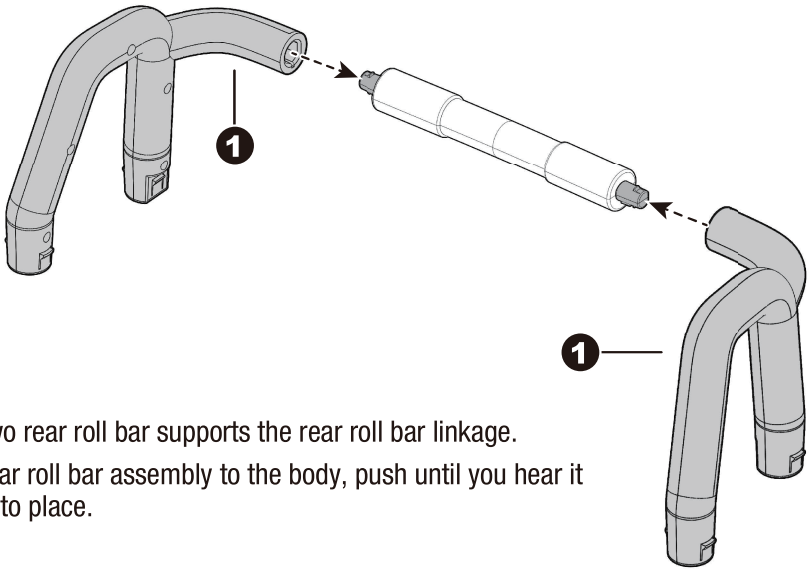

1. Fit the two rear roll bar supports the rear roll bar linkage.
2. Fit the rear roll bar assembly to the body, push until you hear it “click” into place.

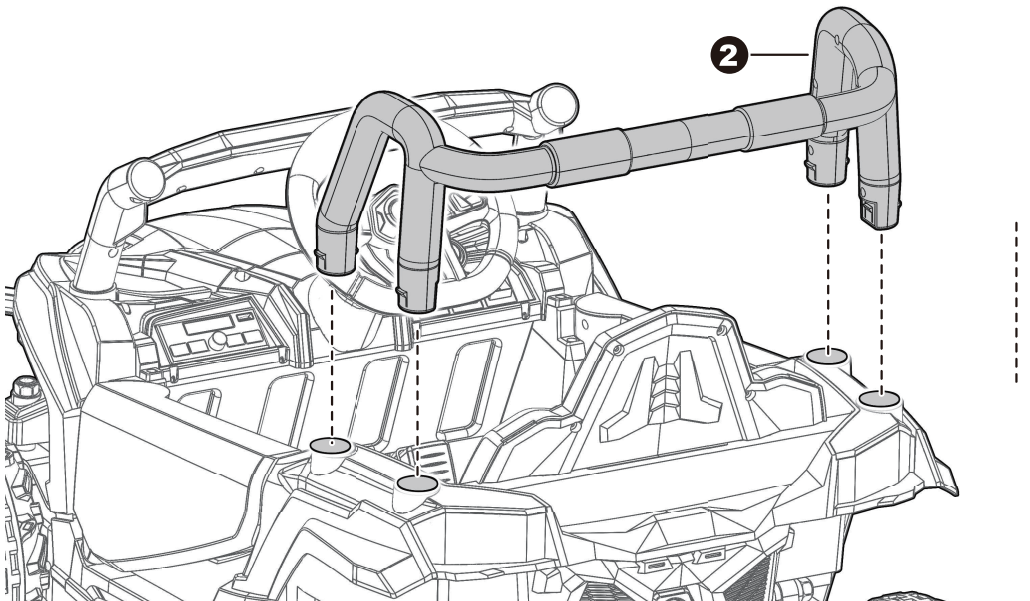

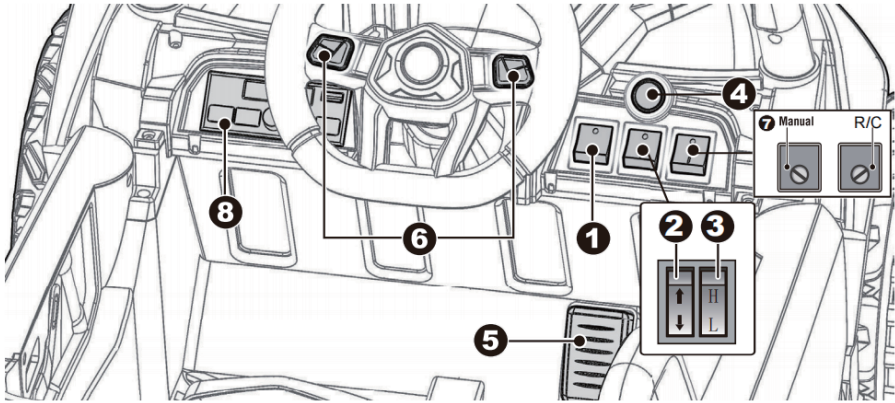

**1. Power switch:** Turn the product on and off.

**2. Forward/Reverse switch:**

Change the direction that product moves from forward to reverse.

- To move the product forward, shift the lever to top position.
- To move the product backward, shift the lever to down position.
- Move the switch in the middle, the product will stop and not run.

**3. High/Low speed switch:**

Operate the product to move forward in high or low speed.

**4. Light switch:** Turn the lights on and off.

**5. Accelerator pedal:**


- To move the product, press the pedal down.
- To brake or slow down, release pressure from the pedal.

**6. Engine / Horn sound buttons.**

**7. Telecontrol-Manual switch :**

Operates the product control by remote control or foot pedal.

### 8. Audio Player:

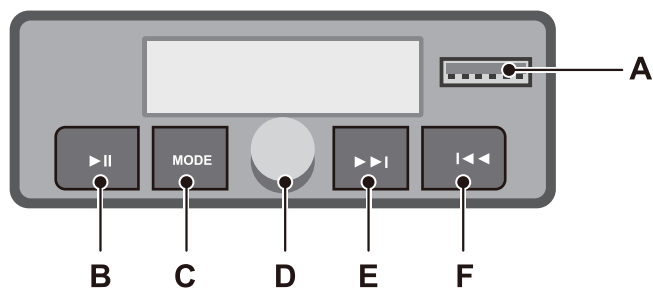

**A. USB Interface:** Connects your portable device to play audio through the product's speakers, also supporting MP3 format exclusively.

**B. Play / Pause Button:** Press and hold down this button for the FM radio to manually or automatically search for stations.


**C. Audio source button:** Allows you to change between different audio inputs such as FM radio (if equipped), USB port, Story mode, Music mode and Wireless connection (if equipped). In FM radio mode, holding down Button B (Play/Pause) enables you to manually or automatically search for radio stations.

**D. Volume knob:** Adjust the volume up or down.

**E. Next Track / next channel**

**F. Previous Track / previous channel**

 **WARNING:** **ADULT OPERATING REQUIRED!**

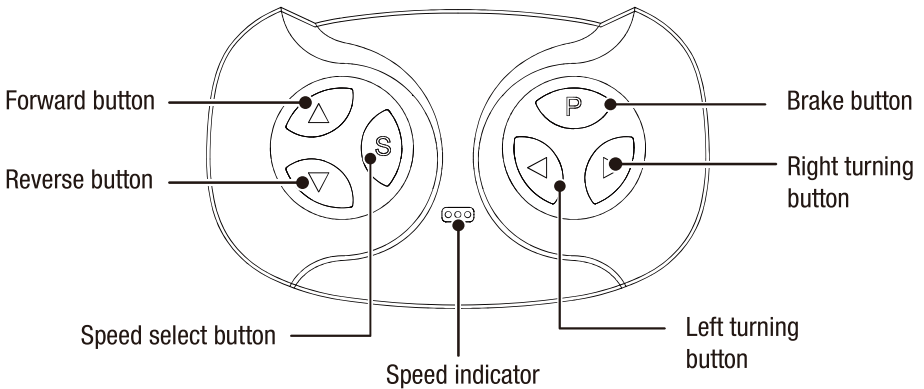

## Attach the batteries of controller

Lift the battery compartment door on the back of the controller and insert two AAA(LR03) batteries.

**HINT: Batteries not included.**

### 1. Build connection

Long press the forward and reverse buttons for 3 seconds, and the speed indicator flashes. Then power on the vehicle, the speed indicator goes to long bright, means the connection successful. If the speed indicator no response, means the connection failed. Replace the batteries and retry.

### 2. Brake button

Press the button to stop the vehicle, press it again to release the brake.

### 3. Speed select button

The switch operates the vehicle to move in low, normal or high speed.

**HINT:** This switch won't work while your vehicle moves reverse.

## NOTE:

- Leave the remote controller idling for about 10 seconds, it will shut down automatically.
- Rebuild connection when you replace the batteries of the remote controller.
- The remote control is not a toy. It is intended for adult use only and should not be made by children Use. Close supervision from an adult is always required. The receiving range may vary depending on the weather、 battery and other environmental conditions.


**WARNING!**

**ONLY AN ADULT CAN CHARGE AND RECHARGE THE BATTERY!**

**WARNING!**

This product with **Charging Protection**: when charging, all functions will be cut off!  
Only an adult can charge and recharge the battery!

- The POWER SWITCH must be turned in OFF position when charging.
- Before the first use, you should charge the battery for 4-6 hours. Do not recharge the battery for more than 10 hours to avoid overheating the charger.
- When the vehicle begins to run slowly, recharge the battery.
- After each use or once a month minimum recharge time as 8 to 12 hours, less than 20 hours at most.
- Use the only rechargeable battery and charger supplied with your vehicle. NEVER substitute the battery or the charger with another brand. Using another battery or charger may cause a fire or explosion.
- Do not use the battery or charger for any other product.

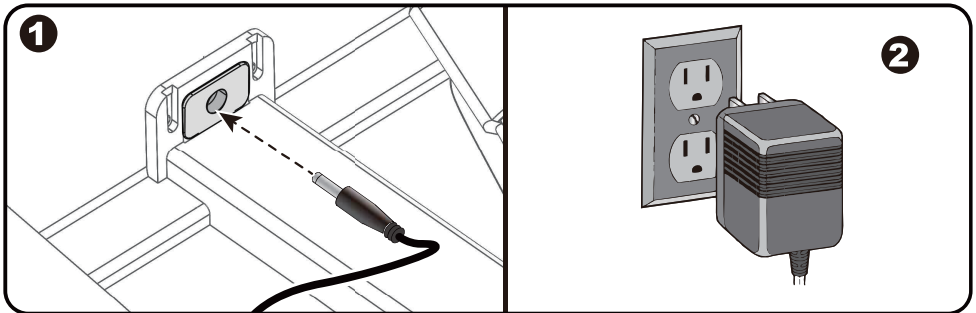**The input socket is below the seat.**

1. Plug the charger port into the input socket.
2. Plug the charger plug into a wall outlet. The battery will begin charging.

Problem	Possible Cause	Solution
Vehicle does not run	Battery low on power	Recharge battery.
	Thermal fuse has tripped	Reset fuse, see <Fuse>
	Battery connector or wires are loose	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor <b>contact your distributor please.</b>
	Battery is dead	Replace battery, <b>contact your distributor please.</b>
	Electrical system is damaged	<b>Contact your distributor please.</b>
	Motor is damaged	<b>Contact your distributor please.</b>
Vehicle does not run very long	Battery is under charged	Check that the battery connectors are firmly plugged into each other when recharging
	Battery is old	Replace battery, <b>contact your distributor please.</b>
Vehicle runs sluggishly	Battery low on power	Recharge battery, <b>contact your distributor please.</b>
	Battery is old	Replace battery, <b>contact your distributor please.</b>
	Vehicle is overload	Reduce weight on vehicle.
	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions ,see <Safety>.
Vehicle needs a push to go forward	Poor contact of wires or Connectors	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, <b>contact your distributor please.</b>
	"Dead Spot" on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. <b>Contact your distributor please.</b>
Difficult shifting from forward to reverse or vice-versa	Attempting to shift while the vehicle is motion	Completely stop the vehicle and shift, see <Use Your New Vehicle>
Loud grinding or clicking noises coming from motor or gear box	Motor or gears are damaged	<b>Contact your distributor please.</b>
Battery will not recharge	Battery connector or adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger not plugged in	Check that the battery charger is plugged into a working wall outlet.
	Charger is not working	<b>Contact your distributor please.</b>
Charger feels warm when recharging	This is normal and not a cause for concern	

Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem **Contact your distributor please.**

- It is parents' responsibility to check main parts of the toy before using, must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be used until that damage had been properly removed.
- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle Raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage the moving parts, motors or the electric system.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

The battery features a thermal fuse with a reset fuse that will automatically trip and cut all power to the vehicle if the motor, electric system or battery is overloaded. The fuse will reset and power will be restored after the unit is turned OFF for 20 seconds and then turned ON again. If the thermal fuse trips repeatedly during normal use, the vehicle may need repair. Contact your distributor please.

To avoid losing power, follow these guidelines:

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquids to come in contact with the battery or other electric components.
- Do not tamper with the electric system. Doing so may create a short, causing the fuse to trip.

Our products are suitable for ASTM F963; GB6675; EN71 and EN62115 standard.

## Disposal Of Battery



- Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.
- Do not dispose of a lead-acid battery in your regular, household trash. The incineration, land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.

If you have any questions, please contact our customer care center.

Our contact details are below:



0044-800-240-4004



[enquiries@mhstar.co.uk](mailto:enquiries@mhstar.co.uk)

Importer:

MH STAR UK Ltd

1 Northampton Cross Logistics Park

Northampton Cross Road

Northampton

NN4 9FH

0044-800-240-4004

[enquiries@mhstar.co.uk](mailto:enquiries@mhstar.co.uk)

MADE IN CHINA