

**JT62128**



**Toaster**



**IMPORTANT INSTRUCTIONS**

- Before using this appliance, read all instructions. Retain this manual for future reference.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
- The appliance must not be immersed.



- **CAUTION** : Hot surfaces. Surfaces are liable to get hot during use.
- Regarding the instructions for details on how to clean the surfaces in contact with food, thanks to refer to the section "Cleaning and Maintenance".
- The appliance must not be used with an external timer or separate remote control system.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- To prevent electrical hazards, do not immerse any part of the appliance or cord in water or other liquid.
- Children must be supervised when near the appliance.
- Always use the appliance on a dry and level surface.
- Do not use this appliance outdoors.
- When not in use and before cleaning, unplug the appliance from the socket.
- If the appliance is damaged or malfunctions in any way, do not use it. Return the appliance to an authorized service engineer for repair, as special tools are required.
- Regularly check the supply cord, ensuring there are no damages. If signs of damage occur, return the entire appliance to an authorized service engineer.
- Ensure the cord does not hang over a table or counter or touch hot surfaces. Let the unit cool before wrapping the cord around the base for storage.
- Parts of this appliance can become hot - do not touch to avoid burns. Do not store or cover the appliance until it has cooled down completely.
- Keep this appliance away from hot gas, electric burners, heated ovens and other heat sources.

- When cleaning this appliance, do not use harsh abrasives, caustic cleaners or oven cleaners.
- When using this appliance, ensure there is enough space on all sides, allowing air to circulate. Keep the appliance away from curtains, wall coverings, clothing, cloths and other flammable materials. Extra caution is required for surfaces that are not heat resistant – an insulated heat pad is recommended.
- This appliance is for household use only. Do not use for commercial purposes.
- When using the toaster, ensure the slide-out crumb tray is in place. Clean the crumb tray regularly – do not allow crumbs to build up.
- Do not use this appliance with ingredients containing sugar, jam or preserves.
- This appliance is not for use by children or individuals with limited physical, sensory or mental capabilities unless they have received proper supervision or instructions for safe usage.
- Whilst this appliance is in use, the temperature of surrounding surfaces may be high.
- When in use, do not leave this appliance unattended. Ensure it is switched off when not in use.
- Incorrect operation and improper handling can lead to malfunction of the appliance and injuries to the user.
- Before the first connecting of the appliance check that voltage indicated on the rating label corresponds to the mains voltage in your home.
- Do not leave the appliance switched on when not in use.
- Do not use other attachments than those supplied.
- Do not operate after malfunction or cord damage.
- Do not attempt to repair, adjust, or replace parts in the appliance. Check and repair the malfunctioning appliance in the nearest service center only.
- Keep the cord away from sharp edges and hot surfaces.
- Do not pull, twist, or wrap the power cord around appliance.
- Do not move the appliance until it cools down completely.
- Never use sharp objects to take out sliced bread! When taking out sliced bread, be careful not to damage the heating wires.
- Do not touch any metal part of the outer surface of the appliance as it may reach a very high temperature.
- Do not insert bread slices that are too thick or wrapped in aluminum foil to avoid electric shock or fire.


**ATTENTION: TOO LONG TOASTING MAY CAUSE FIRE.**

- Do not cover the toaster during operation.

## OPERATION

### Features

1. Body
2. Slide-out crumb tray
3. Bread slot
4. Sliding lever
5. 7- Settings timer
6. Cancel button
7. Reheat button
8. Defrost button
9. LED strip light illuminates when toasting

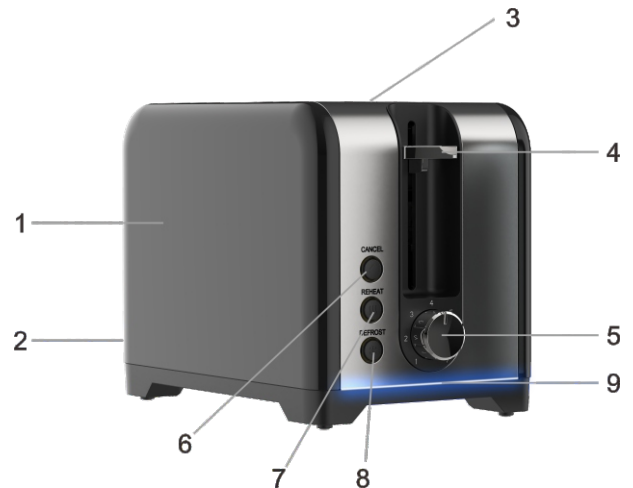

### BEFORE THE FIRST USE

- Remove all packing material.
- Before using the toaster for the first time clean your toaster (see Chapter “**CARE AND CLEANING**”). Operate the toaster at least two times without bread but on the highest setting. Ventilate the room during this period.
- As all new electric heating elements, your toaster creates a new smell when it is first switched on. This is quite normal and not a cause for concern.
- If the power cord is damaged, to avoid danger, please do not repair or replace it by yourself, please contact the after-sales service personnel directly.
- Please check that the crumb tray is placed in the correct position.

### TOASTING

- Plug the toaster to the power supply and place 1 or 2 slices of bread into the bread slots of the appliance.
- Using the control knob, select the desired browning (No.1 is the lightest and No.7 is the darkest). For first-time use, it is suggested to use No.3. Different types of bread and personal preference may require a different browning setting.
- Press the button until it sucks in the power to start toasting the bread. LED strip light is illuminating when toasting.
- After the machine starts working, do not touch the top of the machine with your hands, be careful of burns.
- After the bread is baked, the press brake will automatically jump off and rise, and the LED strip light will automatically extinguish. Please use bread clips to clip the bread out to prevent burning your hands.
- After the bread has been baked, wait for the machine to cool, pull out the bread crumb tray from the back of the machine, clean the crumb tray, clean it out and reinsert it into the machine.
- Put the machine away after cleaning it.

**REHEAT FUNCTION:**

- You can use reheat facility if ready bread got cold.
- Insert bread into the toaster and pull down the sliding lever. Set the knob to the reheat function setting on **REHEAT**. The indicator will light up.
- The cold bread can be reheated in short time without over browning.

**DEFROST FUNCTION**

- Press defrost function button **DEFROST** to prolong toasting time of frozen bread, thus the indicator light should light up.

**CANCEL BUTTON**

- Toasting can be reset anytime during toasting by pressing **CANCEL** button, thus the indicator light will shut down.

**CRUMB TRAY**

- The crumb tray is intended for collecting the crumbs, which fall on the base of the toaster while toasting.
- Pull the crumb tray out, empty and place it back.

**CARE AND CLEANING**

- Ensure that the appliance is unplugged before cleaning.
- Let the unit completely cool down.
- Do not use abrasive detergents, any organic solvents or aggressive chemicals.
- Clean off crumbs of bread.

**STORAGE**

- Switch off and unplug the appliance; let it completely cool.
- Complete all requirements of chapter **CARE AND CLEANING**.
- Reel on the power cord.
- Keep the appliance in a dry cool place.

**SPECIFICATION**

Product: Toaster

Model : 800-328V70 (JT62128)

Power consumption: 780-930W

Mains Voltage: 220-240V~ 50/60Hz

Made In China

Off mode power	$P_o$	0.00	W
Standby mode power	$P_{SB}$	[N/A]	W
Power management function	[N/A]		
Time to enter automatically off mode	$T_o$	[N/A]	Min
Time to enter automatically standby mode	$T_{SB}$	[N/A]	Min

**UK**

If you have any questions, please contact our customer care center.

Our contact details are below:



0044-800-240-4004



[enquiries@mhstar.co.uk](mailto:enquiries@mhstar.co.uk)

**IMPORTER ADDRESS:**

MH STAR UK LTD

Unit 27, Perivale Park,

Horsenden lane South

Perivale, UB6 7RH

MADE IN CHINA

