

TUMBLE DRYER



CAUTION: HOT SURFACE!



CAUTION: RISK OF FIRE!



Before using this appliance, read all instructions carefully. Keep this manual safe for future reference.

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

Important safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including:

For Your Safety

Read all instructions carefully, even if you are quite familiar with the appliance.

- Young children should be supervised to ensure that they do not play with the appliance.
- INDOOR USE ONLY - this appliance is not intended for outdoor use.
- Do not place naked flame sources, such as candles, on the appliance
- Do not locate the appliance or cord near heat sources such as radiators, heaters, air ducts or direct sunlight.
- Do not block any of the ventilation openings. Ensure that vents are not covered by newspapers, tablecloths, curtains, etc.
- Do not run the cord under floor coverings. Instead, arrange the cord away from traffic areas where it will not become a trip hazard.
- To disconnect the appliance, turn the appliance off, switch off the power outlet and remove the plug from the power outlet
- Do not misuse the cord. Never carry the appliance by the cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
- Do not operate the appliance if it has a damaged cord or plug; after the appliance malfunctions; or has been dropped or damaged in any way. Consult the manufacturer.
- Do not attempt to repair, disassemble or modify this appliance. The warranty becomes void if not serviced or repaired by a qualified person.
- Do not place items that have been soiled with flammable liquids inside the dryer without washing them with detergent thoroughly before.
- Do not excessively bend, stretch, twist or bind the power cord or place heavy objects on it.
- This appliance is only to be serviced by a qualified person, There are no user-serviceable parts inside.
- Do not use an extension cord with this appliance.
- Do not install in a tight fitting cabinet.
- Do not overload the tumble dryer.
- Ensure foreign objects do not find their way into the tub of the tumble dryer.
- The door window may be hot after a long drying cycle. Please ensure children are kept away from the machine.
- If the tumble dryer is not wall mounted, place in a flat, firm, dry and drafty place. Use the adjustable front legs to assist in leveling the dryer if need be. Do not place it on any soft material such as foam or plastic.

- Do not use flammable or combustible materials such as gas, petrol, alcohol or lacquer in the tumble dryer.
- After turning off the power supply to the tumble dryer, wait at least 2 minutes before turning it back on again.
- Please remove the transport packaging at the rear of the tumble dryer, prior to use.
- **CAUTION!** If this appliance is supplied from a cord extension set or an electrical portable outlet device the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.



Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



Read the instructions

- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- The lint trap has to be cleaned frequently.
- Lint must not be allowed to accumulate around the tumble dryer.
- Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

- Remove all objects from pockets such as lighters and matches.
- Fill steam generators only with liquids specified by the manufacturer.
- **WARNING:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- A carpet must not obstruct the openings.
- Exhaust air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

Correct Disposal of this product:

 
 


This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Save These Instructions

Name of Components


To open and close the door, you need to pinch the door lock with your hand.

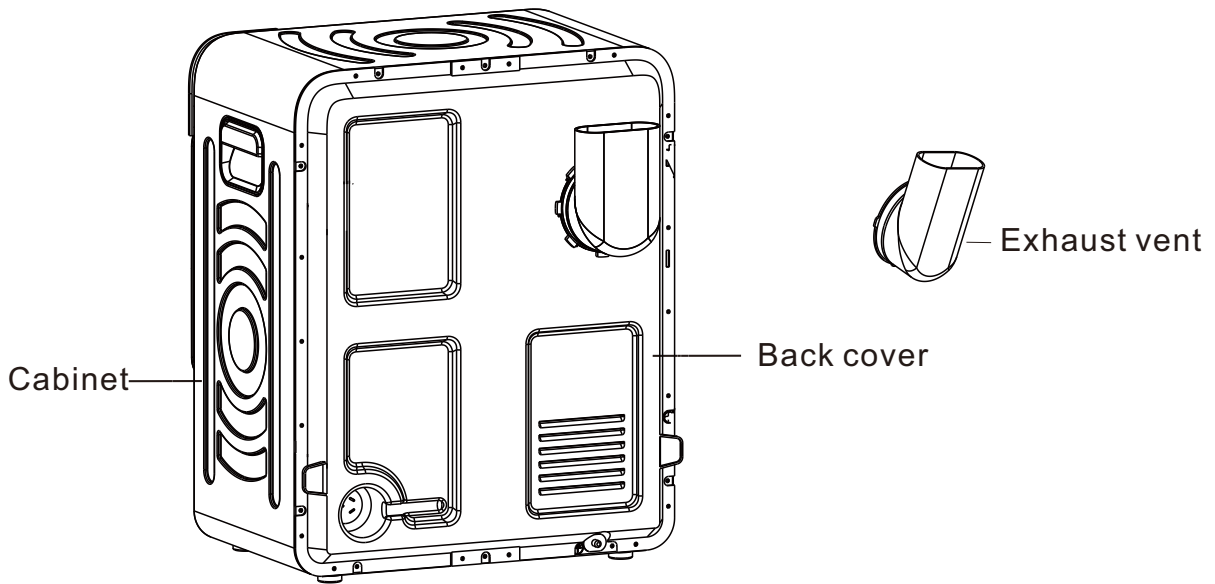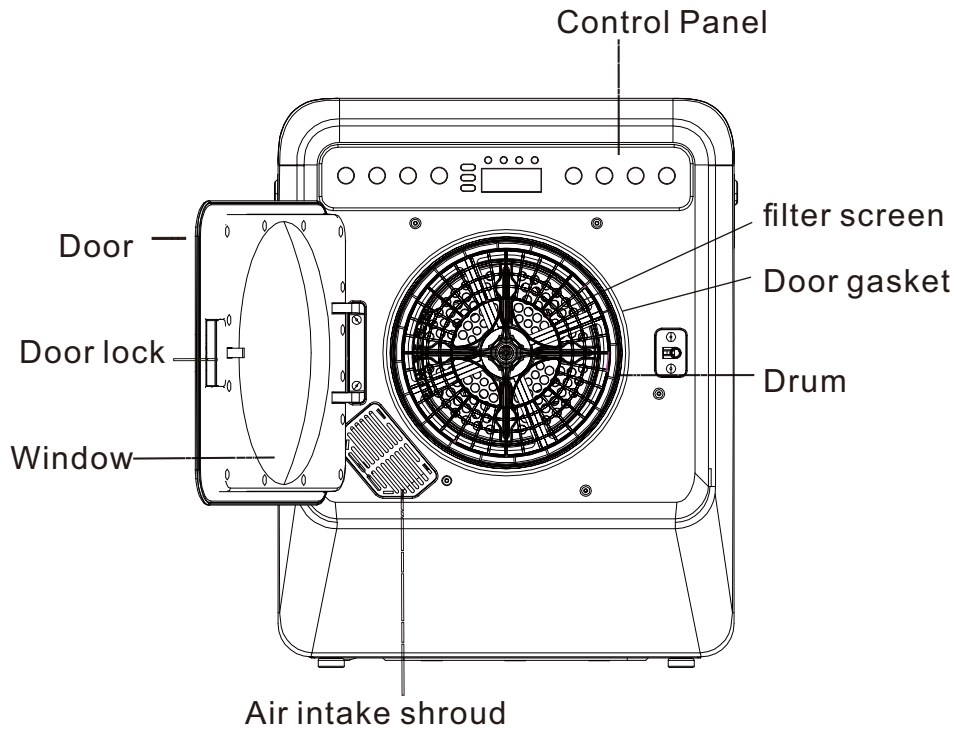


Operation your dryer

Electrical Requirements

 The unit is required to be plugged into a three pin socket that is reliably grounded. The power supply must be 240V. Plug the power cord into the socket.

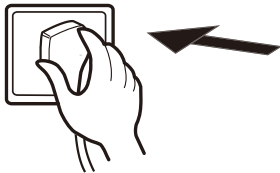

 
Check the items to be dried do not have combustible materials or foreign objects within them ie: lighters, hair pins, coins.

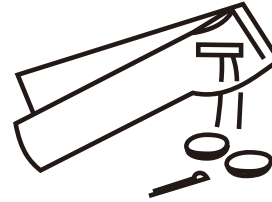

Loading the dryer

It is recommended that items are placed into the dryer one at a time. This ensures they are not tangled which results in uneven drying. When closing the dryer door prior to starting the unit ensure that items are not jammed in the door.

 - Turn items with zippers inside out and fasten buckles.

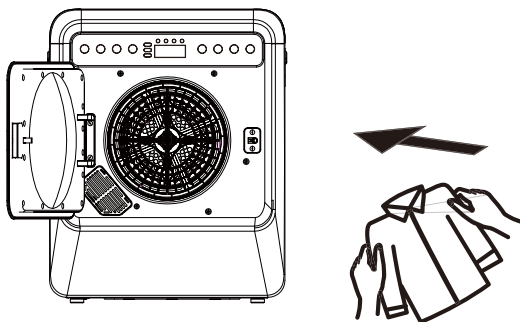

- Dryer heat may permanently set stains, ensure you check prior to drying that stains are removed.
- Separate dark and light colored items as you would do when washing.
- For best results load the dryer with similar fabrics. Place small delicate items in a mesh bag and do not overload the dryer.
- The maximum mass is 4.0 kilogrammes of dry textile material for the dryer and do not overload. The tumble dryer is intended only for drying textile material washed in water.

Tips before drying

Prior to loading the dryer check that the items do not have the following the symbols anywhere on them. If they do, do not tumble dry these items.



Dry flat



Dry in the shade



Do not tumble dry

 


Hang to dry



Drip dry

Control Panel Functions

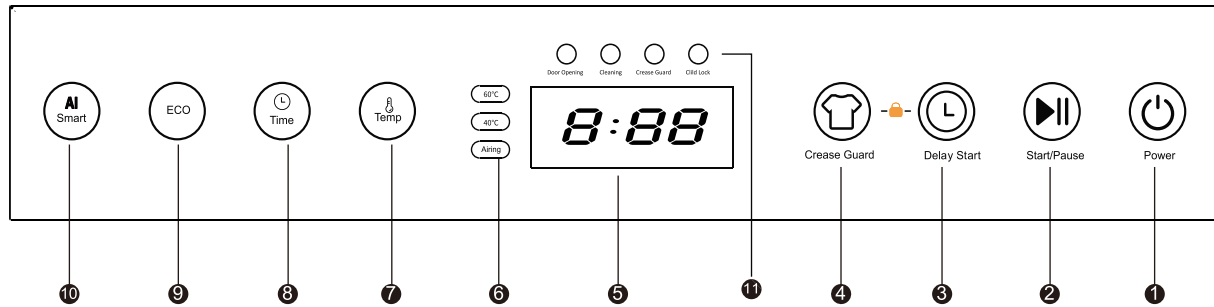


- | | |
|--------------------------------------|---------------------------------|
| 1. power key | 7. temperature selection button |
| 2. start / pause key | 8. timing program button |
| 3. Delay Start | 9. ECO |
| 4. Grease Guard | 10. Smart |
| 5. drying time display window | 11. status indicator |
| 6. drying temperature display window | |

1. Press the "power" button to turn on (off) the power supply;
2. Program settings, users can choose the program according to the clothing material and clothing quantity, click the Power button, time display window shows "Eco", indicating that the program has selected the program. Click on the "ECO" button, and the time window shows "Eco", indicating that the program has selected the ECO program. Click the "timing" button to switch between (1:00, 1:30, 2:00, 0:30).
3. Selection of heating temperature. When using the "timing" program, the heating temperature can be set in the three options of "60", "40" and "airing". After successful selection, the corresponding temperature indicator light of "drying temperature display window" will be lit.
4. Press the "Start/Stop" button, and the dryer will start working after 2 seconds. Pressing this button during operation can stop working. Clothes can be added or reduced in this state, and hot steam will come out carefully when opening the door, so as to avoid scalding. Press the machine again to resume operation and continue to complete the selection process. The "Start/Stop" key is the switch between start and stop of dryer. If you press the "Start/Stop" button directly after turning on the power supply, the dryer will run according to the ECO program.
- 5) Crease Guard, after the selection of the program, or when the program is running, press the "Grease Guard" button, and the "drying time display window" time will increase by 10 minutes, indicating that the Grease Guard removal function has been activated, and in the process of operation, Grease Guard function can be added and cancelled at any time.
- 6) Children's lock function. After the dryer starts and runs, press the "Crease guard"+ "Delay start" button for about 2 seconds. The buzzer sends out a confirmation sound. The "child lock" indicator lights up in the "status indicator" area. At this time, press any key. After the "child lock" indicator lights up, stop flashing and turn on or off. To prevent children from misoperation, press the "Crease Guard"+ "Delay start" button for 2 seconds again, and the child lock will be released.


Program	Max volume of dry clothings	Max dry time	Heat temperature	Clothing type
Smart	2.0-3.0kg	150 Min.	56°C	Jeans, Cotton clothes, Sheet
ECO	1.0-3.0kg	250 Min.	52°C	Cotton clothes, Sheet
2 Hours	2.5kg	130 Min.	60°C, 40°C, Airing	Cotton clothes, Sheet
1 Hour 30 mins	2.0kg	100 Min.	60°C, 40°C, Airing	Cotton clothes, Sheet
1 Hour	1.0kg	70 Min.	60°C, 40°C, Airing	Cotton clothes, Sheet
30 mins	< 1.0kg	40 Min.	60°C, 40°C, Airing	Cotton clothes, Sheet

Operation Precautions

 
Delicate items should be placed into a nylon net bag prior to drying. It is not recommended to dry under wire bras in this unit.

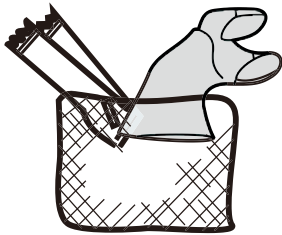

 
Ensure that foreign objects do not find their way into the dryer. All pockets should be emptied, buttons, buckles and zips fastened. This will also help reduce impact noise when the items hit against the turning drum.

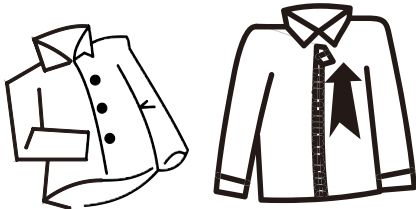

 Do not add items into the dryer whilst it is in operation.

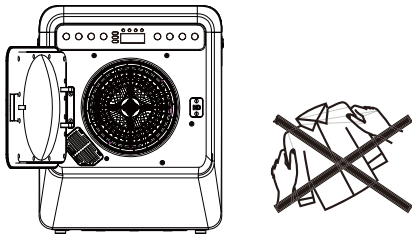

 If drying large items such as a blanket, it is recommended that from time to time you open the dryer door, shake the item, place the item back in the dryer and close the door. This will ensure even drying.

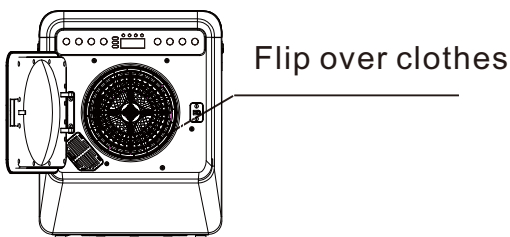

Remove all objects from pockets such as lighters and matches

If any of the below labels are on an items that you are going to place in the dryer, stop, do not, as the dryer may damage the item.



Dry flat



Dry in the shade



Do not tumble dry

 


Hang to dry




Drip dry

Electrical Requirements: A three pin socket must be used.(reliably grounded)

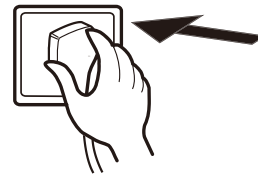

 To ensure you get the most out of the Anti-wrinkle function do not overload the dryer and remove the dried items from the dryer immediately and hang on coat hangers. Iron the items if desired.

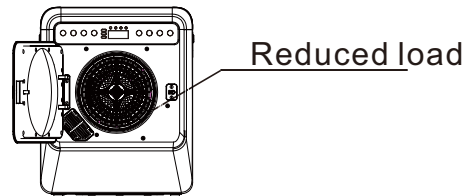

To minimize the risk of fire in a tumble dryer, the following should be observed:

- Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in a tumble dryer.

Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.

Ensure that the fan is switched off from the supply mains before removing the guard.

If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent -this will reduce, but not eliminate, the hazard.

The 'cool down' cycle of tumble dryers should be used to reduce the temperature of the items. They should not be removed from the tumble dryer or piled or stacked while hot.

Items that have been previously cleaned in, washed in, soaked in or spotted with petrol/gasoline, dry-cleaning solvents or other flammable or explosive substances should not be placed in a tumble dryer.

Highly flammable substances commonly used in domestic environments include acetone, denatured alcohol, petrol/gasoline, kerosene, spot removers(some brands), turpentine, waxes and wax removers.

- Items containing foam rubber (also known as latex foam) or similarly textured rubber, like materials should not be dried in a tumble dryer on a heat setting.

Foam rubber materials can, when heated, produce fire by spontaneous combustion.

- Fabric softeners or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.
- Undergarments that contain metal reinforcements should not be placed in a tumble dryer.

Damage to the tumble dryer can result if metal reinforcements come loose during drying. When available a drying rack could be used for such items.

- Plastic articles such as shower caps or babies' waterproof napkin covers should not be placed in a tumble dryer.

- Rubber-backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber-coated tennis shoes should not be placed in a tumble dryer.

Operating guide

- In standby state, confirm the normal state is ok.
- Open the door and put clothes in drum, the clothes weight should not exceed rated drying capacity for appropriate.
- Close the door and check if these is clothes to be pinned by door.
- Select program, according to actual need to choose the drying time / program.
- Push start/pause button on the door and dryer start working.
- Dryer stop work after one or two minutes, take out the dried clothes.

Maintenance

Cleaning the Lint Filter

Please unplug the power cord prior to any cleaning. The lint filter must be in place whenever drying. It must be cleaned before each use.

1. Removing the filters:

Remove by pulling outwards with fingers, inserted into the four holes around the exhaust vent shroud. The filter is in 3 parts: Exhaust vent shroud, lint filter and exhaust filter (as shown in figure 1)

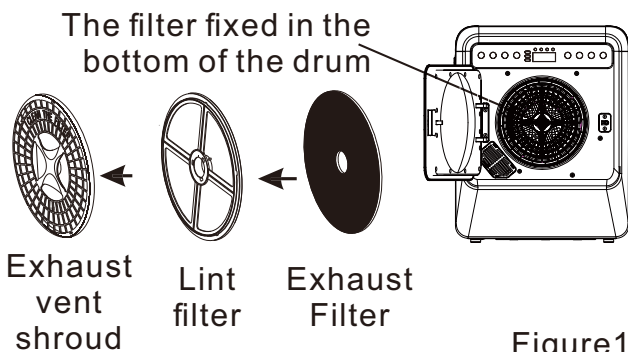 


Figure 1

2. Clean the filter:

Separate "exhaust vent shroud", "lint filter" and "exhaust filter". Clean the lint on the lint filter and exhaust filter with a soft brush or vacuum cleaner. Do not damage the filters (as shown in figure 2)

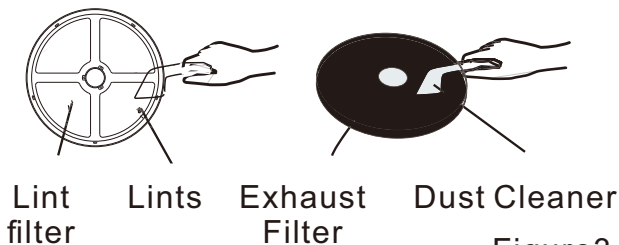 


Figure 3

3. Reinstall the filter:

After cleaning, assemble in the sequence of "exhaust filter - lint filter- exhaust vent shroud", align the recesses in the center with the projection in the center of the drum. Make sure that it is firmly inserted (as shown in figure 3).

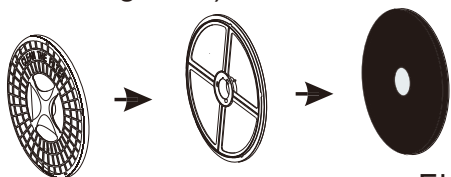 


Figure 3

Note: The filter fixed in the bottom of the drum should also be cleaned with a soft brush.

Cleaning the air intake filter:

 
The filter should be cleaned once a month. Remove by pulling outwards holding the upper and lower ends of the air intake shroud. Remove the filter inside the shroud and clean it with a soft brush. Reassemble and install as before.



Slightly push upwards with your thumb until the latch hook disconnects, then remove.

Cleaning the interior and exterior of the dryer:

- Do not wash directly with water.
- Do not use thinner, gasoline or alcohol.
- Do not use any type of spray cleaner when cleaning the interior. If the dryer drum becomes stained, clean the drum with a damp cloth.
- Remove any residue before drying the next load.
- Clean the cabinet with mild soap and water. Do not use harsh or abrasive cleaners, this could damage the dryer.

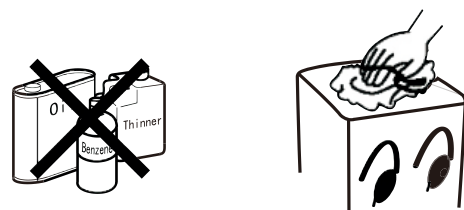

WARNING: Regularly clean the lint trap



READ THE INSTRUCTIONS

CAUTION! HOT SURFACE

Do not touch the intake during the drying cycle due to high temperatures

Troubleshooting

Review the following pages before calling for service

Problem	Possible Cause	What to do
Program does not work	<ul style="list-style-type: none"> • Is the power cord inserted firmly? 	<ul style="list-style-type: none"> • Insert the power cord firmly
Drum does not turn	<ul style="list-style-type: none"> • Is the door closed? • Is the power cord inserted? • Does the receptacle have power? 	<ul style="list-style-type: none"> • Close the door. • Insert the power cord firmly. • Check the power cord receptacle.
Hot air is not blowing out	<ul style="list-style-type: none"> • Is the Program in correctly set on cold air? 	<ul style="list-style-type: none"> • Set the Program correctly.
The laundry is not thoroughly dried	<ul style="list-style-type: none"> • Are the front and back filters clogged? • Is there too much laundry in the dryer? • Have items been added whilst the dryer is in operation? • Has the laundry become twisted whilst drying? • Has the dryer been placed in a small and badly ventilated area? 	<ul style="list-style-type: none"> • Clean the filter. • Reduce the amount in the dryer. • Re-dry the items again. • Untwist the items and re-dry. • Place the dryer in a well-ventilated area.
Dryer does not start	<ul style="list-style-type: none"> • Is there a power failure? • Is the power cord inserted firmly? • Is the door closed? • Is the Program in the OFF position? 	<ul style="list-style-type: none"> • Try again when there is power • Insert the power cord firmly • Close the door • Set the dry program

Specifications

Model:	GDZ40-418E	Drying Capacity:	3.0kg
Voltage/Frequency:	220-240V~50/60Hz	Rated Input:	1000W
Net weight:	20kg	Dimensions (mm):	560 x480x660

NOTE: Consistent with our continuing product development policy, improvements may have been made which render the contents of this package slightly different to that shown.

Off mode power	P_o	0.50	W
Standby mode power	P_{SB}	0.60	W
Power management function	[N/A]		
Time to enter automatically off mode	T_o	[N/A]	Min
Time to enter automatically standby mode	T_{SB}	[N/A]	Min

UK

If you have any questions, please contact our customer care center.
Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS:

MH STAR UK Ltd
1 Northampton Cross Logistics Park
Northampton Cross Road
Northampton
NN4 9FH
MADE IN CHINA

