




IN260300193V01\_UK

**820-355V70**



**TOASTER**

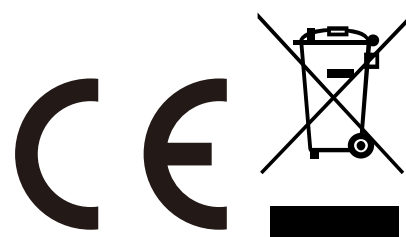

**IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

**TOASTER****SAFETY INSTRUCTIONS**

- Please read these Operating instructions through carefully before connecting your device to the mains, in order to avoid damage due to incorrect use. Please pay particular attention to the safety information. If you pass the device on to a third party, these Operating instructions must also be handed over.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
- The appliance must not be immersed.



- **CAUTION** : Hot surfaces. Surfaces are liable to get hot during use.
- Regarding the instructions for details on how to clean the surfaces in contact with food, thanks to refer to the section "Cleaning and Maintenance".
- The appliance must not be used with an external timer or separate remote control system.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The appliance may be used only for its intended purpose. No responsibility can be taken for any possible damage caused through incorrect use or improper handling.
- Before connecting the appliance to the power source, check that the current and power match those given on the rating plate.
- Do not put the appliance or the plug in water or any other liquid. However should the appliance accidentally fall into water, unplug the appliance immediately and have it checked by a qualified person before using it again. Non-observance could cause a fatal electric shock!

- Never attempt to open the housing yourself.
- Do not place any kind of object into the inside of the housing.
- Do not use the appliance with wet hands, on a damp floor or when the appliance itself is wet.
- Do not touch the plug with wet or damp hands.
- Check the cord and the plug regularly for any possible damage. If the cord or plug is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid a hazard.
- Do not use the appliance if it is dropped or otherwise damaged or if the cord or plug are damaged. In the case of damage, take the appliance to an electrical repair shop for examination and repair if necessary.
- Never attempt to repair the appliance yourself. This could cause an electric shock.
- Do not allow the cord to hang over sharp edges and keep it well away from hot objects and naked flames. Remove the plug from the socket only by holding the plug.
- For extra protection it is possible to fit the electric household installation with a fault current breaker with a rated breaking current of not more than 30mA. Ask your electrician for advice.
- Make sure that there is no danger that the cord or extension cord may inadvertently be pulled or cause anyone to trip when in use.
- If an extension cord is used it must be suited to the power consumption of the appliance, otherwise overheating of the extension cord and/or plug may occur.
- This appliance is not suitable for commercial use nor for use in the open air.
- Never leave the appliance unattended while it is in use.
- Children should be supervised to ensure that they do not play with the appliance. Because they cannot recognize the dangers involved in the incorrect use of electrical appliances.
- Always remove the plug from the socket when the appliance is not in use and each time before it is cleaned.
- Danger! Nominal voltage is still present in the appliance as long as the appliance is connected to the mains socket.
- Switch the appliance off before disconnecting from the mains.
- Never use the cord to carry the appliance.
- Never use the device unsupervised! Switch off the device whenever you are not using it, even if this only for a moment.

## SPECIAL SAFETY INSTRUCTIONS

- **CAUTION:** Danger of burns! Bread can burn. Do not use the toaster near or below curtains or other combustible materials.
- Do not place in the bread slot (7) any oversized baking utensils and bread wrapped in aluminum foil or plastic foil, because of the risk of burning or electrical shock.
- Bring the toast lever in the up position, before pulling out the plug from the socket.

- Burning hazard: Parts of the unit become very hot during operation. Touch only the handles or buttons.
- Let the unit cool down before removing or putting in any parts.
- Do not try to remove the foodstuff from the unit while the unit is still in operation.
- Do not use any accessories not supplied with this unit!
- This unit is suitable only for toasting bread. Do not heat up any other food with this unit.
- Do not ever put in bread with cheese or other spreads in the bread slot (7).

## DESIGN

1. Cancel button
2. Crumb tray
3. Display
4. Level selection button
5. Lever
6. Defrost button



## BEFORE FIRST USE

- Remove all packing material.
- Heat the unit four to five times at the highest setting without bread, in order to burn off residues left during manufacturing process. Ensure proper ventilation while doing this (say, by opening the window).

## OPERATION

### Toasting function:

- Place bread slices in the bread slot.
- Connect the main plug to a suitable socket.
- Push down the toast lever fully, till it latches automatically.
- Select the degree of browning by touch +/- button (1 = light brown, 6 = well done). Default setting is level 4
- The toaster start to work . All the indicator light will be on. the display will show the toasting level you choose and the time count down
- The toaster will stop automatically when the set toasting level is reached. The toast lever jumps up. The bread slices are fully toasted.

### Defrost function:

- Place bread slices in the bread slot.
- Connect the main plug to a suitable socket.

- Push down the toast lever fully, till it latches automatically.
- Touch the Defrost button
- Select the degree of browning by touch +/- button (1 = light brown, 6 = well done). Default setting is level 4
- The toaster start to work . Defrost button will flash. the display will show the toasting level you chosed and the time count down
- The toaster will stop automatically when the set toasting level is reached. The toast lever jumps up. The bread slices are fully toasted.

### Reheat function:

- Place bread slices in the bread slot.
- Connect the main plug to a suitable socket.
- Push down the toast lever fully, till it latches automatically.
- Touch the reheat button
- The toaster start to work . Reheat button will flash. the display will show the time count down
- The toaster will stop automatically when the set toasting level is reached. The toast lever jumps up. The bread slices are fully toasted.

## HOW TO CLEANING THE TOASTER

- Your toaster comes with a removable, slide out crumb tray. This is a quick and convenient way to remove crumbs. Always ensure that the toaster is unplugged and has cooled down before removing and emptying the crumb tray. Clean the crumb tray with a damp cloth and always dry the tray properly before replacing it into the toaster.
- Use a stiff brush to remove any burnt-on crumbs.
- Wipe the outside of the toaster with a damp cloth.
- Do not use a sharp object or abrasive substance to clean the toaster.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.

## TOASTING TIME

| Toast time(s) |         |    |     |     |     |     |     | DEFROST(S) |     |     |     |     |     |     |
|---------------|---------|----|-----|-----|-----|-----|-----|------------|-----|-----|-----|-----|-----|-----|
| cycle         | REHEATS | 1  | 2   | 3   | 4   | 5   | 6   | REHEATS    | 1   | 2   | 3   | 4   | 5   | 6   |
| cycle1        | 35      | 90 | 110 | 130 | 145 | 160 | 180 | 40         | 104 | 127 | 150 | 167 | 184 | 207 |
| cycle2        | 35      | 83 | 95  | 110 | 122 | 132 | 148 | 40         | 95  | 109 | 127 | 140 | 152 | 170 |
| cycle3        | 35      | 80 | 90  | 106 | 118 | 127 | 143 | 40         | 92  | 104 | 122 | 136 | 146 | 164 |
| cycle4        | 35      | 78 | 87  | 103 | 115 | 124 | 140 | 40         | 90  | 102 | 119 | 133 | 143 | 161 |

## TECHNICAL SPECIFICATIONS

Operating voltage: 220-240V~50Hz

Power consumption: 780-930W

|                                          |          |       |     |
|------------------------------------------|----------|-------|-----|
| Off mode power                           | $P_o$    | 0.00  | W   |
| Standby mode power                       | $P_{SB}$ | [N/A] | W   |
| Power management function                | [N/A]    |       |     |
| Time to enter automatically off mode     | $T_o$    | [N/A] | Min |
| Time to enter automatically standby mode | $T_{SB}$ | [N/A] | Min |

## UK

If you have any questions, please contact our customer care center.

Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

### IMPORTER ADDRESS:

MH STAR UK Ltd

1 Northampton Cross Logistics Park

Northampton Cross Road

Northampton

NN4 9FH

MADE IN CHINA

