



IN260400110V01_UK

800-346V70



Espresso Coffee Maker

220V~ 50Hz, 850W, 20Bar



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

SAFETY INSTRUCTIONS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- The appliance must not be immersed.
- **WARNING:** The filling aperture must not be opened during use.
- **WARNING :** Avoid spillage on the connector.
- **WARNING :** Potential injury may be caused from misuse.
- The heating element surface is subject to residual heat after use.
- The coffee-maker must be operated with the decorative door open or the cabinet door open.
- **WARNING:** Do not use the appliance if the surface is cracked.
- Cleaning and user maintenance shall not be made by children without supervision.
- **CAUTION:** To prevent damage to the appliance, do not use aggressive cleaning agents when cleaning. Use a soft cloth and a mild detergent.
- **CAUTION:** Do not use the appliance if the enclosure is damaged or has visible cracks.
- **CAUTION:** Do not operate the kettle on an inclined plane. Do not switch on the kettle if there is no water in the kettle. Do not move the kettle while it is switched on.



- **CAUTION :** Hot surfaces. Surfaces are liable to get hot during use.
- Regarding the instructions for details on how to clean the surfaces in contact with food, please refer to the section "Cleaning and Maintenance".

 
Product introduction

This is a classic deluxe design 15/20 bar espresso coffee maker, with its easy operated and cleaning system, you can enjoy original espresso whenever you want.

Product Feature

1. Classic deluxe appearance
2. Detachable water tank and removable water drip tray
3. Adjustable steam system for convenient frothing
4. Can make two cups of coffee in one time, hot water and coffee by manual control
5. With one touch screen controller display
6. With cup preheating function

Component

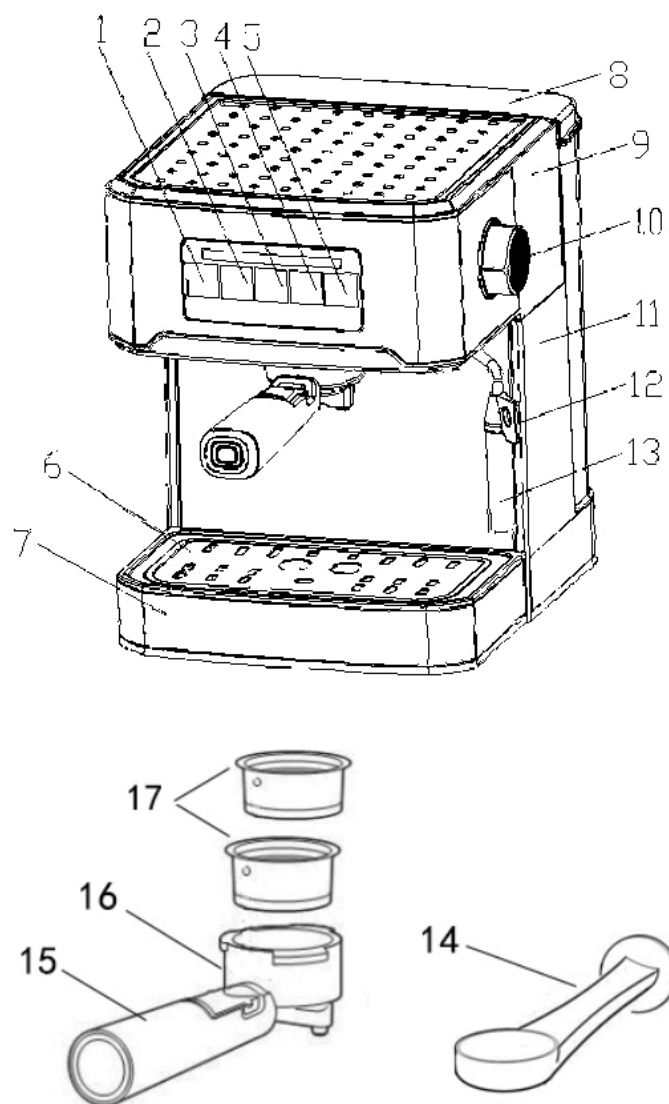

1. Switch(on/off)
2. One cup switch
3. Two cup switch
4. manual control
5. Steam
6. cup mat
7. drip tray
8. Tank cover
9. Tank

10. Steam knob
11. Body
12. Steam tube module
13. Steam protection cover
14. Measuring spoon
15. Funnel handle
16. Funnel
17. Filter

ATTENTION

1. Before using checks that the voltage of wall outlet corresponds to coffee maker rating plate.
2. The appliance must be earthed.
3. Keep the children away during operation
4. Do not immerse appliance or power cord into water or any other liquids.
5. Remove plug from wall outlet before cleaning and when not in use. Allow appliance to cool down completely before taking off, attaching components or before cleaning.
6. Do not place the coffee maker on hot surface or beside fire, avoid to be damaged.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
8. The use of accessory which is not recommended by manufacturer may cause injury to persons or damage to appliance.
9. This appliance for coffee brewing only, please place in a ventilated environment.
10. Place appliance on flat surface or table, do not hang its power cord over the edge of table or counter.
11. Ensure that the power cord does not touch hot surface of appliance.
12. Some parts of appliance are hot when operated, so do not touch with hand directly.
13. Clean and maintain the coffee maker regularly, ensure the coffee quality and machine life span
14. Do not move or shut down the power suddenly during operation
15. Do not operate the appliance without water in the tank
16. Read through this instruction manual before operation
17. Do not immerse the coffee maker and the power cord into water during cleaning
18. For indoor use only.
19. Use the hot water boiling function to clean the odor before the making coffee
20. Design for family use only, do not use it for other activity.
21. Save these instructions booklet for future reference.

 
Preheating

1. Pour water into water tank, the water level should not exceed the "MAX" mark in the tank. Then replace the water tank cover.
2. Connect to power source, turn the ON/OFF button, the light on the screen indicated blue, the pump begins to work and the water will come out once press "Manual control".
3. The indicator lamp begins to twinkle when the coffee maker is preheating, the preheating finished time is about two minutes and the indicator lamps twinkle will be stopped and lighted status.
4. Press one cup button to let the hot water clean coffee filter or coffee cup

Make coffee

Note: The appliance is not equipped with jug, please use yourself jug or coffee cup.

1. Machine is at the same time in the preheating, grinding well a good coffee powder (coffee powder need 1 which can't be too thick nor too thin) packed into the metal strainer mesh and then use pressure pressed powder compaction; At the same time will be on the edge of the funnel coffee powder with a brush or hand wipe clean (if need to make 1 cup, with a cup of the nets, if need to make 2 cups with 2 cups)

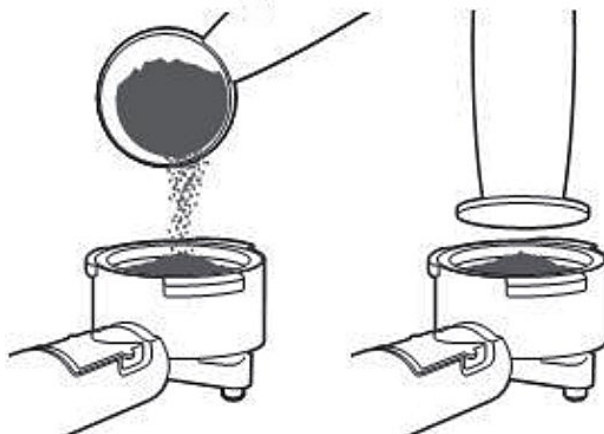

2. Insert the funnel and instructed to mark the lock, then put the coffee cup placed at the bottom of funnel
3. Select 1 cup, coffee begins to flow 1 cup of coffee. (or select 2 cups, then it is out 2 cups of coffee)
4. At the same time, adjust the position of the coffee cup make coffee liquid along the glass into the cup
5. Wait a moment let coffee drip off, coffee finished!

Milk frothing function

1. Press "steam" button, the indicator light turn to red, once heating finished the indicator light turn to always light,.
 2. Pour ice milk into the jug (1/3 full) and put the steam nozzle into the milk (1cm deep), turn the steam control knob slowly in anti-clockwise, steam will come out from the frothing device. (Attention: the steam is adjustable accordingly, remember to release water inside the steam pipe before milk frothing)
 3. Turn off the steam on/off button when the milk reach to 75°C
- (After milk frothing, use wet towel to clean the steam pipe and nozzle, and turn on the steam function again in case the dry milk stuck in the nozzle.)
- Pour the frothed milk into the espresso prepared; now the cappuccino is ready. Sweeten to taste and if desired, sprinkle the froth with a little cocoa powder.

Hot water function

1. Press the “steamer” button, when the appliance start heating, indicator light on blue and flashing. When the light turns to blue always and heating finished., twist the steam control knob until the hot water come out from the nozzle.
2. After hot water boiling, twist the steam control knob to 'OFF' position, and press the power button to turn off the machine.

CLEAN AND MAINTENANCE


1. Cut off power source and let the coffee maker cool down completely before cleaning.
2. Clean housing of coffee maker with moisture-proof sponge often and clean water tank, drip tray and removable shelf regularly then dry them. Note: Do not clean with alcohol or solvent cleanser. Never immerse the housing in water for cleaning.
3. Detach the metal funnel through turn it anticlockwise, get rid of coffee residue inside, then you can clean it with cleanser, but at last you must rinse with clear water.
4. Clean all the attachments in the water and dry thoroughly.

TROUBLE SHOOTING

Symptom	Cause	Corrections
No water/no steam	1.Is there water inside it? or Is water tank located well ? 2.The coffee maker is no water in advance 3.Machine preheating is unfinished	Will be adding water into the water tank, Switch on the power switch and coffee switch.
No lipa	Coffee powder is too thick/not flatten	Change the coffee powder, with pressure pressed powder coffee powder.
No steam	The steam hole was blocked.	1.Use a small wire to poke the steam holes. 2.Use the hot water function to clean the nozzle after every milk frothing functio
Coffee more or less	Coffee powder loading is too much or less	1 cup 1 spoon with flatten according to the standard amount of filling, coffee powder can't be too thick or too thin, too thick coffee powder can not be complete extraction, too fine affect the quantity of coffee.

The steam cannot froth.	Is it whole milk ?	Use whole milk.
	The steam ready indicator is not illuminated, then begins to frothing milk.	Only after the steam ready indicator is illuminated, the steam can be used to froth.

 Correct Disposal of this product

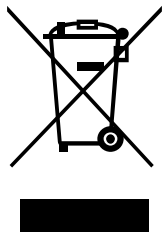

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Off mode power	P_o	0.367	W
Standby mode power	P_{SB}	[N/A]	W
Power management function	[N/A]		
Time to enter automatically off mode	T_o	[N/A]	Min
Time to enter automatically standby mode	T_{SB}	[N/A]	Min

UK

If you have any questions, please contact our customer care center.

Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS:

MH STAR UK Ltd
1 Northampton Cross Logistics Park
Northampton Cross Road
Northampton
NN4 9FH
MADE IN CHINA

