 


AIYAPLAY

IN260600064V01_UK_370-515V70

Children Motorcycle

BATTERY-POWERED RIDE-ON

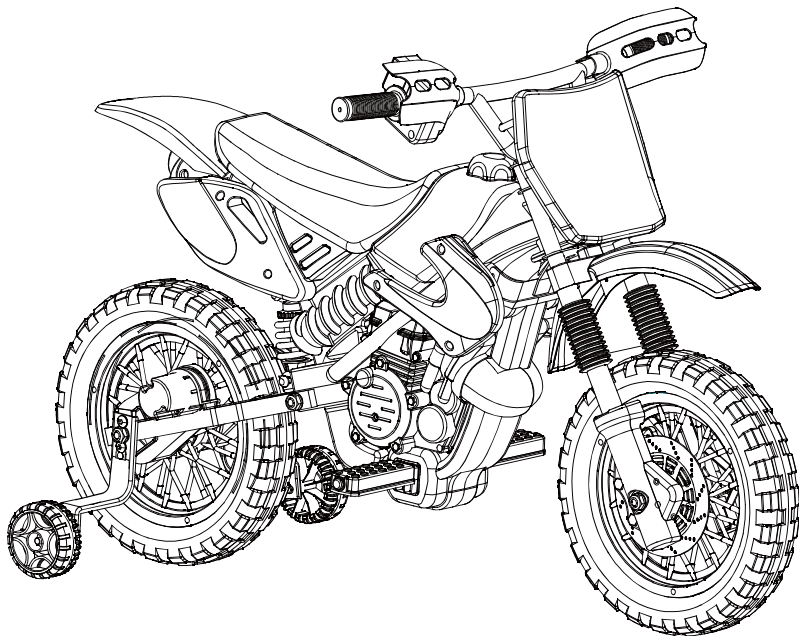

WARNING!

Must be assembled by adults.



OWNERS MANUAL

with Assembly Instructions

Read and understand this entire manual before using!

Please keep this manual for future reference as it contains important information. Before first time use, charge the battery for at least 4-6 hours, but no more than 10 hours.

On the purchase of your new Ride-On.

This ride-on car will provide your child with many miles of riding of enjoyment. To help assure you and your rider a safe ride we ask you to please read this manual carefully, and keep it for future reference.

Follow the recommendations in this manual, they are designed to improve the safety and operation of your ride-on car and its rider.

Specification

Battery	12V4.5AH *1
Charger	12V500mA
input	Depend on local voltage
Rear motor	390-13000 *2

Suitable age:	1-5 Years
Charge time:	8 - 12 hours
Load capacity:	25 kg
Size of car:	113 * 57 * 64 CM
Speed:	3-5 km/h
Average battery life:	Approximately 300 times

 
 WARNING!

- Must be assembled by adults.
- Always remove protective material and poly bags and dispose before assembly.
- Protective equipment should be worn. Always wear shoes and sit in the seat when operating the vehicle.
- Only drive on level ground. Never use on the lawn.
- Never leave a child unattended.
- Keep your hands, hair, and clothes away from moving parts.
- Never leave child unattended. Direct adult supervision is required. Always keep child in view when child is in vehicle.
- To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water, always wear shoes, and never allow more than 1 rider.
- Never use in unsafe conditions such as snow, rain, loose dirt, mud, sand, or gravel, otherwise may result in an unexpected accident such as tipping over, and could damage the electrical system or battery
- Not to be used in traffic.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- This toy is unsuitable for children under 12 months due to its maximum speed; Maximum user weight is 25kg.
- This toy has no brake.


 BATTERY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

HINT: Some parts shown are assembled on both sides of vehicle.

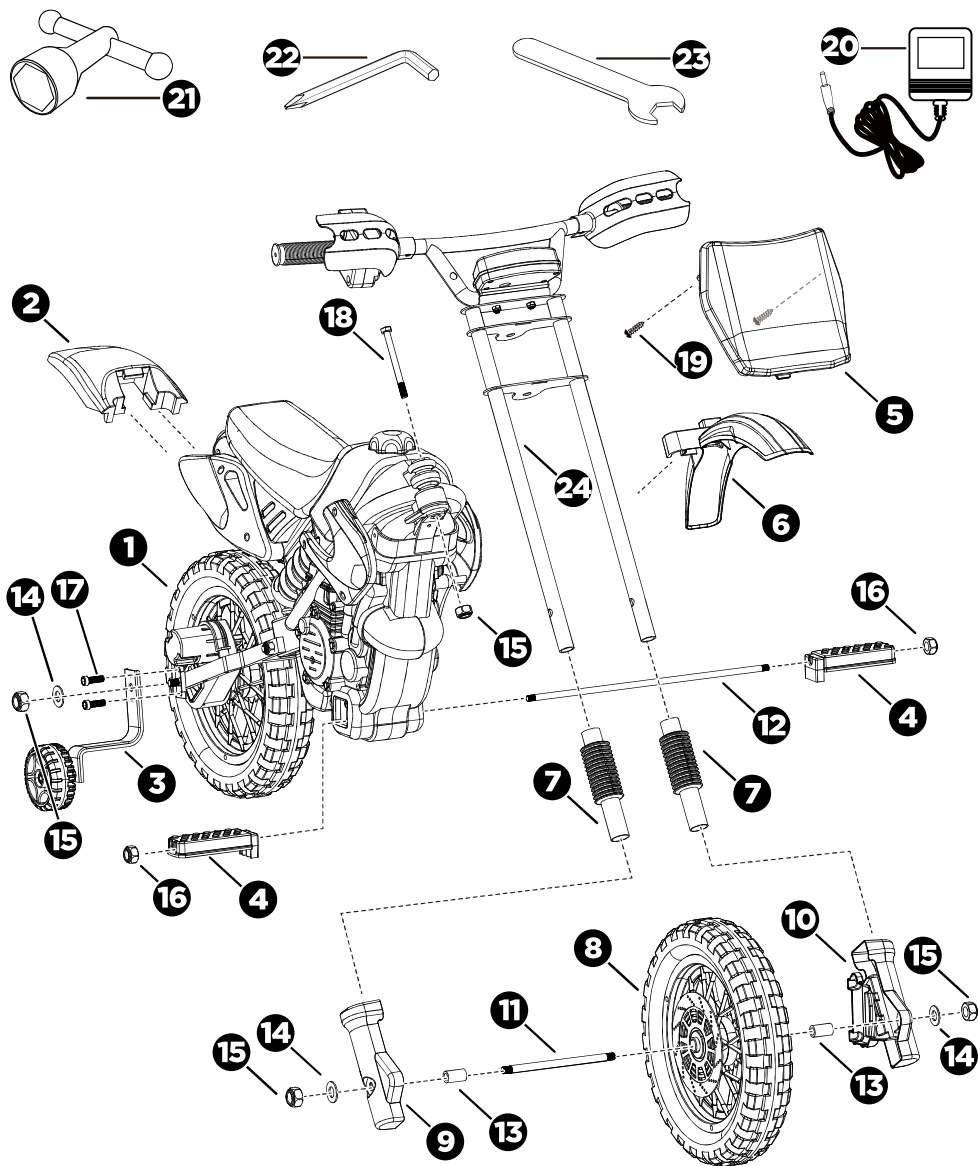

1 Vehicle body

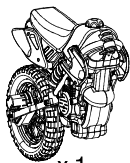 


x 1

2 Rear fender



x 1

 3 Side wheel

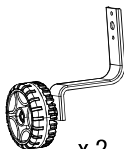

x 2

4 Foot pedal



 
x 2

5 Face guard




x 1

6 Front fender (Pre-assembled)

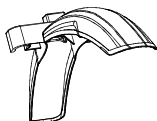

x 1

 7 Shock absorber (Pre-assembled)




x 2

8 Front wheel



x 1

 9 Wheel trim R (Pre-assembled)



x 1

10 Wheel trim L (Pre-assembled)



 
x 1

11 Front axle (Pre-assembled)




x 1

12 Foot pedal column

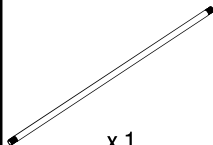

x 1

 13 Bushing (Pre-assembled)



x 2

14 M10 washer (Pre-assembled)



x 4

15 M10 lock nut (Pre-assembled)



x 5

16 M8 lock nut (Pre-assembled)



x 2

17 M8 bolt (Pre-assembled)



x 4

18 M10x95 bolt (Pre-assembled)



 
x 1

19 #4x12 screw (Pre-assembled)




x 2

20 Charger

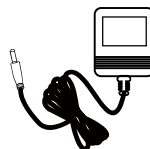

x 1

 21 M10 socket wrench




x 2

22 Hex wrench (Pre-assembled)




x 1

 23 M8 spanner (Pre-assembled)



x 2

 24 Handle bar

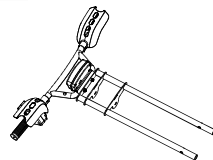


x 1


Assembly tools not included:
Screwdriver




 Be sure to leave the rear axle on the body, as it will be more difficult to put it back on if you accidentally remove it.

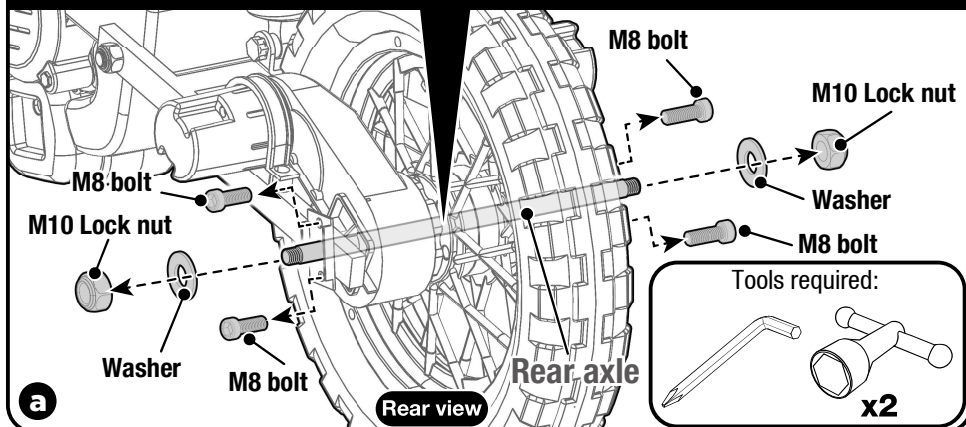


- Use a M6 hex wrench to remove the M8 bolts *2 on each side of the body. Use two wrenches to remove cap nut *1 and washers *1 on each side of the rear axle. **But leave the rear axle on the body.**
- Fit a side wheel to each side of the rear axle.
- Slide a M10 washer on each side of the rear axle
- Use two M10 socket wrenches to retighten the M10 lock nut to each end of the rear axle.
- Tighten two M6 bolts on each side wheel with a M6 hex wrench as shown.


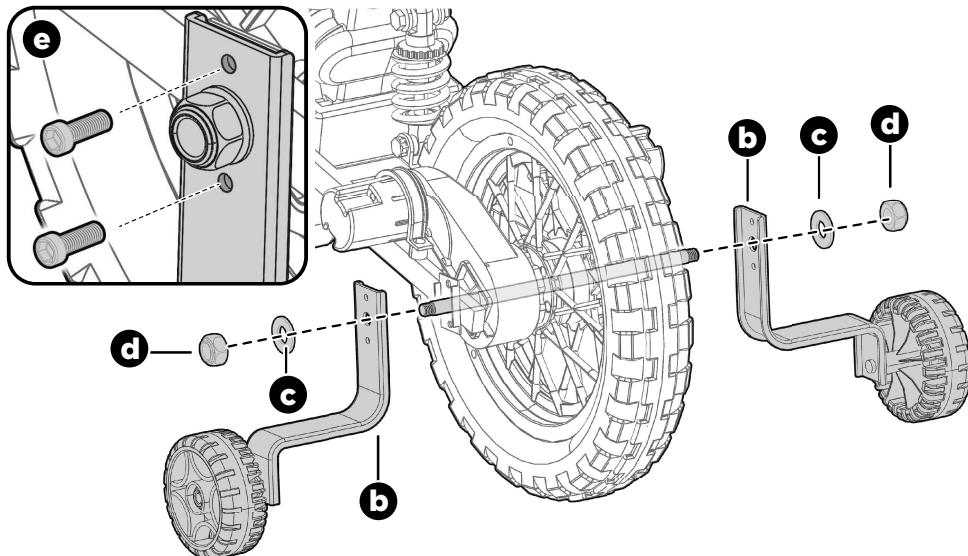 


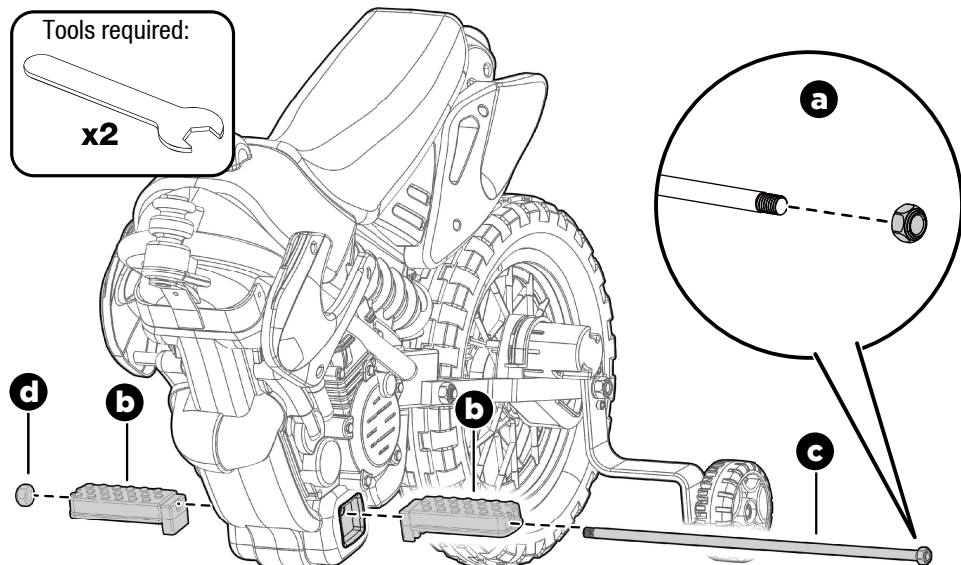 

 - a. Tighten a M8 lock nut to the end of the foot pedal column with a M8 spanner.
- b. Fit a foot pedal to each side of the body as shown.
- c. Pass the foot pedal column through the holes on the foot pedal on one side, the holes on the body, and the holes on foot pedal on the other side.
- d. Tighten a M8 lock nut to the end of the foot pedal column with two M8 spanner.

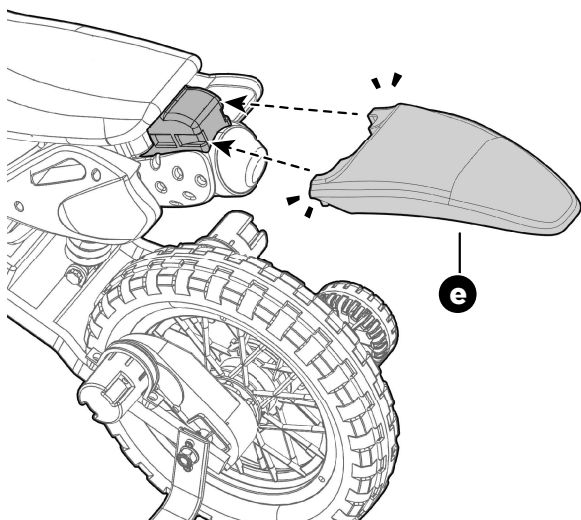


  - e. fit the rear fender to the vehicle body. Push until you hear it “click” into place.

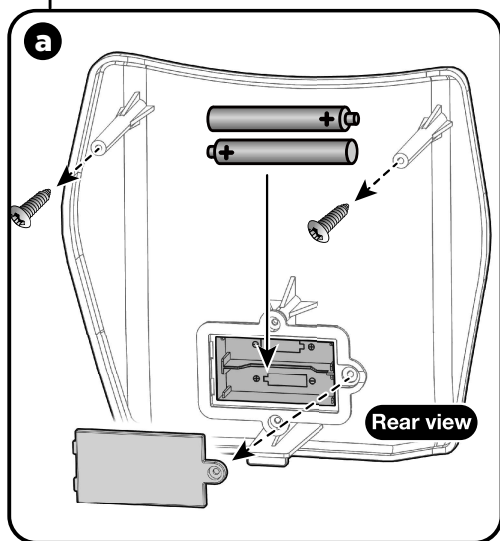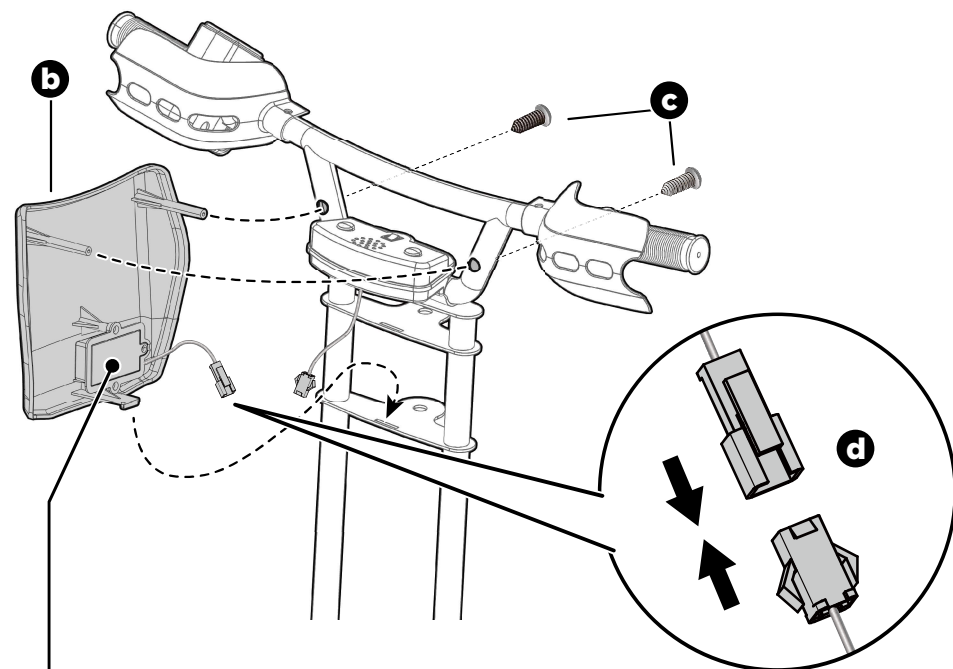


Refer to the Battery Information on the page 2.

 - a. Use a screwdriver to remove the battery cover on the back of the face guard. Insert 2x1.5 AA batteries in their correct polarities. Place the battery cover back. And remove the two #4x12 screws from the face guard.
- b&c. Fit the tab on the face guard to the slot on the front fork. Insert two #4x12 screws and tighten with a screwdriver.
- d. Plug the connector on the face guard into the connector on the dash panel, push firmly.


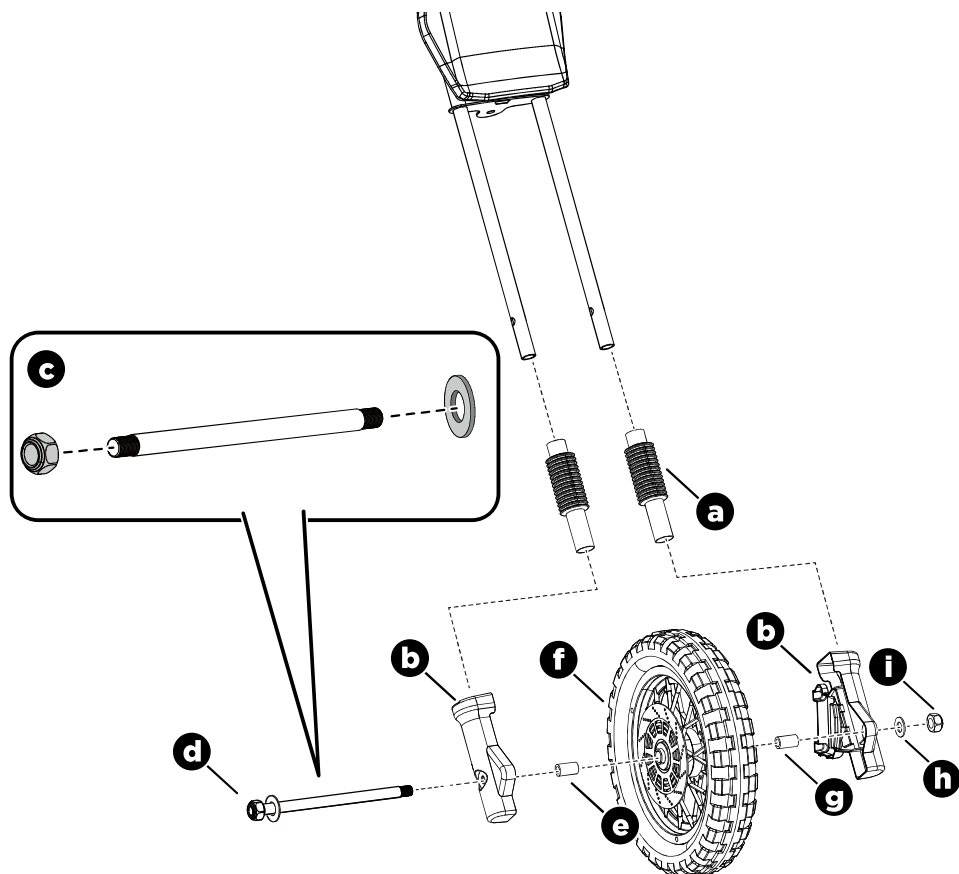


Remove the front axle, M10 lock nut*2 and M10 washers*2 from the front fork.

 
- a. Fit two shock absorbers (**pre-assembled**) to the front fork.
- b. Fit the brake trim R (**pre-assembled**) and brake trim L (**pre-assembled**) to the front fork.
- c. Tighten a M10 lock nut to the end of the front axle, slide a M10 washer to the other side of the front axle, and push it to the end.
- d&e. Pass the front axle through the hole on one side of the front fork, then through the hole on the bushing.
- f. Pushing the front axle through the hole in the center of the front wheel.
- g. Slide another bushing onto the front axle. Continue pushing the front axle through the holes on the other side of the fork.
- h. Slide a M10 washer to the front axle.
- i. Use a M10 socket wrench to tighten the lock nut into the front axle. Tip: Use two socket wrenches to tighten the lock nuts on both sides of the front axle at the same time, but do not overtighten them, to ensure the front wheel can rotate freely.

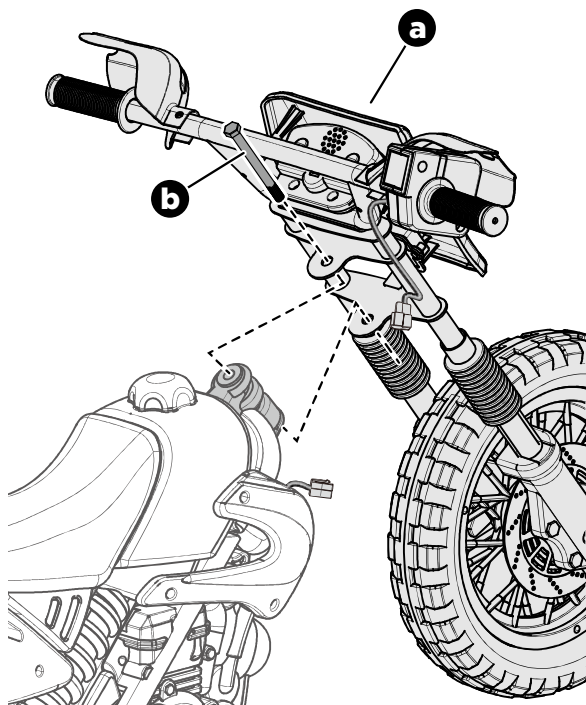


  - a. Fit the handle bar assembly to the body.
- b. Insert the M10x95 bolt through the holes on the front fork, the holes on the body, and out through the hole on the bottom of the front fork.

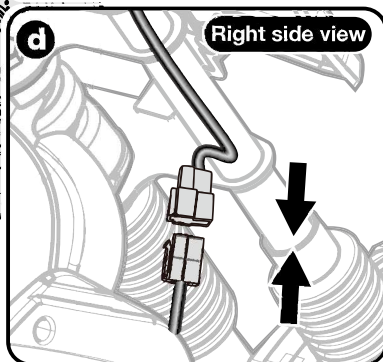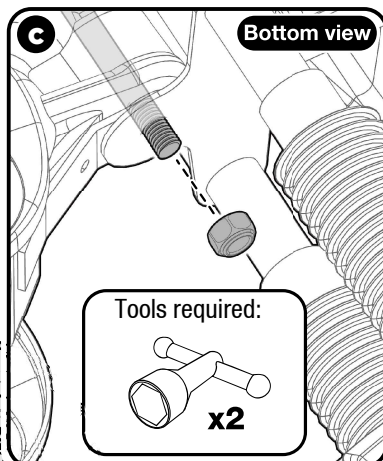

  - c. Tighten a M10 lock nut to the end of the bolt from the bottom side with two M10 socket wrenches.
- d. Plug the connector on the handle bar into the connector on the body, push firmly.

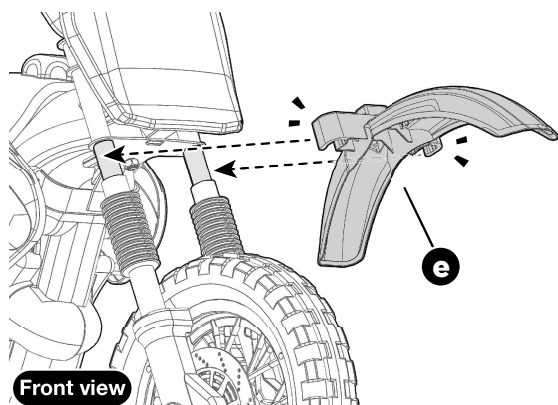

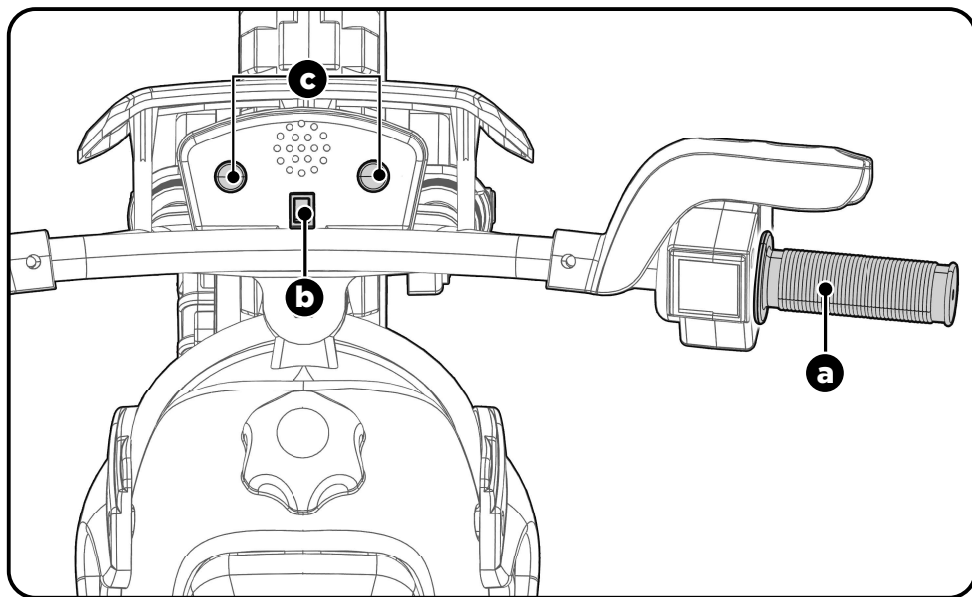

A. Throttle grip:

- Twist the throttle grip, the product moves forward.
- Release the throttle grip, slow down the product until it stops.

B. Player on/off switch

 
 
C. Engine / horn sound:

Press for sound playing. Make sure the player is turned on (Switch B).

⚠ WARNING!

- **ONLY an adult is allowed charge and recharge the battery!**
- **This product with Charging Protection: when charging, all functions will be cut off.**

- Turn off the product when charging.
- Before the first use, you should charge the battery for 4-6 hours. Do not recharge the battery for more than 10 hours to avoid overheating the charger.
- When the vehicle begins to run slowly, recharge the battery.
- After each use or once a month minimum recharge time as 8 to 12 hours, less than 20 hours at most.
- Use the only rechargeable battery and charger supplied with your vehicle. NEVER substitute the battery or the charger with another brand. Using another battery or charger may cause a fire or explosion.
- Do not use the battery or charger for any other product.
- When the product is stationary, the power indicator will tell you how much power is remaining in the battery. If only one indicator light remains, please recharge the battery.

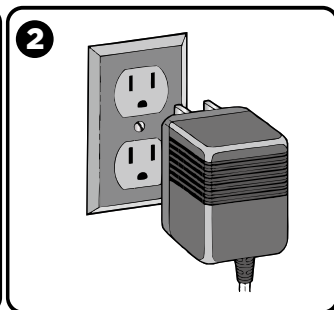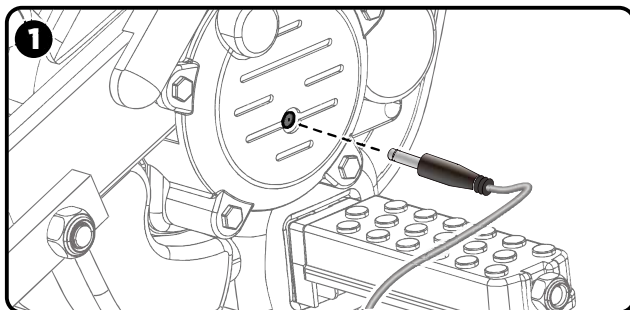

1. Plug the charger port into the input socket (the socket is above the right foot pedal).
2. Plug the charger plug into a wall outlet. The battery will begin charging.

BATTERY CHARGING WARNINGS

General Safety Warnings

- ⚠ "Read all instructions before using this appliance"
- ⚠ "This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved"
- ⚠ "Children shall not play with the appliance"
- ⚠ "Cleaning and user maintenance shall not be made by children without supervision"

Electrical Safety Warnings

- ⚠ "If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard"
- ⚠ "Do not use outdoors"
- ⚠ "Do not immerse in water or other liquids"
- ⚠ "Disconnect from supply when not in use"

Charger-Specific Warnings

- ⚠ "Use only with batteries specified by the manufacturer"
- ⚠ "Ensure correct polarity when connecting batteries"
- ⚠ "Do not charge damaged or leaking batteries"
- ⚠ "Remove batteries if appliance is not to be used for extended periods"
- ⚠ "Do not short-circuit the output terminals"

Problem	Possible Cause	Solution
Vehicle does not run	Battery low on power	Recharge battery.
	Thermal fuse has tripped	Reset fuse, see <Fuse>
	Battery connector or wires are loose	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor contact your distributor please.
	Battery is dead	Replace battery, contact your distributor please.
	Electrical system is damaged	Contact your distributor please.
	Motor is damaged	Contact your distributor please.
Vehicle does not run very long	Battery is under charged	Check that the battery connectors are firmly plugged into each other when recharging
	Battery is old	Replace battery, contact your distributor please.
Vehicle runs sluggishly	Battery low on power	Recharge battery, contact your distributor please.
	Battery is old	Replace battery, contact your distributor please.
	Vehicle is overload	Reduce weight on vehicle.
	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions ,see <Safety>.
Vehicle needs a push to go forward	Poor contact of wires or Connectors	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, contact your distributor please.
	“Dead Spot” on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. Contact your distributor please.
Difficult shifting from forward to reverse or vice-versa	Attempting to shift while the vehicle is motion	Completely stop the vehicle and shift, see <Use Your New Vehicle>
Loud grinding or clicking noises coming from motor or gear box	Motor or gears are damaged	Contact your distributor please.
Battery will not recharge	Battery connector or adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger not plugged in	Check that the battery charger is plugged into a working wall outlet.
	Charger is not working	Contact your distributor please.
Charger feels warm when recharging	This is normal and not a cause for concern	

Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem **Contact your distributor please.**

- It is parents' responsibility to check main parts of the toy before using, must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be used until that damage had been properly removed.
- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle Raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage the moving parts, motors or the electric system.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

Battery Disposal



The battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for one to three years.

Important! Recycle the dead battery responsibly. The battery contains lead acid (electrolyte) and must be disposed of properly and legally. It is illegal in most areas to incinerate lead acid batteries or dispose of them in landfills. Take it to a federal or state-approved lead acid battery recycler, such as local automotive battery retailer.

Do not throw the battery away with your regular household waste!

The battery features with a reset fuse that will automatically trip and cut all power to the vehicle if the motor, electric system or battery is overloaded. The fuse will reset and power will be restored after the unit is turned OFF for 20 seconds and then turned ON again. If the thermal fuse trips repeatedly during normal use, the vehicle may need repair. **Contact your distributor please.**

To avoid losing power, follow these guidelines:

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquids to come in contact with the battery or other electric components.
- Do not tamper with the electric system. Doing so may create a short, causing the fuse to trip.



RISK OF FIRE. Do not bypass.

If you have any questions, please contact our customer care centre.

Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS:

MH STAR UK Ltd

1 Northampton Cross Logistics Park

Northampton Cross Road

Northampton

NN4 9FH

MADE IN CHINA

Our products are suitable for ASTM F963; GB6675; EN71 and EN62115 standard

Made in China