


AIYAPLAY

IN260600072V01_UK_370-517V70

CHILDREN'S ELECTRONIC TOY MOTORCYCLE

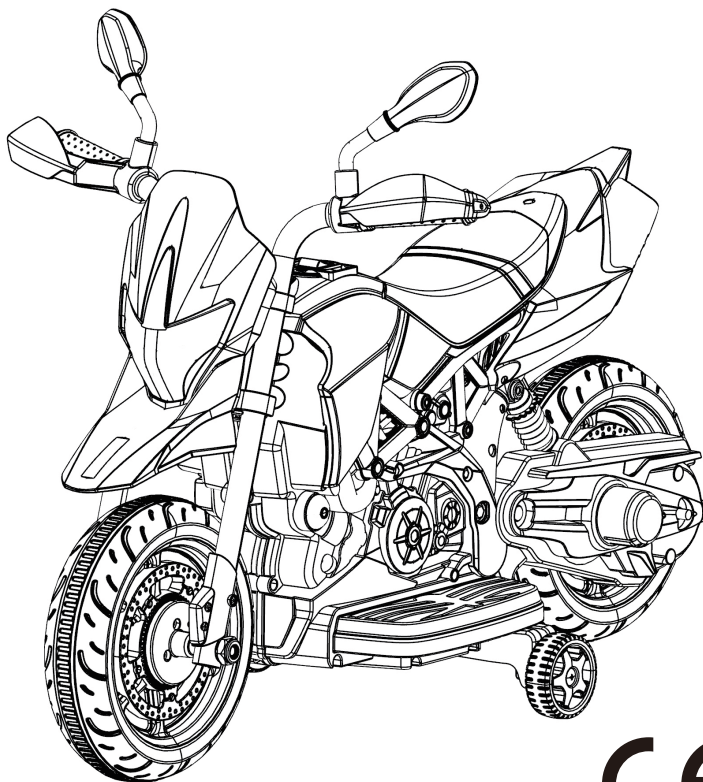

Styles and colo(u)rs may vary.
Made in China.



Read and understand this entire manual before using!

Please keep this manual for future reference as it contains important information. Before first time use, charge the battery for at least 4-6 hours, but no more than 10 hours.

OWNERS MANUAL

with Assembly Instructions

ABOUT THIS MANUAL: This Manual was written to help you and your child get the most performance, comfort, enjoyment and safety when riding your new electric ride-on toy. It is important for you to understand your new electric ride-on toy. By reading this manual before you let your child go out on his/her first ride, you will know how to get the most from your new electric ride-on toy. It is also important that you or your child's first ride be in a controlled environment, away from cars, obstacles, and other riders.

SPECIFICATIONS:

Battery:	6V4.5 AH
Charger:	input: depend on local voltage output: DC6V500mA
Suitable age:	18 months+
Load Capacity:	Under 20kg
Speed:	2-3 km/h
Size of car:	82.5 * 44 * 56 CM
Power way:	Charging type
Charge time:	8-12 hours
Average battery life:	300 charges
Driving motor:	RS380-6V-13000 *1

**WARNING!**

- Must be assembled by adults.
- Always remove protective material and poly bags and dispose before assembly.
- Protective equipment should be worn. Always wear shoes and sit in the seat when operating the vehicle.
- Only drive on level ground. Never use on the lawn.
- Never leave a child unattended.
- Keep your hands, hair, and clothes away from moving parts.
- Never leave child unattended. Direct adult supervision is required. Always keep child in view when child is in vehicle.
- To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water, always wear shoes, and never allow more than 1 rider.
- Never use in unsafe conditions such as snow, rain, loose dirt, mud, sand, or gravel, otherwise may result in an unexpected accident such as tipping over, and could damage the electrical system or battery
- Not to be used in traffic.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- This toy is unsuitable for children under 18 months due to its maximum speed; Maximum user weight is 20kg.
- This toy has no brake.

**BATTERY INFORMATION**


- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.


PART NO.	PART NAME	Q'ty (pcs)	REMARKS
1	Vehicle body	1	
2	Seat	1	
3	Side wheel	1	
4	Ø4x14 screw	23	
5	M8 Socket wrench	1	
6	M10 Socket wrench	2	
7	Ø10 lock nut	2	Placed on the front axle
8	Ø8 lock nut	1	Placed on front fork
9	M8x105 bolt	1	Placed on front fork
10	Ø10 washer	2	Placed on the front axle
11	Front axle	1	
12	Front fork	1	
13	Faceguard	1	
14	Side mirror	2	Left and right
15	Mirror back	2	
16	Front wheel	1	
17	Wheel cover	2	
18	Charger	1	


Assembly tools required (not included):

Screwdriver


HINT: Some parts shown are assembled on both sides of vehicle

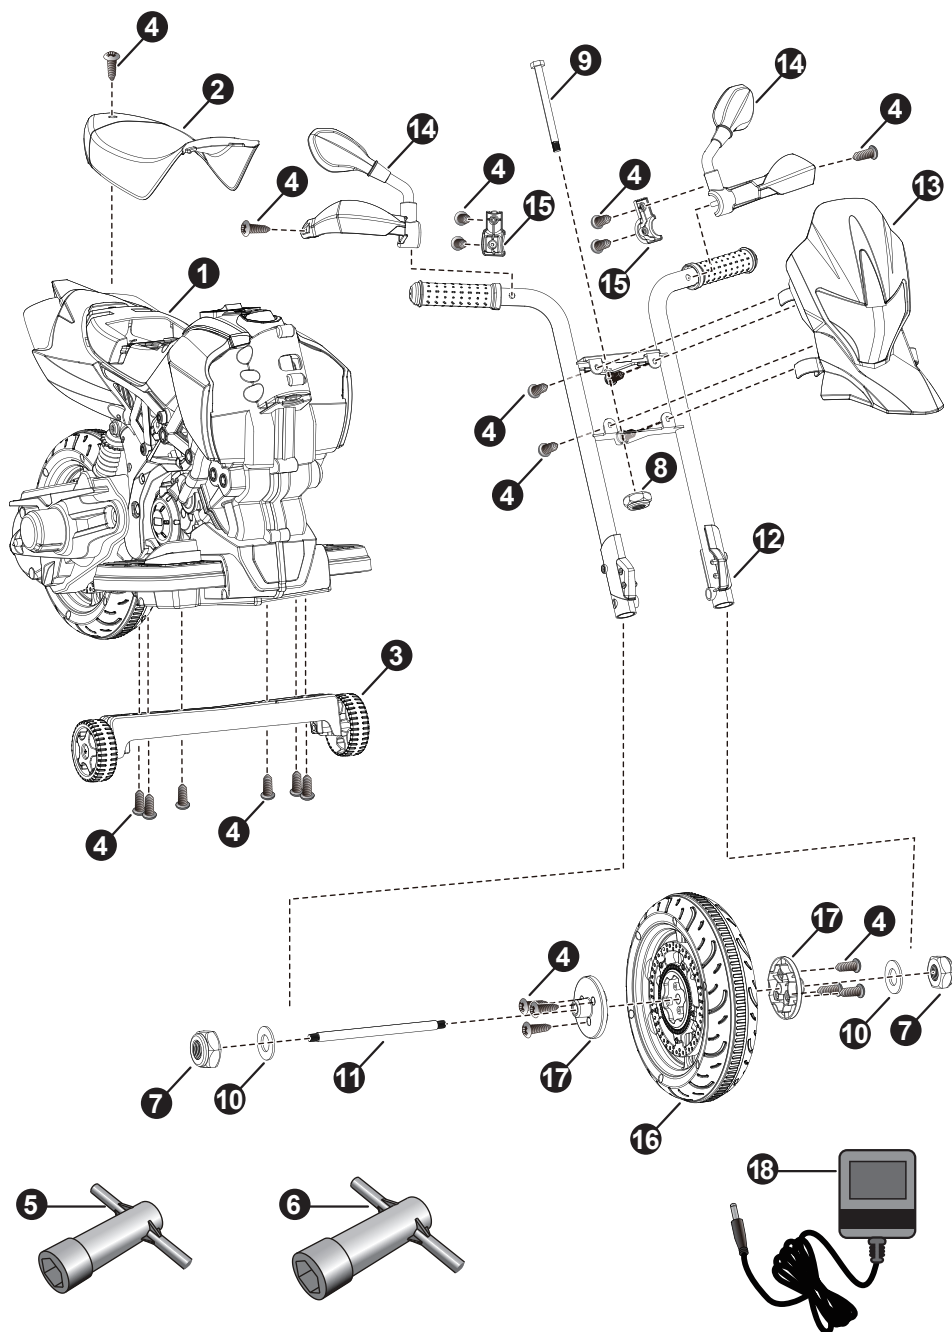

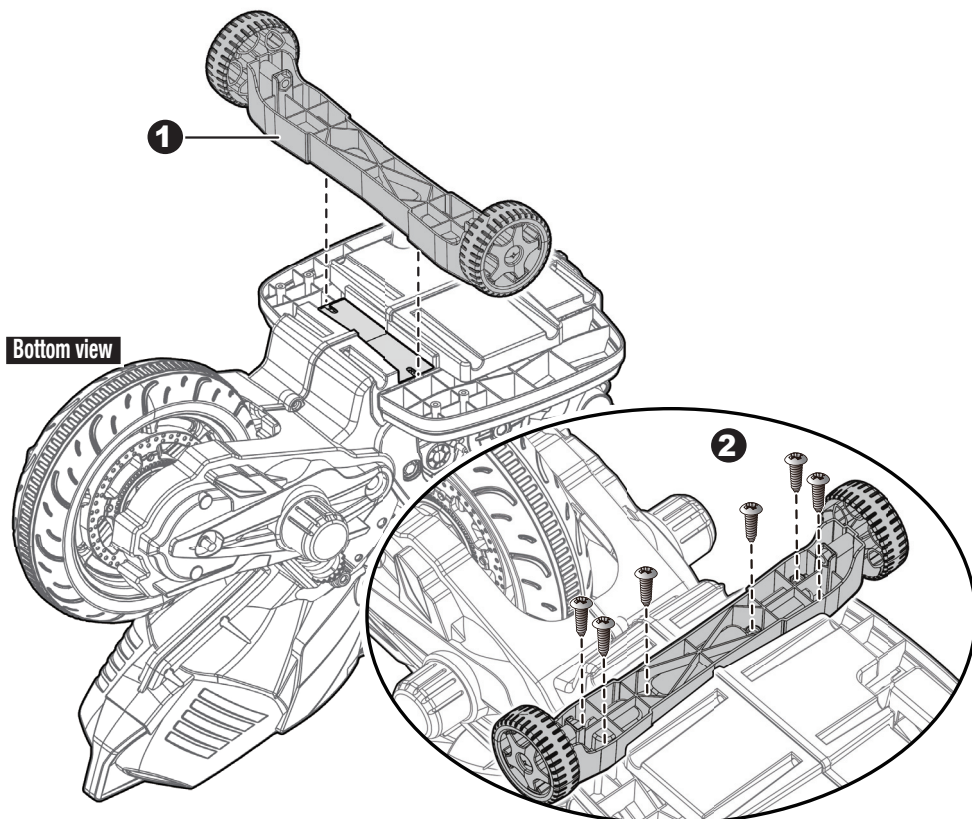


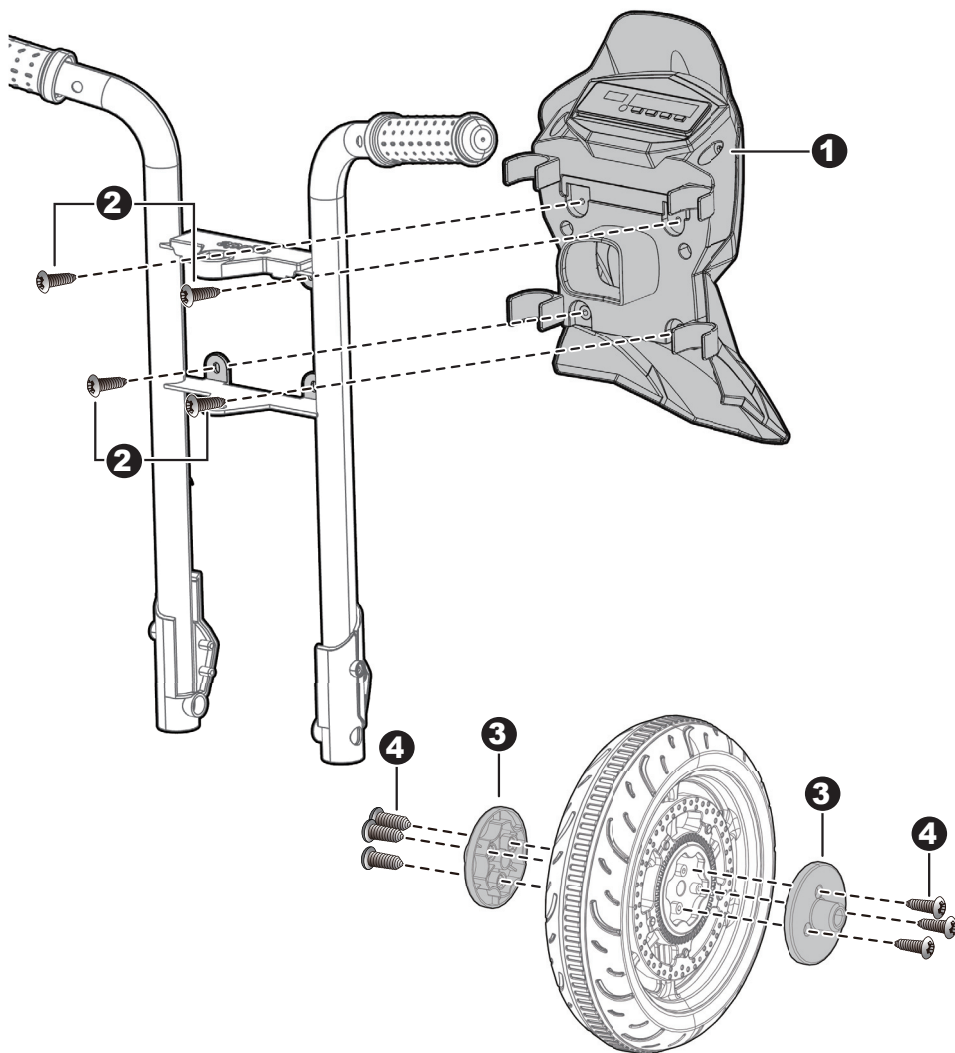


1. Fit the faceguard to the front fork.
2. Insert four $\varnothing 4 \times 14$ screws and tighten with a screwdriver.
- 3-4. Fit the wheel cover to the front wheel, insert and tighten three $\varnothing 4 \times 14$ screws and tighten with a screwdriver. Repeat for the other wheel cover.

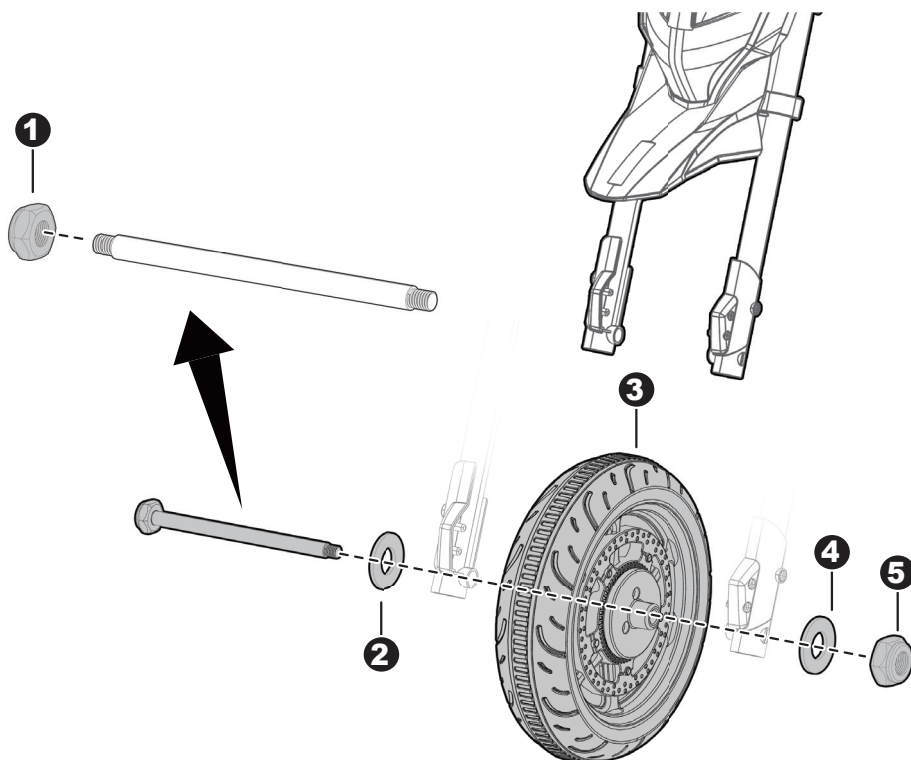

1. Tighten a lock nut to the end of the front axle with a spanner.
2. Slide a $\varnothing 10$ washer to the front axle.
3. Insert the front axle through the hole on one side of the front fork, then through the hole in the center of the front wheel, and continue to push the front axle through the hole on the other side of the fork.
4. Slide a $\varnothing 10$ washer to the front axle.
5. Use a spanner to tighten the lock nut into the front axle. Tip: Use two spanners to tighten the lock nuts on both sides of the front axle at the same time, but do not overtighten them, to ensure that the front wheel can rotate freely.

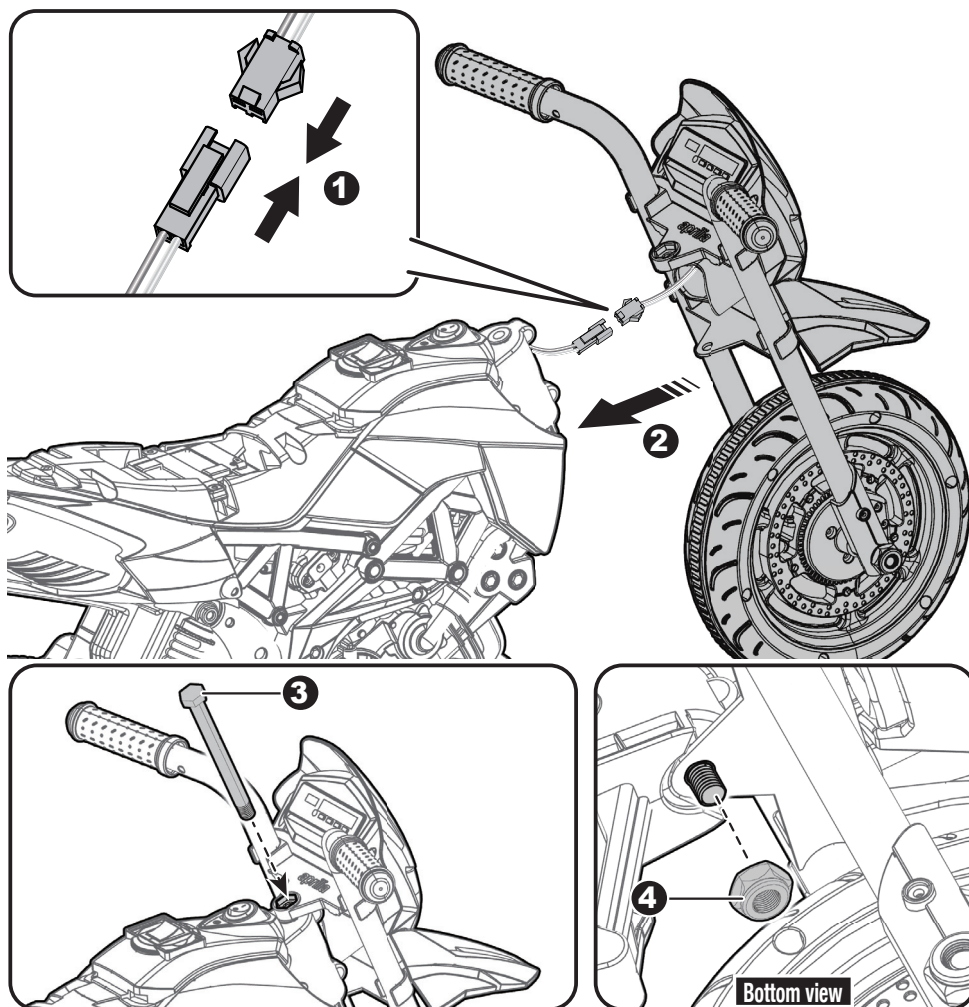


1. Plug the connector on the faceguard into the connector on the vehicle body. Then hide the plugged connectors into the hole on the body.
2. Turn the vehicle body upright. Fit the front fork assembly to the vehicle body.
3. Align the holes on the front fork with the holes on the body, and insert the M8X105 bolt.
4. Tighten the M8 lock nut from the bottom of the vehicle.

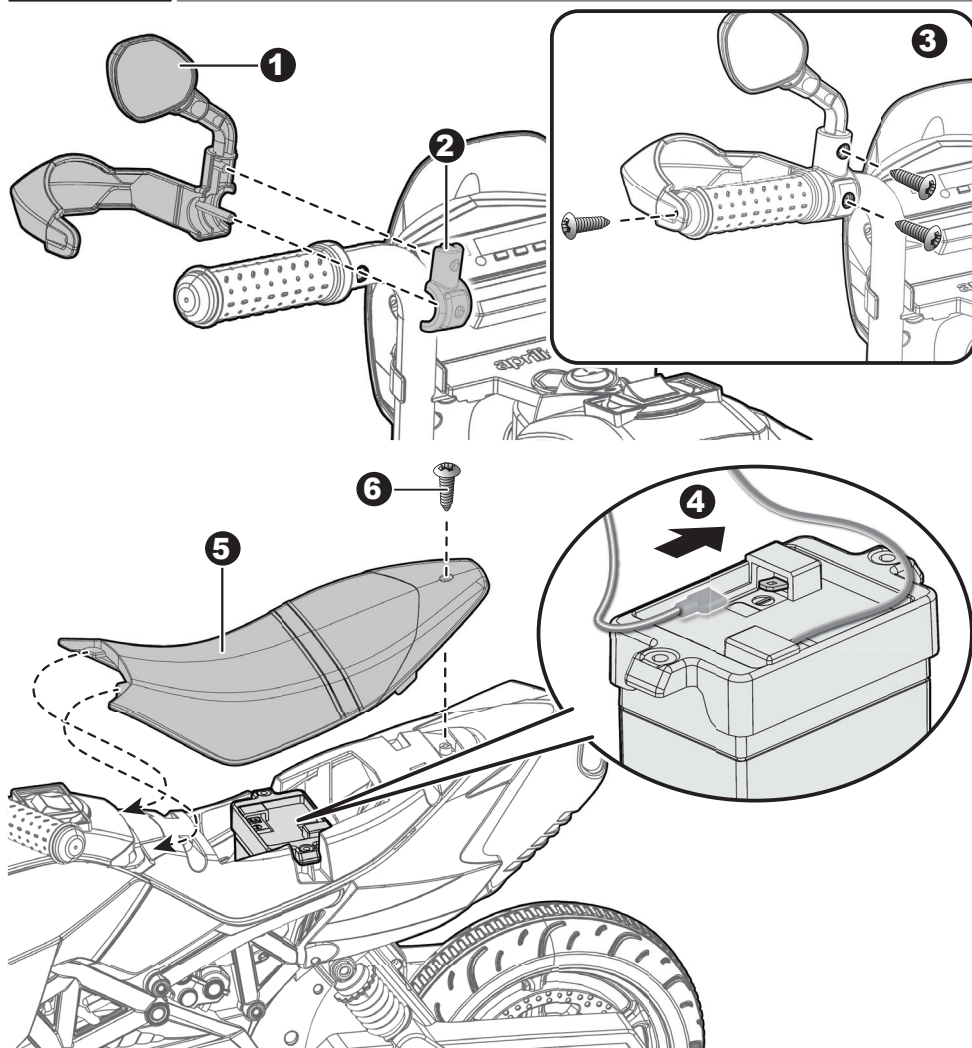

- 1-2. Fit the side mirror and mirror back to the handle bar as shown,
3. Insert three Ø4x14 screws and tighten with a screwdriver. Repeat for the other side mirror.
4. Plug the red wire connector on the vehicle body to the red terminal on the battery.
- 5-6. Fit the seat to the vehicle body, insert a Ø4x14 flat head screw and tighten with a screwdriver.



- Always stop vehicle when changing the speed or direction to avoid damage the gears and motor.
- Please keep a distance from the sound source to avoid damage to hearing
- Use the vehicle on generally level ground **ONLY!**


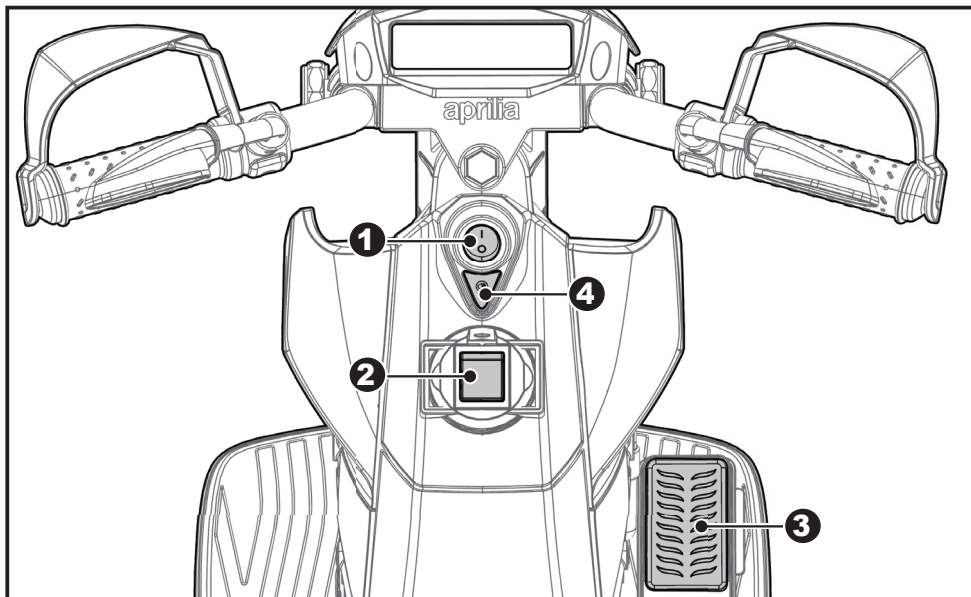


- 1. Power button:** Turns the product on and off.
- 2. Forward/stop/reverse switch:** Changes the direction that vehicle moves from forward to reverse.
 - To move the product forward, press the switch to top position.
 - To move the product backward, press the switch to down position.
 - Press the switch to middle position, the product will not move.
- 3. Foot pedal:** Applies power (speed) to the vehicle.
 - To move the product, press the pedal down.
 - To brake or slow down, release pressure from the pedal.
- 4. Horn/music button:** press the button to play horn sound or music.

⚠ WARNING!

- **ONLY an adult is allowed charge and recharge the battery!**
- **This product with Charging Protection: when charging, all functions will be cut off.**

- The POWER SWITCH must be turned in OFF position when charging.
- Before the first use, you should charge the battery for 4-6 hours. Do not recharge the battery for more than 10 hours to avoid overheating the charger.
- When the vehicle begins to run slowly, recharge the battery.
- After each use or once a month minimum recharge time as 8 to 12 hours, less than 20 hours at most.
- Use the only rechargeable battery and charger supplied with your vehicle. NEVER substitute the battery or the charger with another brand. Using another battery or charger may cause a fire or explosion.
- Do not use the battery or charger for any other product.

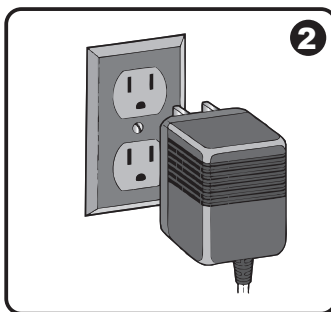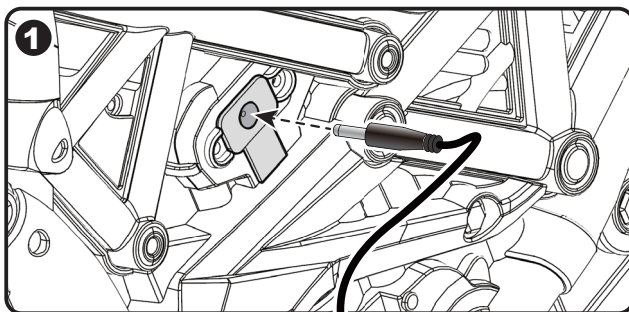

1. Plug the charger port into the input socket (the socket is on the right side of the vehicle body).
2. Plug the charger plug into a wall outlet. The battery will begin charging.

Battery Disposal

The battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for one to three years.

Important! Recycle the dead battery responsibly. The battery contains lead acid (electrolyte) and must be disposed of properly and legally. It is illegal in most areas to incinerate lead acid batteries or dispose of them in landfills. Take it to a federal or state-approved lead acid battery recycler, such as local automotive battery retailer.

Do not throw the battery away with your regular household waste!

BATTERY CHARGING WARNINGS

General Safety Warnings

- ⚠ "Read all instructions before using this appliance"
- ⚠ "This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved"
- ⚠ "Children shall not play with the appliance"
- ⚠ "Cleaning and user maintenance shall not be made by children without supervision"

Electrical Safety Warnings

- ⚠ "If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard"
- ⚠ "Do not use outdoors"
- ⚠ "Do not immerse in water or other liquids"
- ⚠ "Disconnect from supply when not in use"

Charger-Specific Warnings

- ⚠ "Use only with batteries specified by the manufacturer"
- ⚠ "Ensure correct polarity when connecting batteries"
- ⚠ "Do not charge damaged or leaking batteries"
- ⚠ "Remove batteries if appliance is not to be used for extended periods"
- ⚠ "Do not short-circuit the output terminals"

The product is equipped with a self-resetting fuse that will automatically trip and cut all power to the vehicle if the motor, electric system or battery is overloaded. The fuse will reset and power will be restored after the unit is turned OFF for 20 seconds and then turned ON again. If the thermal fuse trips repeatedly during normal use, the vehicle may need repair. **Contact your distributor please.**

To avoid losing power, follow these guidelines:

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquids to come in contact with the battery or other electric components.
- Do not tamper with the electric system. Doing so may create a short, causing the fuse to trip.

Maintaining

- It is parents' responsibility to check main parts of the toy before using. Must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be used until that damage had been properly removed.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

Problem	Possible Cause	Solution
Vehicle does not run	Battery low on power	Recharge battery.
	Thermal fuse has tripped	Reset fuse, see <Fuse>
	Battery connector or wires are loose	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor contact your distributor please.
	Battery is dead	Replace battery, contact your distributor please.
	Electrical system is damaged	Contact your distributor please.
	Motor is damaged	Contact your distributor please.
Vehicle does not run very long	Battery is under charged	Check that the battery connectors are firmly plugged into each other when recharging
	Battery is old	Replace battery, contact your distributor please.
Vehicle runs sluggishly	Battery low on power	Recharge battery, contact your distributor please.
	Battery is old	Replace battery, contact your distributor please.
	Vehicle is overload	Reduce weight on vehicle.
	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions, see <Safety>.
Vehicle needs a push to go forward	Poor contact of wires or connectors	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, contact your distributor please.
	"Dead Spot" on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. Contact your distributor please.
Difficult shifting from forward to reverse or vice-versa	Attempting to shift while the vehicle is motion	Completely stop the vehicle and shift, see <Use Your Ride-On>
Loud grinding or clicking noises coming from motor or gear box	Motor or gears are damaged	Contact your distributor please.
Battery will not recharge	Battery connector or adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger not plugged in	Check that the battery charger is plugged into a working wall outlet.
	Charger is not working	Contact your distributor please.
Charger feels warm when recharging	This is normal and not a cause for concern	

Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem **Contact your distributor please.**

If you have any questions, please contact our customer care centre.

Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS:

MH STAR UK Ltd

1 Northampton Cross Logistics Park

Northampton Cross Road

Northampton

NN4 9FH

MADE IN CHINA