

- One button start
- Music
- Light control button
- Forward and backward
- High and low speed

EN



WARNING: The toy is to be assembled by an adult.

In unassembled state contain potentially hazardous sharp points, sharp edges and small part, so please keep out of baby's reach.



WARNING: Not to be used in traffic.

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

INSTRUCTION MANUAL

 A x 1 Car body	 B x 4 wheel	 C x 2 Wheel connector
 D x 4 Wheel cover	 E x 1 Steering wheel	 F x 1 Backrest
 G x 1 Seat	 H x 2 Rearview mirror	 I x 3 M4x12 flat head screw
 K x 1 R/C	 L x 1 Charger	 M x 2 M8 spanner
		 J x 1 Rear spoiler
		 N x 1 Windshield




Product Specifications:

Battery	12V 4.5AH*1
Motor	Rs380 DC Motor, 12V 25W*2
Suitable age	18 months+
Loading capacity	25kg
Product size	86×49×37cm
Speed	1.5-3.5Km/h
Charge/Use time	Charge 8-12h, Use 50min
Charger	Input:100-240V,50/60Hz Output:12V, 0.5A
Remote control	AAA1.5V*2
Steering wheel battery	AAA1.5V*2

The above parameters are selected by the customer, and the specific parameters shall be subject to the actual sample.

Function

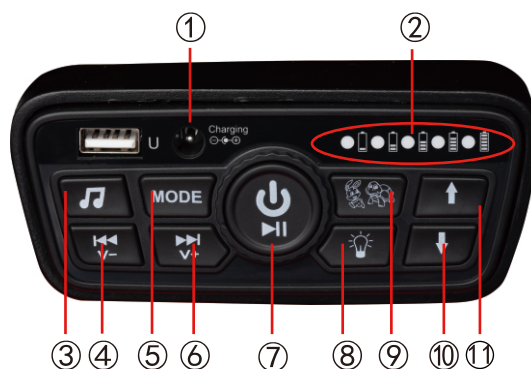

Button function


- | | |
|-------------------------|--------------------------|
| ① Charging hole | ⑦ Power/Stop/Play switch |
| ② Power display | ⑧ Light control button |
| ③ Music | ⑨ High/low speed |
| ④ Music switch/Volume - | ⑩ Backward |
| ⑤ Mode switch | ⑪ Forward |
| ⑥ Music switch/Volume + | |

Remote control function and explanation

- Do not shift forward/backward button when car is driving, or will damage the motor.
- Remote control can be used normally when battery is assembled.
- Remote control is preferred to manual control.

How to adjust R/C frequency:

Long press forward and backward button for 3 seconds, and the speed indicator flashes. Then turn on the power, the speed indicator goes to long bright which means the connection is successful. If the speed indicator no response, means the connection failed. Replace the batteries and retry.

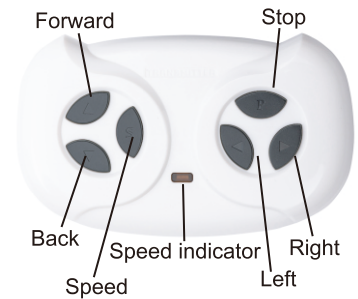

WARNING!

The remote control is not a toy. It is for the adult use only, and should not be used by a child. A close adult supervision is always required. Reception range may change significantly with weather, battery, and other environmental conditions.

Remote control battery operation

- Take off the battery cover. Put two AAA1.5V remote control battery in with right polarity.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity(+ and -).
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

Installation Order Diagram

1. Wheel and wheel cover assembly

Insert front fender and rear fender into car body, then use M4x12 flat head screw to tighten. The same way for the other side. Insert front bumper decoration into front bumper, then insert the whole part into car body, use M4x12 flat head screw to tighten.



2. Wheel connector, wheel and wheel cover assembly

Add wheel connector, wheel, washer one by one, then use spanner to tighten the nut. At last, insert the wheel cover into the wheel. The same way for the other side.



3. Steering wheel and battery assembly

First remove the screw and nut from the steering wheel, then Insert steering wheel into direction lever, use screw and nut to tighten them.

Remove the battery cover on the steering wheel and insert two AAA 1.5V dry batteries with the correct polarity, then attach the battery cover.



4. Windshield assembly

Insert windshield into the reserved place on the platform.




5. Rearview mirror assembly

Insert rearview mirror into the reserved place on the car.



6. Battery line assembly

Connect the red battery line to the red terminal like picture, then turn on the power.

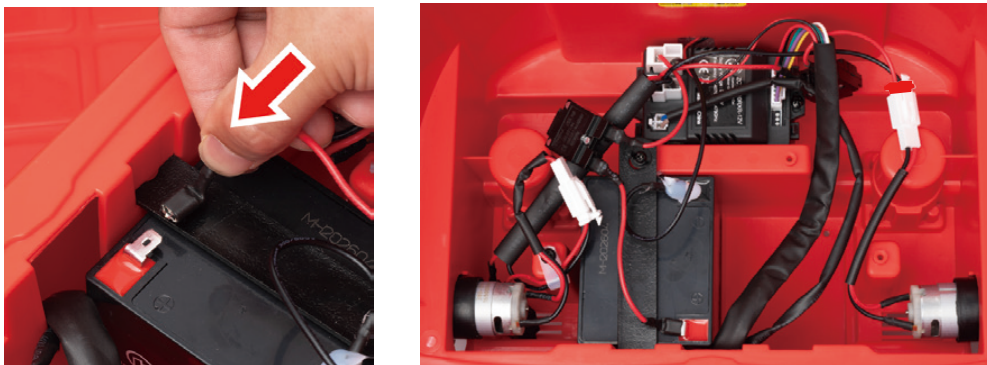

7. Seat and backrest assembly

Connect the seat and the backrest first, use M4x12 flat head screw to tighten them, then insert the whole part into the reserved place on the car. At last, use captive screw on the seat to tighten.



8. Rear spoiler assembly

Insert rear spoiler into the reserved place on the car.



Remote control and manual switch



1. Remove the screw from the switch cover by a screwdriver.
2. Open the switch cover, switch the remote control and manual switch. Under remote control mode, the car can only be operated by remote control, the foot can not be operated. Under manual mode, the car drive can only be operated by foot, remote control can not be operated.



WARNING

- Keep this manual for future reference.
- ADULT ASSEMBLY ONLY.
- Always remove protective material and poly bags and dispose before assembly.
- WARNING: Protective equipment should be worn. Always wear shoes and sit in the seat when operating the vehicle.
- Only drive on level ground. Never use on the lawn.
- Keep your hands, hair, and clothes away from moving parts.
- Never leave child unattended. Direct adult supervision is required. Always keep child in view when child is in vehicle.
- To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water, always wear shoes, and never allow more than 1 rider.
- Never use in unsafe conditions such as snow, rain, loose dirt, mud, sand, or gravel, otherwise may result in an unexpected accident such as tipping over, and could damage the electrical system or battery.
- WARNING: Not to be used in traffic.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- WARNING: Not to be used by children under 18 months. The maximum loading capacity is 25kg.
- WARNING: This toy has no brake.
- The electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
- Use only battery(ies) and charger specified by the manufacturer.

Charging steps are as follows:

Step 1: The charging hole is on the multi-functional board.

Step 2: Put the charger plug into the plug hole.

Step 3: Connect the charger to the power socket.



Warning: Car must be charged by adults only. Car is useless during charging

Charging notification

- For the first use, please charge 8-12 hours, or will damage the battery.
- Plug charger DC line into charge hole first, then plug charger into socket. The car cannot be used while it charging.
- Every time it is charging, do not charge more than 20 hours.
- It is normal that charger and battery warm (under 60°) during charging.
- Do not charge if plug is wet, or will occur short-circuited.
- Only use charger provided by manufacturer, or will damage charger and battery or occur short-circuited.
- If long time no use, please charge 1 time per month at least.

BATTERY CHARGING WARNINGS

General Safety Warnings

- ⚠ "Read all instructions before using this appliance"
- ⚠ "This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved"
- ⚠ "Children shall not play with the appliance"
- ⚠ "Cleaning and user maintenance shall not be made by children without supervision"

Electrical Safety Warnings

- ⚠ "If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard"
- ⚠ "Do not use outdoors"
- ⚠ "Do not immerse in water or other liquids"
- ⚠ "Disconnect from supply when not in use"


Charger-Specific Warnings

- ⚠ "Use only with batteries specified by the manufacturer"
- ⚠ "Ensure correct polarity when connecting batteries"
- ⚠ "Do not charge damaged or leaking batteries"
- ⚠ "Remove batteries if appliance is not to be used for extended periods"
- ⚠ "Do not short-circuit the output terminals"

Maintenance and Service

- Check battery, charger and other spare parts regularly. If any problem, please fix it before playing.
- Use lubricating oil to care iron parts. Keep car away from fire and sunshine. Park it on the even place, not reversal or gradient.
- Park it indoor and cover it with waterproof cloth.
- Keep car away from fire, like stove or heater, or plastic may melt.
- Keep away from flammable things, or a fire accident may occur.
- Charge it after use and must be done by adults only. If long time no use, please charge it 1 time per month, in order to maintain battery.
- Clean the vehicle with a dry cloth only. Do not use chemical solvent to wipe plastic parts. Do not wash it with water or play it when raining or snowing. Water will damage motor, electric system or battery.
- Please turn power off after each use.
- Only use charger provided by manufacturer.
- Do not change car's structure or electric line. A check job request some skills or under specialist's guidance.

Disposal Of Battery

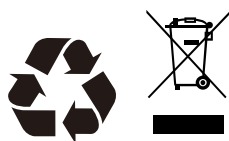

- Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.
- Do not dispose of a lead-acid battery in your regular, household trash. The incineration, land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.

If you have any questions, please contact our customer care centre.
Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS:
MH STAR UK LTD
1 Northampton Cross Logistics Park
Northampton Cross Road
Northampton
NN4 9FH
0800 240 4050
enquiries@mhstar.co.uk
MADE IN CHINA

