AIYAPLAY

IN260600300V01_UK_370-487V70

Children Electric ATV

OWNER'S MANUAL

READ AND UNDERSTAND THIS ENTIRE MANUAL BEFORE USING!



⚠ WARNNING

Must be assembled by an adult.

- Suitable for 18-60 months
- Maximum user weight: 25kg

Read and understand this entire manual before using!

Please keep this manual for future reference as it contains important information.

Before first use, charge the battery for 4 to 6 hours.


ABOUT YOUR NEW VEHICLE

On the purchase of your new Ride-On:

This ride-on car will provide your child with many miles of enjoyable riding.

To help assure you and your rider a safe ride, please read this manual carefully and keep it for future reference.

Follow the recommendations in this manual, they are designed to improve the safety and operation of your ride-on car and its rider.

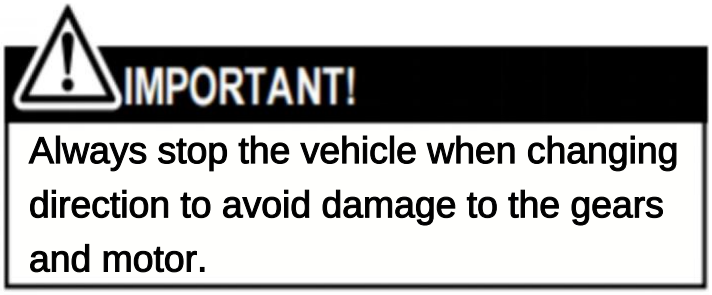

SAFETY

TO AVOID SERIOUS INJURY: Continuous adult supervision is required while this vehicle is in operation.

- To reduce the risk of injury, adult supervision is required. DO NOT leave the child to play in the vehicle alone to avoid accidents.
- NEVER use in or near roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water and dangerous places, always wear shoes, and NEVER allow more than 1 rider.
- NEVER allow children to ride at night.
- Instruct children on proper use of this product and to sit properly when driving.
  DO NOT RIDE VEHICLE STANDING UP.
- It is recommended that the rider always wears safety equipment (not included) such as a fitted helmet when riding the vehicle.
- Ride-on toys should be used with caution since skill is required to avoid falls or collisions which may cause injury to the user.
- The vehicle is intended for use on flat, level surfaces.
- DO NOT ride the vehicle indoors. It is intended for outside use ONLY. Interior floors can be damaged by riding the vehicle indoors.
- Do NOT tow objects behind the vehicle or overload the vehicle as doing so will cause damage.
- This toy contains batteries that are non-replaceable.
- WARNING: Not to be used in traffic, it has potential hazards of using the ride-on electric toy in areas other than private grounds.

A x 1  Body	**B** x 4  Wheel	**C** x 4  Wheel cover
D x 1  Handlebar	**E** x 1  Front bumper	**F** x 1  Motor (Pre installed on the rear axle)
G x 1  Screw and nut (Pre installed on the handlebar)	**H** x 4  Nut(M8) (Pre installed on the front and rear axles)	**I** x 7  Shim(D20/10) (Pre installed on the front and rear axles)
J x 2  Wrench	**K** x 1  Charger	**L** x 1  Manual


Assembly tools required:



Cross-head screwdriver (not included)

WARNING!


FOR THE SAFETY OF YOUR CHILDREN, PLEASE READ ALL WARNINGS AND ASSEMBLY/USE INSTRUCTIONS.
KEEP THIS GUIDE FOR FUTURE REFERENCE.
ADULT ASSEMBLY REQUIRED.
The product contains small parts, which are for adult assembly only. Keep children away when assembling.
Always remove protective material and poly bags and dispose before assembly.

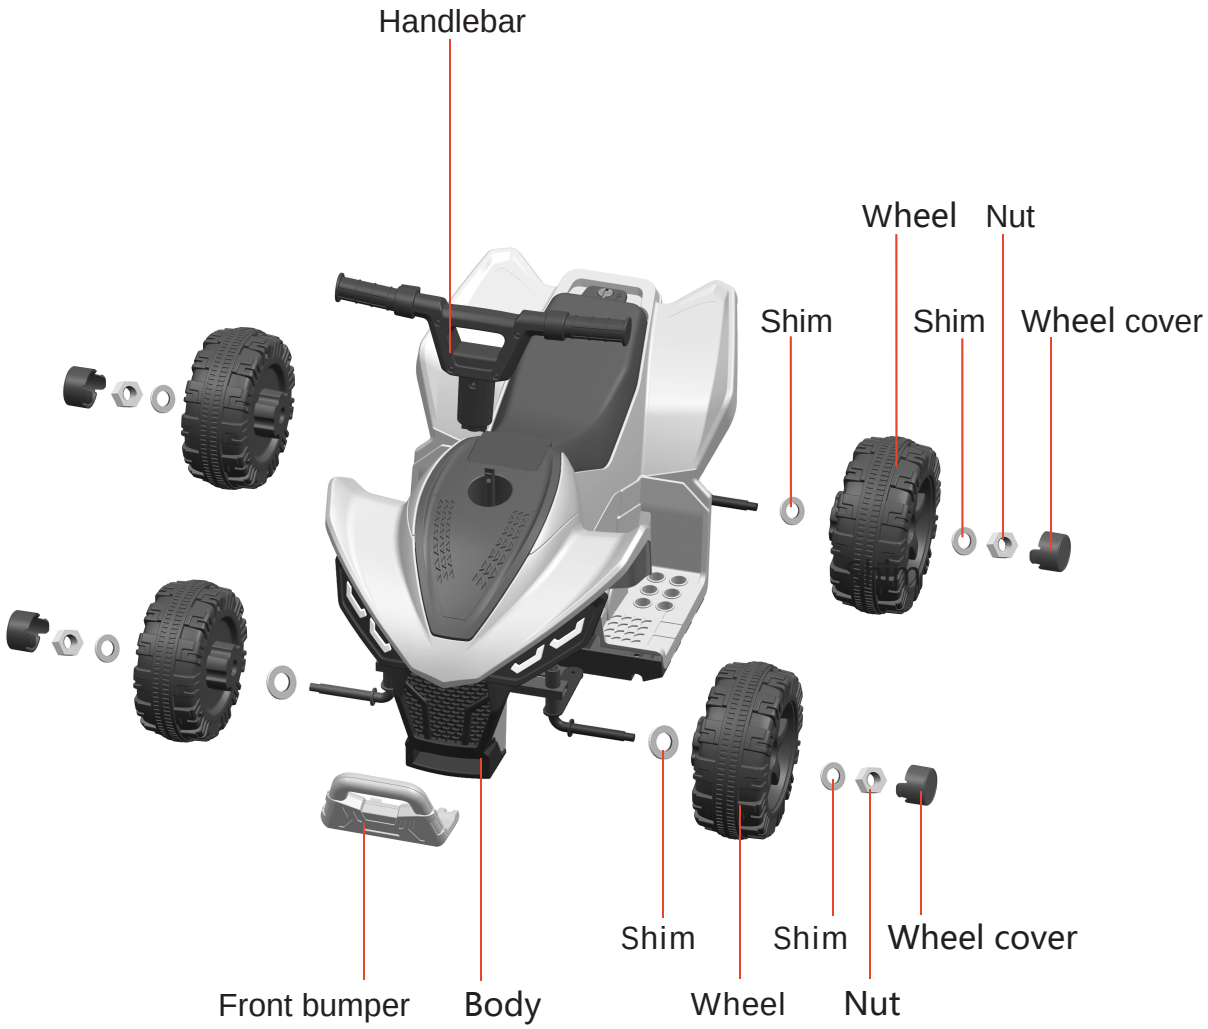

Product Specifications:

Battery: 6V4AH
Drive Motor: 6V380*1
Suitable age: 18-60months
Maximum weight: 25KGS
Car Size: 67*38.5*43cm
Speed: 3 KM/H
Charging time: 8-12hours
Charger: Input: 100V-240V 50/60Hz
Output: 6V0.5A

Function indication

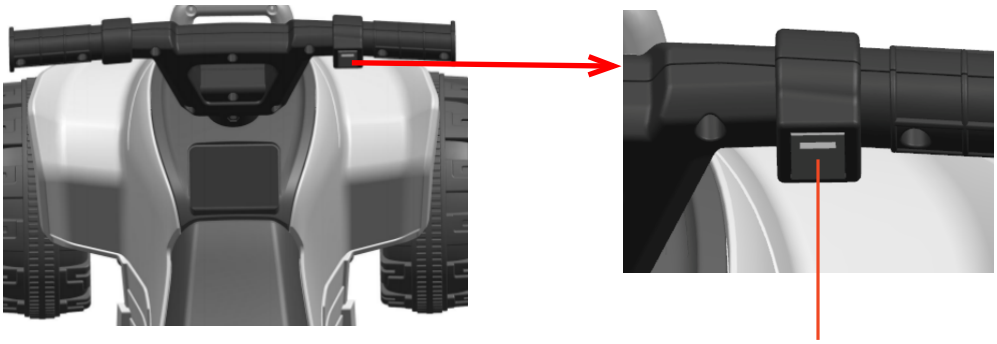

Drive button:

Press this button to go forward. To brake or slow down, release the button.

INSTALLATION


1. Install the front wheels

First, remove the shaft sleeve, nut and a shim from the front axle, then install the wheel, shim and nut onto the front axle in turn, tighten the nut with a wrench, and finally install the wheel cover on the wheel. Install the front wheel on the other side in the same way.




2. Install the rear wheels

First, remove the shaft sleeve, nut, shim and cardboard tube from the rear axle, then install the wheel, shim and nut onto the rear axle in turn, install the other side's wheel in the same way, tighten the nuts with 2 wrenches, and finally install the wheel covers on the wheels.

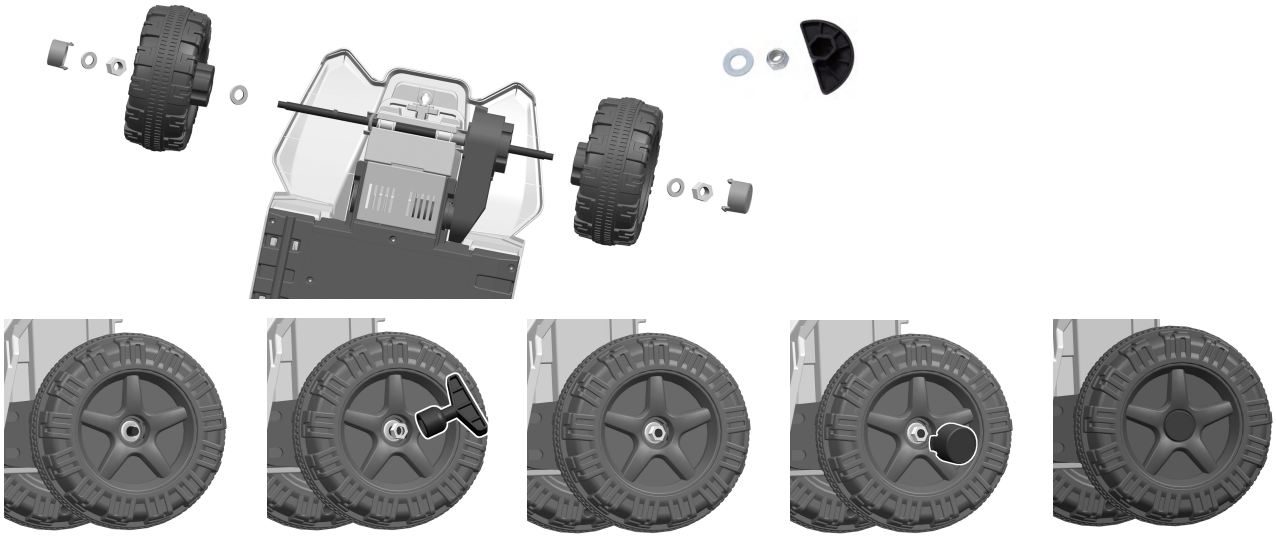


3. Install the handlebar

Firstly, connect the wires of the handlebar to the body, and then insert the handlebar into the steering rod on the body. Pay attention to aligning the hole under the handlebar with the hole on the steering rod, and fix with screw and nut.

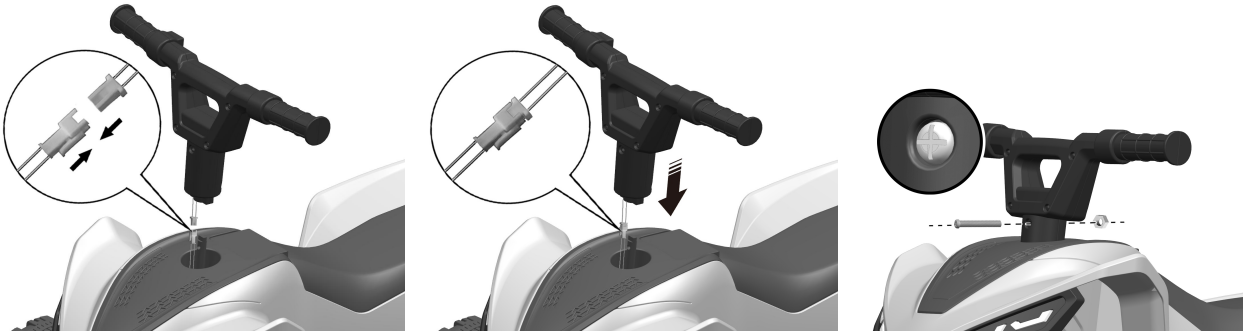


4. Install the front bumper

Align the front bumper with the hole in front of the body and insert it.

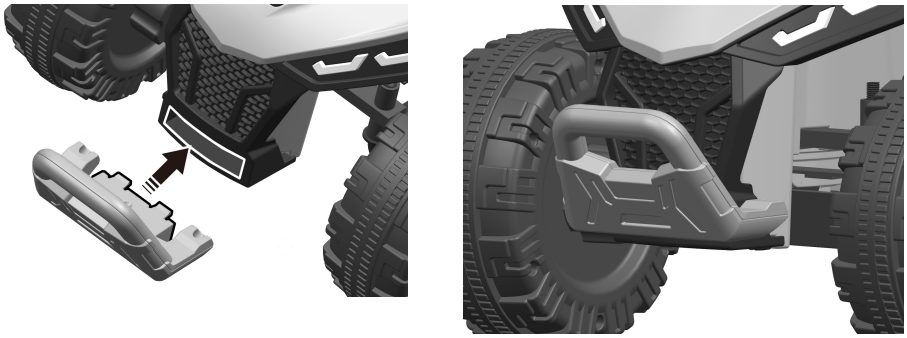

5. Connect the power cord

Open the seat lock with a straight screwdriver or a coin in the direction shown in the diagram, remove the seat, connect the power cord, then reinstall the seat and lock .

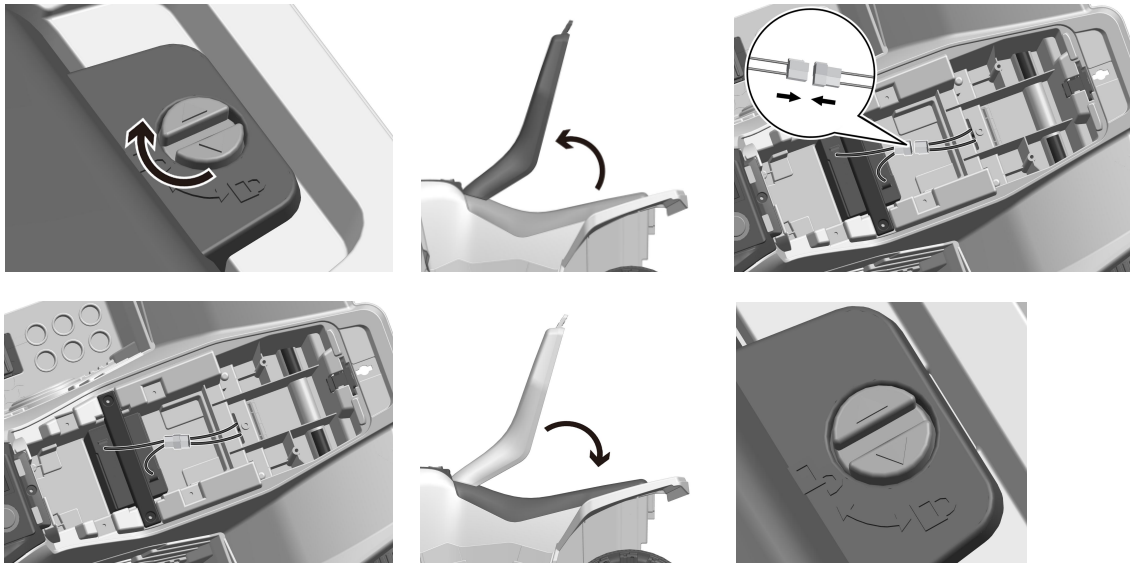


CHARGING

⚠ WARNING!

ONLY AN ADULT CAN CHARGE AND RECHARGE THE BATTERY!

This product comes with Charging Protection: when charging, all functions will be cut off!

Step 1: Find the charging port at the rear of the body.
Step 2: Connect the charger cord to the charging port.
Step 3: Connect the charger to the power socket.

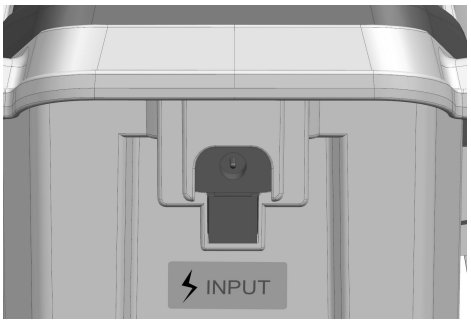



Charge the battery in a dry area ONLY.

- Battery posts, terminals and related accessories contain lead and lead compounds. Wash hands after handling.
- Do not open the battery. Battery contains lead acid and other materials that are toxic and corrosive.
- Do not open the charger. Exposed wiring and circuitry inside can cause an electric shock. Only adults may handle or charge the battery. NEVER allow a child to handle or charge the battery. Battery is heavy and contains lead acid (electrolyte).
- Do not drop the battery. Permanent damage to the battery could occur or cause serious injury.
- Before charging the battery, check for wear or damage to the battery, charger, its supply cord and the connectors. DO NOT charge the battery if any damage to parts has occurred.
- Do not allow the battery to drain completely. Recharge the battery after each use or once a month if not used regularly.
- Do not charge battery upside down.
- Always secure the battery with the bracket, as it can fall out and injure a child if the vehicle tips over.
- The POWER SWITCH must be turned in OFF position when charging.
- Before the first use, you should charge the battery for 4-6 hours.
- After each use or once a month, recharge for a minimum of 8 to 12 hours, up to a maximum 20 hours.
- When the vehicle begins to run slowly, recharge the battery.

TROUBLE SHOOTING GUIDE

Problem	PossibleCause	Solution
Vehicle does not run	Battery low on power	Recharge battery
	Thermal protector has tripped	Wait 10 seconds for automatic reset
	Battery connector or wires are loose	Check that battery connectors are firmly plugged into each other.
	Battery is dead	Replace battery.
Vehicle does not run for very long	Battery is undercharged	Check that the battery connectors are firmly plugged into each other when recharging
	Battery is old	Replace battery.
Vehicle runs sluggishly	Battery low on power	Recharge battery.
	Battery is old	Recharge battery.
	Vehicle is overloaded	Reduce weight on the vehicle; maximum user weight is 25kg.
	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions, see SAFETY
Vehicle needs a push to go forward	Poor contact of wires or connectors	Check that the battery connectors are firmly plugged into each other.
	"DeadSpot" on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair.
Difficult shifting from forward to reverse or vice-versa	Attempting to shift while the vehicle is in motion	Completely stop the vehicle and shift.
Battery will not recharge	Battery connector adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger not plugged in	Check that the battery charge is plugged into a working wall outlet.
Charger feels warm when recharging	This is normal and not a cause for concern	

⚠ WARNING!

- Keep this manual for future reference.
- ADULT ASSEMBLY ONLY.
- Always remove protective material and poly bags and dispose before assembly.
- **WARNING:** Protective equipment should be worn. Always wear shoes and sit in the seat when operating the vehicle.
- Only drive on level ground. Never use on the lawn.
- Keep your hands, hair, and clothes away from moving parts.
- Never leave child unattended. Direct adult supervision is required. Always keep child in view when child is in vehicle.
- To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water, always wear shoes, and never allow more than 1 rider.
- Never use in unsafe conditions such as snow, rain, loose dirt, mud, sand, or gravel, otherwise may result in an unexpected accident such as tipping over, and could damage the electrical system or battery.
- **WARNING:** Not to be used in traffic.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- **WARNING:** Not to be used by children over 60 months. Insufficient strength.
- **WARNING:** This toy has no brake.
- The electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
- Use only battery(ies) and charger specified by the manufacturer.

⚠ BATTERY USAGE WARNINGS

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Batteries are only to be charged by persons of at least 8 years old.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity(+ and -).
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

BATTERY CHARGING WARNINGS

General Safety Warnings

- ⚠ "Read all instructions before using this appliance”
- ⚠ "This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved”
- ⚠ "Children shall not play with the appliance”
- ⚠ "Cleaning and user maintenance shall not be made by children without supervision”

Electrical Safety Warnings

- ⚠ "If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard”
- ⚠ "Do not use outdoors"
- ⚠ "Do not immerse in water or other liquids”
- ⚠ "Disconnect from supply when not in use”

Charger-Specific Warnings

- ⚠ "Use only with batteries specified by the manufacturer”
- ⚠ "Ensure correct polarity when connecting batteries”
- ⚠ "Do not charge damaged or leaking batteries”
- ⚠ "Remove batteries if appliance is not to be used for extended periods”
- ⚠ "Do not short-circuit the output terminals”

MAINTAINANCE

- It is parents' responsibility to check mainparts of the toy before use, and they must regularly examine for potential hazards, such as the battery, charger, cable or cord, plug, screws that fasten the enclosure or other parts. If damage occurs, do not use the toy until it is repaired.
- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle is not in use.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electrical system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand, or fine gravel, which could damage moving parts, motors or the electrical system.
- When the vehicle is not in use, all the electrical sources should be turned off. Turn off the power switch and disconnect the battery.

Disposal Of Battery





- Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of your lead-acid battery in a fire.The battery may explode or leak.
- Do not dispose of a lead-acid battery in your regular, household trash. The incineration, landfilling, or mixing of sealed lead-acid batteries with household trash is prohibited by law.

If you have any questions, please contact our customer care centre.
Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS:
MH STAR UK LTD
1 Northampton Cross Logistics Park
Northampton Cross Road
Northampton
NN4 9FH
0800 240 4050
enquiries@mhstar.co.uk
MADE IN CHINA