
AIYAPLAY

IN260600045V01_UK

371-056V70

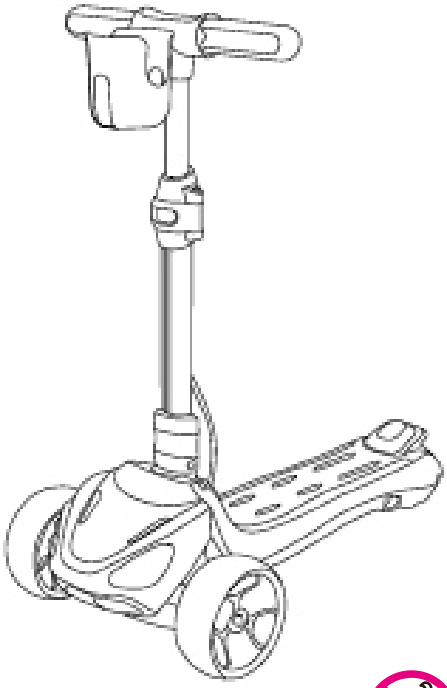





CE

⚠ WARNING:
Suitable for children of 5 years old+;
Max weight: 60 kg.

⚠ WARNING:
Protective equipment should be worn.
Not to be used in traffic.

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

ASSEMBLY INSTRUCTION

This guide will help you get the scooter ready for your kids to ride and provide you with important riding, safety, and maintenance information.

Content

Package List 3

Know Your Scooter 4

How to Use It.....5


Safety Warning.....7

Battery Warning.....10

Battery Care.....11

Specifications.....12


Package List

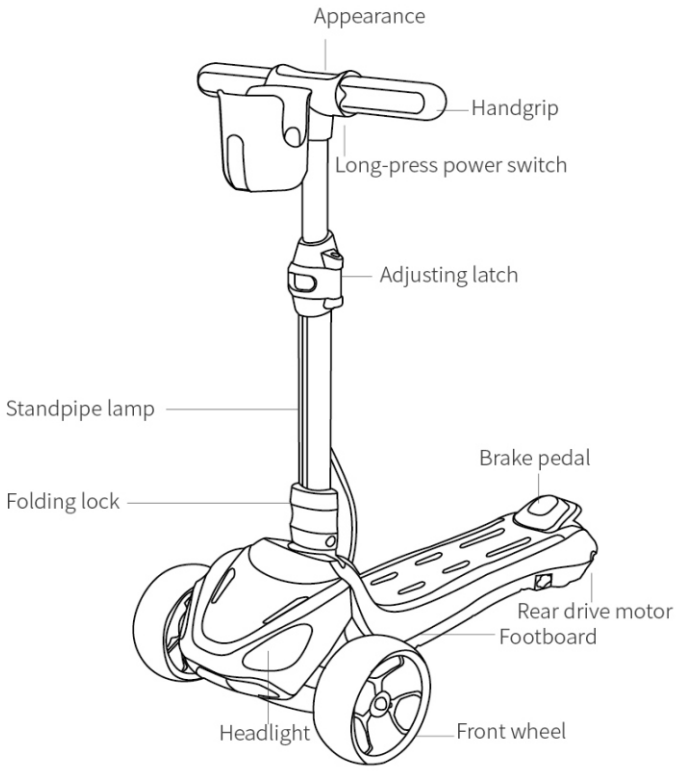



Scooter

+



Charger

+




User Manual

Know Your Scooter




Folding Lock

Compact folding design, fold for storage, no needto remove thestem.

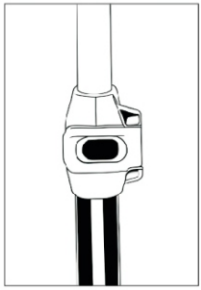

Handlebar Clamp Latch

3 Level adjustable heights for kids.

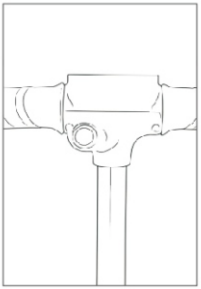


Accelerate Button

Better thumb acceleratebutton, morefor kids intuitive and easy.




Rear Fender Brake

Step on the fendto brake, just like aregular kick scooter.

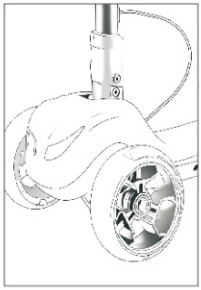


Flashing Wide Wheels

All 3 wheels are extra wide formore balance.A flashing deckand 3 wheel sincrease the visibility duringriding.

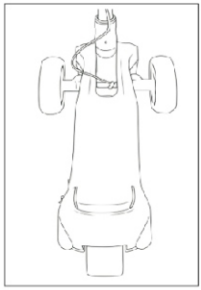

Anti-slip Deck

A wide anti-slipdeck peformsbetter inhandling

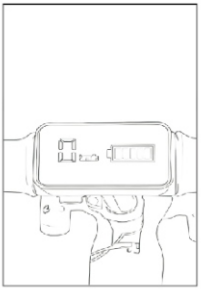



LCD Instrument Panel

Swipe a few steps tostart the scooter andactivate the LCDscreen (Displaying battery level and scooterri-ding speed).

How to Use It

Step 1. Fully Charge the Scooter at First Ride

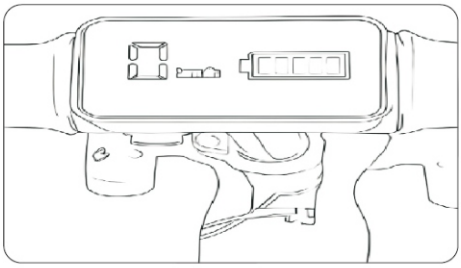

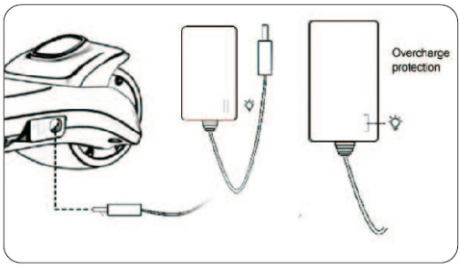

01 Check Battery Level


Check the LCD screen to see if the battery level is fully charged.
If yes, ready to go.If no, fully charge before riding.


02 How to Charge


. Plug in
· Keep charging for 3-4 hours.
· The charging light turns from red to greenwhen the scooter is fully charged.

Note: If the charger light is always greeneven after you ride for a long time(whichshould be red when you plugged in),pleasecontact our support team for help.

Step 2. Unfold Scooter

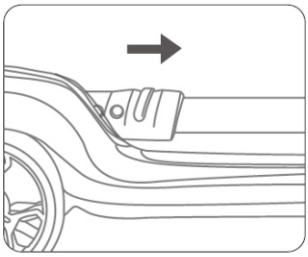

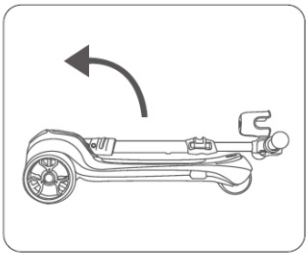

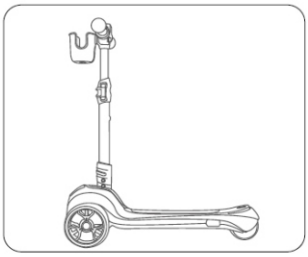

01 Pull

Pull the folding lockand hold.

02 Lift


Lift the stem upward, towards the front wheel.


03 Release


Release the folding lock when the stem is perpendicular to the deck.

How to Use It

Step 3. Adjust the Height If Needed

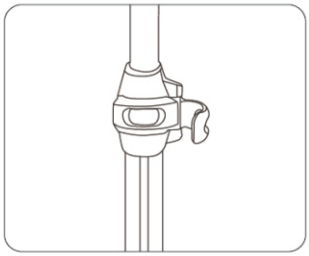

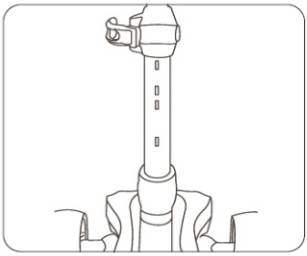

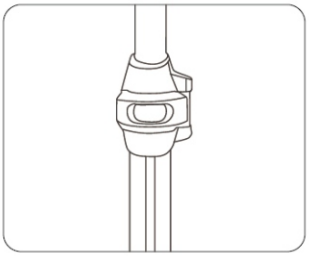

01 Loosen

Loosen the handle-bar clamp latch.


02 Adjust


Push the button and adjustthe proper height for yourkids (3 heights available).


03 Close

Close the clamp latch. (Please check this for yourkids before each ride.)

Step 4. How to Ride.

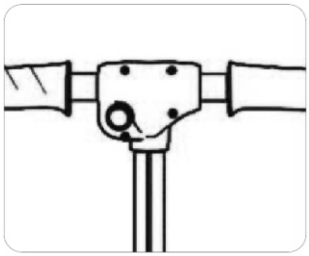

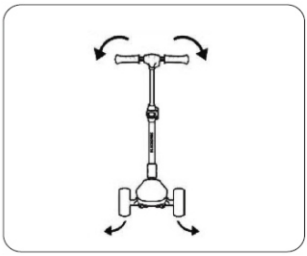

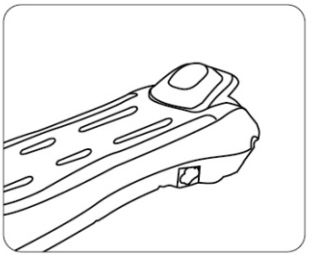

01 Throttle Button

Child-friendly. Kick tostart and push the buttonto go.

With this throttle button, children can switch between electric scootersand regular scooters atany time.
If they want tokick and ride, there's noneed to wait for the bat-tery to run out.

02 Lean to Steer

Learn the handlebar tothe left to steer left.

Learn the handlebar tothe right to steer right.

03 Rear Fender Brake

Step on the fend to brake, just like a regular kickscooter.

Safety Warning

WARNING:

1.Only allowed for adults to install, keep children away.

2.To be used under the direct supervision of an adult.

3. Just only allow one child to use.

4. Please use on a flat and clean surface. Never use near steps, sloped driveways, hills roadways, alleys, swimming pool areas, road, on grass or wet surfaces or other bodies of water.

5. Before driving toy car each time, adult should inspect screws of every parts, please tighten the screw cap if any looseness. secure all fasteners before every ride.

6. For your own safety, always wear suitable protective equipment. Never ride without helmet, hand and wrist protection, elbow protection, and knee protection. Always wear a local standard approved helmet while riding, with the chinstrap securely fastened.

7. Do not ride the product at dusk, at night or at times of limited visibility.

8. Always comply with local laws and regulations.

9. The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.

10. The braking device gets hot during continuous use and does not touch after braking.

11. Warning. Protective equipment should be worn. Not to be used in traffic.

MAINTENANCE & CARE

A. Keep all instructions and parts relating to this product for future reference.

B. Regularly check for damage and that all screws are securely tightened.

C. Check that the seat is securely fastened.

D. Clean your Scooter and wheels with a clean damp cloth.

E. No modifications are to be made other than in accordance with the manufacturer's instructions.

Safety Warning

Before Every Ride

01 Make sure the folding lock is in the right position.
02 Make sure the handlebar clamp latch is closed completely
03 Check the brake function properly.
04 Wear the correct protective gear. Always wear a helmet and be visible on the roads.
05 Remember that you need to brake sooner and more smoothly.

Before Your First Ride

01 in many ways, riding the electric scooter is similar to riding a conventional kick scooter.Riders should know the general techniques for riding a scooter safely on the road and anywhere else they will be riding. This includes basics such as balancing, turning/leaning to steer, and using the rear fender brake for braking.
02 Fully charge the scooter battery before your first ride.
03 Help your kid get used to the new scooter in a safe area.
04 The brake on your scooter is always more effective than the motor. If you face any issues slow down carefully using the brakes until you reach a full stop in a safe area.
05 Do not press the throttle button while walking with the scooter beside you. This may cause an accident.

Now let's get started

01 Be aware of the terrain you are riding on, and watch out for curbs and obstacles.
02 Do not use your scooter off road.
03 Do not hang bags or heavy objects to the handlebar as this can have an adverse effect on your ability to accurately and safely steer the scooter.
04 Get a firm grip on the handlebar, step one foot on the deck and your kid is ready to go.
05 A safe start system is used to prevent any accidental startup, which means the rider needs to kick for a start. Let's start with a few kicks, press and hold the accurate button on the handlebar. The scooter powers on automatically.
06 The motor will engage when reaching 1.9 mph. You will hear a beeping sound when the motor starts. If the speed drops under 1.9 mph, the motor will not start.
07 Kick when riding uphill.

About the throttle button

Super easy to control and more intuitive than the foot button. Riders don't have to use battery power all the time. They can choose to ride it as a regular kick scooter or an electric scooter. The accelerate button leaves this option to riders. Just ride without pressing the accelerate button. (Which is impossible for a foot button sensor.)

Safety Warning

Lean to steer

Lean handlebars to the left to steer left. Lean handlebars to the right to steer right.

Brake carefully

01 Step one foot on the rear fender to brake.
02 Many conditions affect braking. including weight, speed, and road conditions. Practice in a safe area first and plan ahead as you ride.

About the beeping sounds

01 Two short beepings: The electric system starts to work for the first time(the scooter powers on).
02 One short beeping: The motor starts to work(after the scooter powers on).
03 Short continue beepings: You need to charge the scooter.

Power on/off

01 The scooter powers on and off automatically.
02 The motor will engage when reaching 1.9mph. You will hear a beeping sound. If the speed drops under 1.9mph, even though the button is pressed, the motor will not work.

Other Things You Need to Know

01 Avoid water - The scooter is not waterproof, and water damage is not covered by our warranty, Riding in wet conditions is dangerous and may cause injury.
02 No coverage for physical damage due to negligent care and extreme riding.
03 Avoid hitting obstacles continuously to prevent motor damage, remove obstacles promptIN
04 Do not modify the product from its original design.
05 Keep hands and body away from moving parts while operating the scooter.
06 Before riding, check the scooter for proper operation.
07 Before riding, ensure the braking system functions and that all safety labels are intact and understood.
08 Before riding, confirm the manufacturer-supplied guards are in place and in good condition.
09 Before riding, check tires for good condition, proper inflation, and sufficient tread.
10 Never exceed the maximum load rating.
11 Electric scooters are not for children under 4 years old.
12 Only use the original charger provided by Skyhot or a compatible one purchased directly from Skyhot

Battery Warning

BATTERY CHARGING WARNINGS

General Safety Warnings

- ⚠"Read all instructions before using this appliance”
- ⚠"This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved”
- ⚠"Children shall not play with the appliance”
- ⚠"Cleaning and user maintenance shall not be made by children without supervision”

Electrical Safety Warnings

- ⚠"If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard”
- ⚠"Do not use outdoors"
- ⚠"Do not immerse in water or other liquids”
- ⚠"Disconnect from supply when not in use”

Charger-Specific Warnings

- ⚠"Use only with batteries specified by the manufacturer”
- ⚠"Ensure correct polarity when connecting batteries”
- ⚠"Do not charge damaged or leaking batteries”
- ⚠"Remove batteries if appliance is not to be used for extended periods”
- ⚠"Do not short-circuit the output terminals”

Battery Care

Battery Guidelines:

Max range: 5 miles (Under Conditions: new battery, minimal wind, consistent speed, good road, 68°F).

Factors affecting range: riding behavior, road surface, temperature, payload, and battery age.

Warning:

01 Charge indoors (50°F to 77°F) using provided charger.

02 Avoid sun, moisture, and water during charging. Monitor while charging. No riding in the rain.

03 Check battery condition before use. Do not open, disassemble, or use a damaged battery.

04 Use only genuine Skyhot batteries and charger. Dispose of used batteries at recycling centers.

05 Store battery pack between -4°F and 140°F. Avoid direct heat. Do not drop or open. Contact Customer Service for doubts.

To Maximize Lifetime:

01 Avoid full discharge for prolonged periods.

02 If you plan on not using your scooter for longer periods of time, store it in a dry environment at room temperature(between 50'F and 77°F)and keep it partiallycharged, ideally between 20% and 80%. The battery pack should be stored at room temperature. Avoid direct sunlight.

03 Ensure a full discharge-to-charge cycle at least once every two months.

Specifications

Product	Electric Scooter
Brushless Motor	60W
Battery	21.6V2AH
Speed	0-5mph
Maximum Pitch Angle	Up to 5°
Age Range	4-8Y
Weight Capacity	110LBS (50KG)
Product Weight	9LBS (4.3KG)
Charging Time	3-4 Hours
Battery Life	1-2 Hours
Scooter Dimension	24'L x 12 W x 25'-31'H
Wheels Dimension	Front: 5" & Rear: 3.5"
3 Adjustable Heights	25''28"/31"
Charger	Input: 100-240V Output: 25.2V
Foldable	One sec fold
Lights&LCD Screen	Yes

If you have any questions, please contact our customer care centre.
Our contact details are below:

0044-800-240-4004

enquiries@mhstar.co.uk

IMPORTER ADDRESS:
MH STAR UK LTD
1 Northampton Cross Logistics Park
Northampton Cross Road
Northampton
NN4 9FH
0800 240 4050
enquiries@mhstar.co.uk
MADE IN CHINA